




WARNING! Inspection, testing, and repair of electrical equipment should only be performed by a qualified service technician or electrician.

Optional Single-point Connection

Requires kit 06401-004-55-68, which consists of this guide and three jumper wires, 06145-003-52-03. The three jumper wires must be installed to connect each terminal (L1, L2, and L3) on one terminal block to the corresponding terminal (L1, L2, and L3) on the other terminal block as shown below.

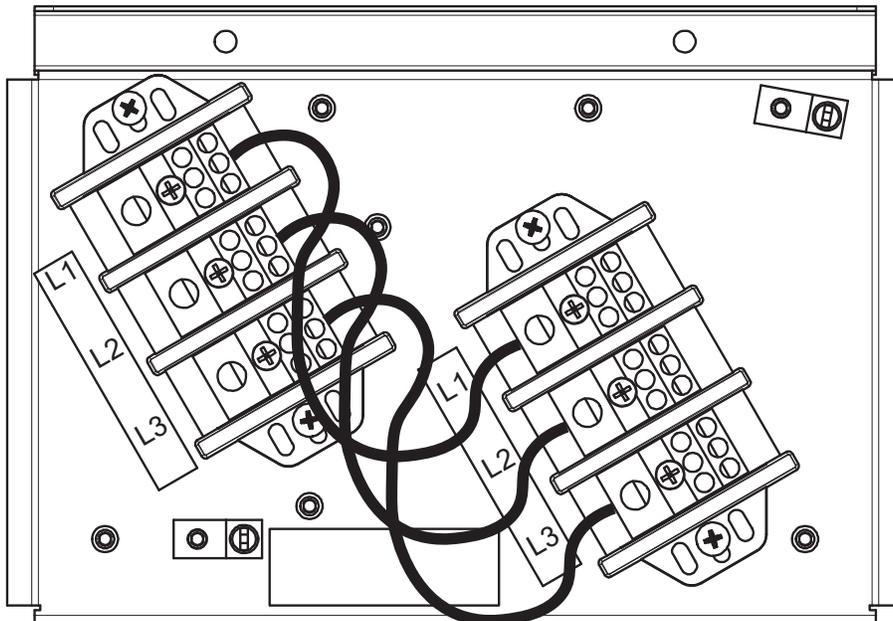

Standard Dual-point Connection

If the machine is already wired for the single-point option but the standard dual-point connection is needed, no kit is required. Simply remove the three jumper wires shown above.