


Wiring Diagram

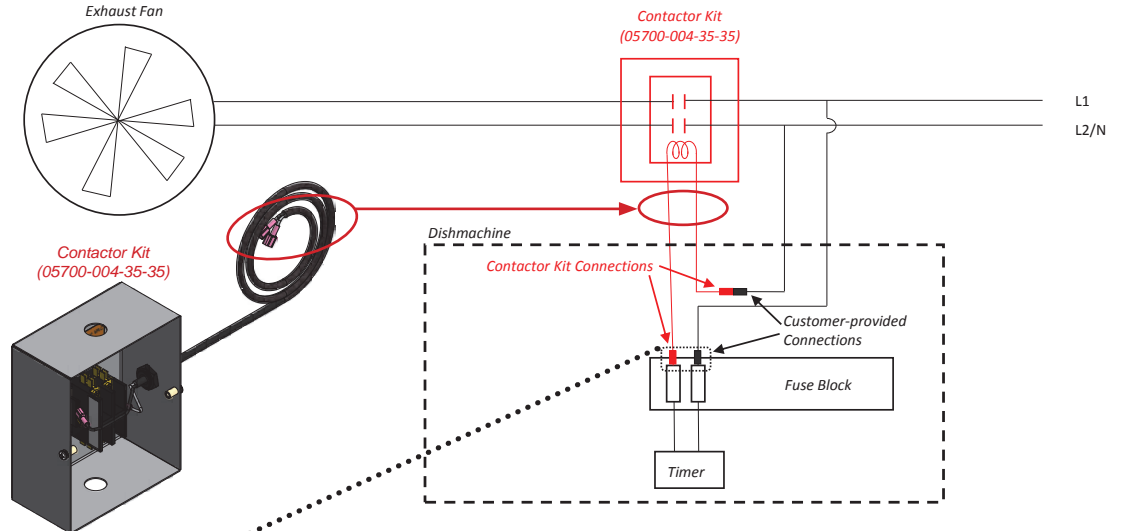


Do NOT connect Exhaust Fan directly to Fuse Block!



NOTICE

Orientation of Fuse Block and wires might differ between models. Wire colors correspond to function.

Fuse Block

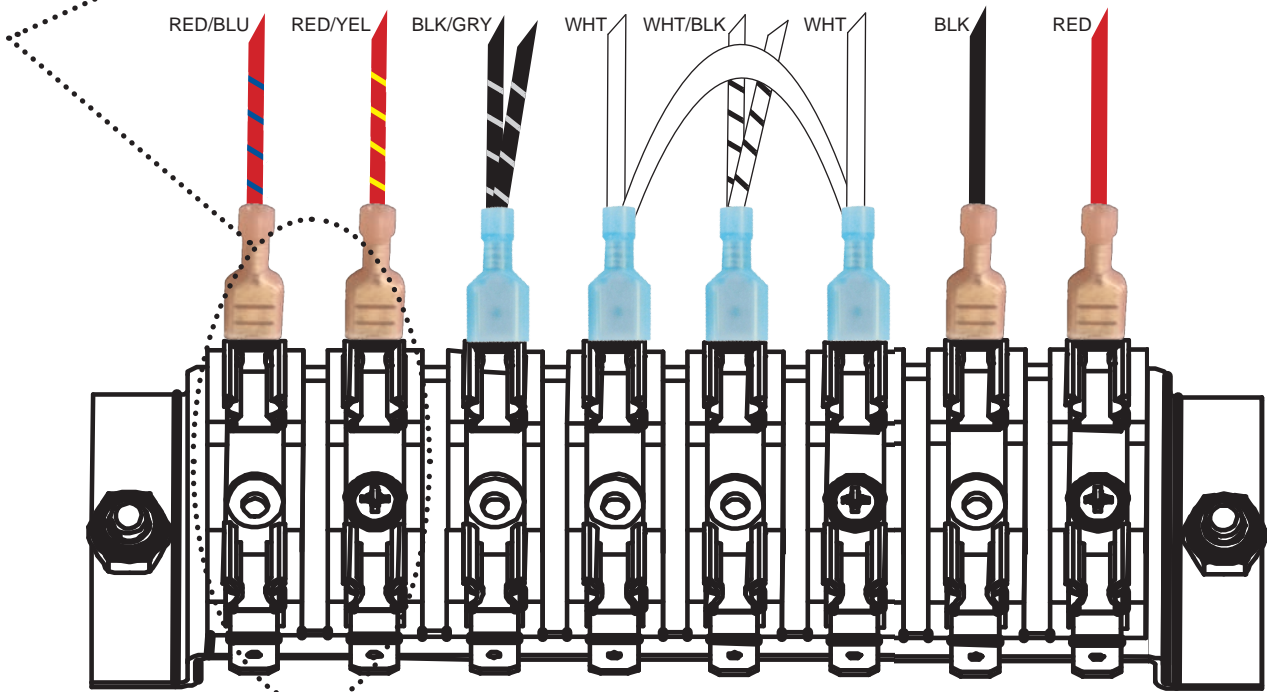

WARNING: DISCONNECT POWER TO MACHINE BEFORE SERVICING

EXHAUST FAN CONNECTION		CONSTANT VOLTAGE CONNECTION		RINSE-AID DISPENSER CONNECTION		DETERGENT DISPENSER CONNECTION	
MAXIMUM LOAD 1 AMP, 240/120 VAC		LIVE WHEN MACHINE POWER SWITCH IS ON		LIVE WHEN RINSE VALVE IS OPEN		LIVE WHEN WASH PUMP MOTOR IS ON	
INPUT L1 (EXTERNAL)	OUTPUT TO EXT. RELAY	FUSE: 200 mA SLOW-ACTING L1 OUT L2 OUT		FUSE: 200 mA SLOW-ACTING L1 OUT L2 OUT		FUSE: 3 AMP SLOW-ACTING L1 OUT L2 OUT	