



**CAUTION!** A Pressure Regulating Valve (PRV) has been shipped in a box inside the machine and must be installed on the machine's water inlet before connecting facility water to the machine. Plumbing components should only be installed by a qualified service technician or plumber.

#### HT-180 VER/HT-180 HH VER

Pressure Regulator Valve, 3/4"  
06685-011-58-22

