

### DYNASTAR

Warewashing Systems

### DYNASTAR FALSE PANEL - 05700-004-67-60



**WARNING:** This part should be installed only by qualified service personnel to reduce the risk of electric shock, serious injury, or fire. A plumbing permit and the services of a licensed plumber and electrician might be required in some areas.

Turn off the power supply and place the dishwasher disconnect (if applicable) in the off position. Lockout/tagout to prevent the power supply from being turned back on inadvertently. Shut-off incoming water.

**CAUTION:** Failure to install this part within the guidelines might adversely affect safety, performance, component life, and warranty coverage.

#### TOOLS REQUIRED


- 7/16 Nutdriver/Socket
- Phillips Screwdriver
- Metal-cutting Tool

#### PARTS INCLUDED

QTY	DESCRIPTION	PART NUMBER
1	False Panel, DynaStar	05700-004-67-60

#### FALSE PANEL INSTALLATION


The machine comes configured for a straightthrough operation, so the track assembly must be converted for a corner operation before installing. 1. Open door and remove front rack rail from the track assembly. Discard rack rail if installing false panel, keep the hardware, and proceed to Step 3. If not installing false panel, proceed to Step 2.

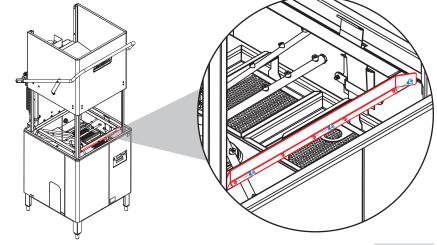

### **DYNASTAR**

# FALSE PANEL


For corners with wall surfaces that are susceptible to water damage, the optional false panel reduces the amount of water hitting the wall whenever the door is raised. 2. If not using false panel, install rack rail and hardware from Step 1 on the left-side of the track assembly and proceed to Step 6.

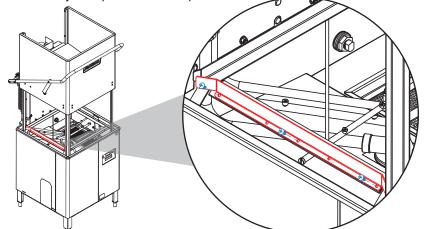


3. If using false panel, locate three studs at back-left of machine and remove nuts already in place with 7/16 nutdriver/socket.



The false panel MUST be installed before the machine is placed in the corner.

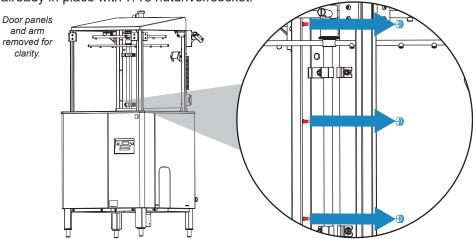


4. Orient false panel as shown below and secure to inside of left hood support using slot on side of panel.

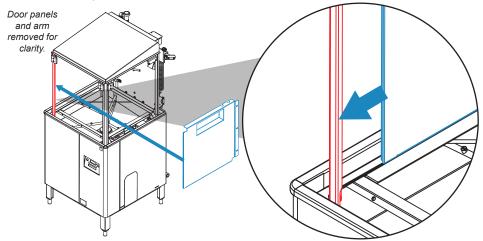

### **DYNASTAR**


# FALSE PANEL INSTALLATION

5. Place three openings on other side of panel over studs from Step 3. Replace nuts removed in Step 3 and tighten with 7/16 nutdriver/socket.

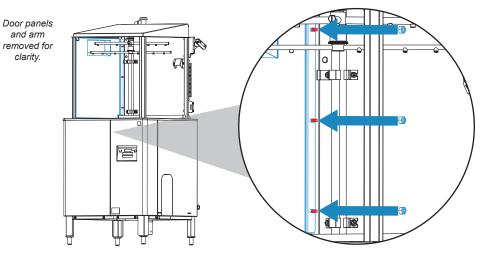

#### CORNER INSTALLATION

1. Locate the machine so control panel faces into the room and can be accessed by the operator.

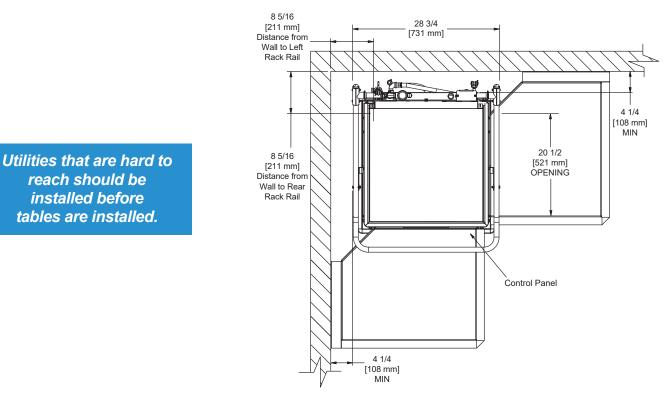


**DYNASTAR** 


#### CORNER INSTALLATION



WARNING! A notch must be cut in the front table backsplash. This requires extreme caution and the use of special tools. 2. Cut a notch in front table backsplash to allow door arm to lower completely.

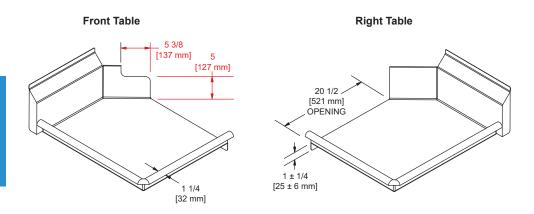


3. For proper loading and unloading of dish racks, locate the machine so dish tables and machine rack rails align.

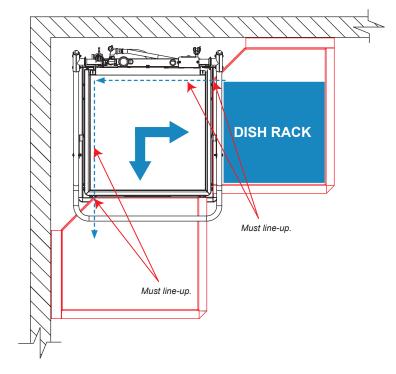


The dish tables are stationary, so the machine must be moved until the rack rails line-up with the proper locations on the dish tables. As a result, distances from the wall might vary.

4. Install dish tables so edge of each table fits over inner wall of the machine tank.

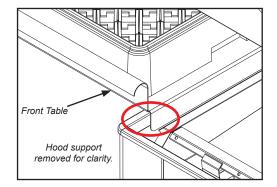

### CORNER INSTALLATION

5. Seal each dish table joint with a food-grade sealant to prevent leaks.

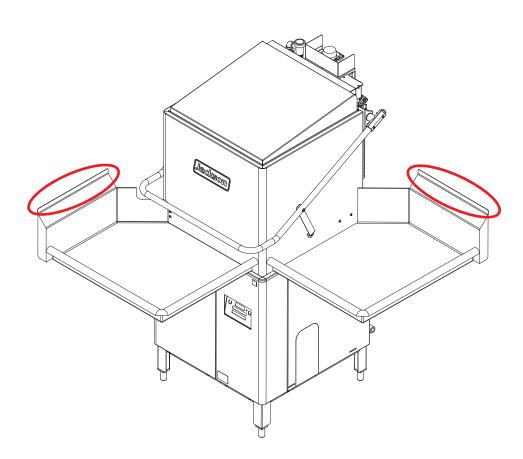

6. Connect remaining utilities according to manufacturer's instructions and all applicable codes and regulations.