

DISHSTAR/DELTA I/O MODULE KIT - 06401-004-76-15



WARNING: This part should be installed only by qualified service personnel to reduce the risk of electric shock, serious injury, or fire. A plumbing permit and the services of a licensed plumber and electrician might be required in some areas.

Turn off the power supply and place the dishwasher disconnect (if applicable) in the off position. Lockout/tagout to prevent the power supply from being turned back on inadvertently.

CAUTION: Failure to install this part within the guidelines might adversely affect safety, performance, component life, and warranty coverage.

TOOLS REQUIRED

- 7/16" Wrench
- Phillips Screwdriver


PARTS INCLUDED

QTY	DESCRIPTION	PART NUMBER
1	I/O Module	05945-004-36-34
1	Instructions, I/O Module Replacement	07610-004-34-16

I/O MODULE REPLACEMENT

1. Remove front panel using 7/16" wrench and set aside.

*7/16" wrench used
in this step.*

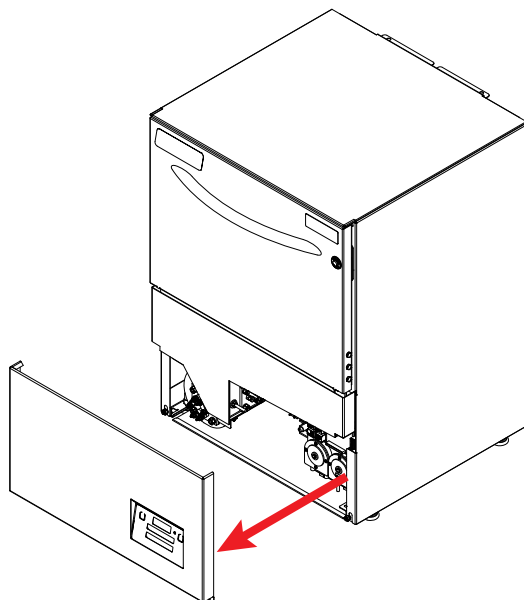

I/O MODULE REPLACEMENT

**DISHSTAR SERIES/
DELTA HT-E-SEER**

I/O MODULE REPLACEMENT

*Location of I/O module
on control panel varies
by model.*



CAUTION! Pictures
showing wires are
examples. Take note/
picture of actual wires on
machine for reference.


*Phillips screwdriver
used in this step.*

*I/O module from kit used
in this step.*

*7/16" wrench used
in this step.*

*To access programming,
the machine must be on
and not in cycle.*


2. Locate I/O module and take note/picture of how wires are connected.

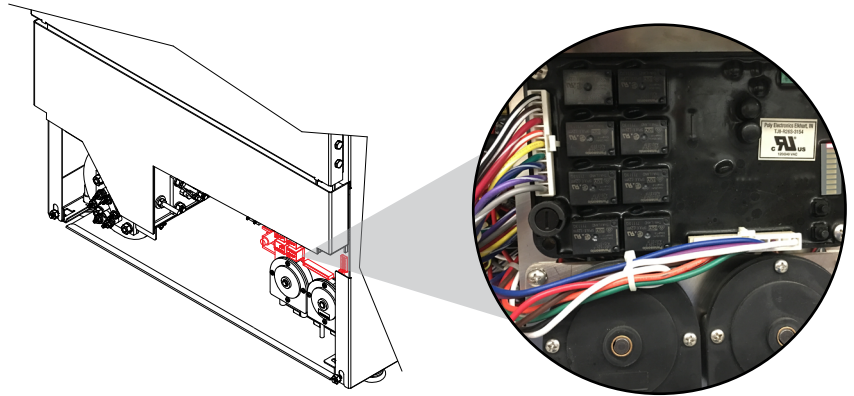


3. Remove wires.



4. Remove old I/O module using phillips screwdriver.

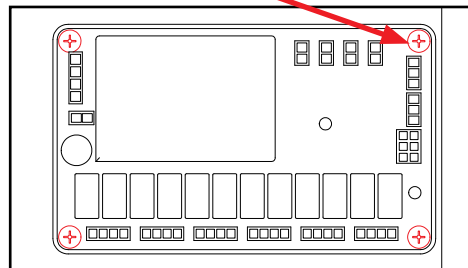


5. Place new I/O module from kit in the same place, oriented the same way, and secure using phillips screwdriver and hardware removed in last step.
6. Connect wires to new I/O module (reference note/picture taken in Step 2).
7. Replace front panel using 7/16" wrench.
8. Restore power to machine.
9. Turn machine on by pressing Power Button.

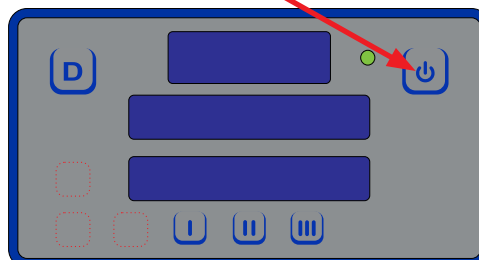

I/O MODULE REPLACEMENT

The programming buttons (Up-arrow, Down-arrow, and Select) are hidden on the display and are shown here as red outlines.

10. Press and hold I and III Buttons until “Program” starts flashing (2–3 seconds).

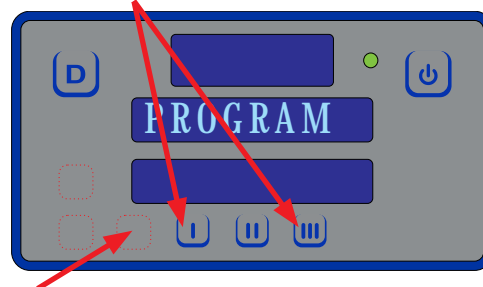


11. Press Select Button.

12. Use Up-arrow or Down-arrow Button to change the program number to “8.”



13. Press Select Button (“Program” will flash).

14. Press Delime Button to exit.

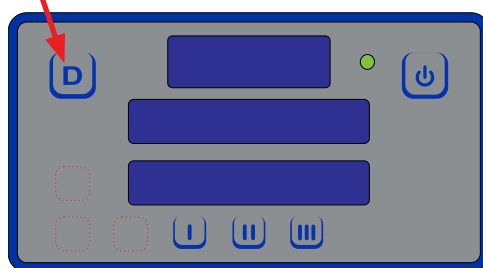

15. Machine is now ready for operation.