

INSTALLATION, OPERATION & SERVICE MANUAL

INSTALLATION MANUAL FOR EXPORT UNITS
SERVICE MANUAL FOR DOMESTIC UNITS

FOR JACKSON MODELS:

TEMPSTAR GPX

TEMPSTAR HH GPX



MANUFACTURERS WARRANTY

ONE YEAR LIMITED PARTS & LABOR WARRANTY

ALL NEW JACKSON DISHWASHERS ARE WARRANTED TO THE ORIGINAL PURCHASER TO BE FREE FROM DEFECTS IN MATERIAL OR WORKMANSHIP, UNDER NORMAL USE AND OPERATION FOR A PERIOD OF (1) ONE YEAR FROM DATE OF PURCHASE, BUT IN NO EVENT TO EXCEED (18) EIGHTEEN MONTHS FROM DATE OF SHIPMENT FROM THE FACTORY.

Jackson WWS agrees under this warranty to repair or replace, at its discretion, any original part which fails under normal use due to faulty material or workmanship during the warranty period, providing the equipment has been unaltered, and has been properly installed, maintained and operated in accordance with applicable factory instruction manual furnished with the machine and failure is reported to the authorized service agency within the warranty period. This includes the use of factory specified genuine replacement parts, purchased directly from a Jackson authorized parts distributor or service agency. Use of generic replacement parts may create a hazard and void warranty certification.

The labor to repair or replace such failed part will be paid by Jackson WWS, within the continental United States, Hawaii and Canada, during the warranty period provided a Jackson WWS authorized service agency, or those having prior authorization from the factory, performs the service. Any repair work by persons other than Jackson WWS authorized service agency is the sole responsibility of the customer. Labor coverage is limited to regular hourly rates; overtime premiums and emergency service charges will not be paid by Jackson WWS.

Accessory components not installed by the factory carry a (1) one year parts warranty only. Accessory components such as table limit switches, pressure regulators, pre-rinse units, etc. that are shipped with the unit and installed at the site are included. Labor to repair or replace these components is not covered by Jackson WWS.

This warranty is void if failure is a direct result from shipping, handling, fire, water, accident, misuse, acts of God, attempted repair by authorized persons, improper installation, if serial number has been removed or altered, or if unit is used for purpose other than originally intended.

TRAVEL LIMITATIONS

Jackson WWS limits warranty travel time to (2) two hours and mileage to (100) one hundred miles. Jackson WWS will not pay for travel time and mileage that exceeds this, or any fees such as those for air or boat travel without prior authorization.

WARRANTY REGISTRATION

To register your product go to www.jacksonwws.com or call 1-888-800-5672. Failure to register your product will void the warranty.

REPLACEMENT PARTS WARRANTY

Jackson replacement parts are warranted for a period of 90 days from date of installation or 180 days from the date of shipment from the factory, whichever occurs first.

PRODUCT CHANGES AND UPDATES

Jackson WWS reserves the right to make changes in design and specification of any equipment as engineering or necessity requires.

THIS IS THE ENTIRE AND ONLY WARRANTY OF JACKSON WWS. JACKSON'S LIABILITY ON ANY CLAIM OF ANY KIND, INCLUDING NEGLIGENCE, WITH RESPECT TO THE GOODS OR SERVICES COVERED HEREUNDER, SHALL IN NO CASE EXCEED THE PRICE OF THE GOODS OR SERVICES OR PART THEREOF WHICH GIVES RISE TO THE CLAIM.

THERE ARE NO WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING FOR FITNESS OR MERCHANTABILITY, THAT ARE NOT SET FORTH HEREIN, OR THAT EXTEND BEYOND THE DURATION HEREOF. UNDER NO CIRCUMSTANCES WILL JACKSON WWS BE LIABLE FOR ANY LOSS OR DAMAGE, DIRECT OR CONSEQUENTIAL, OR FOR THE DAMAGES IN THE NATURE OF PENALTIES, ARISING OUT OF THE USE OR INABILITY TO USE ANY OF ITS PRODUCTS.

ITEMS NOT COVERED

THIS WARRANTY DOES NOT COVER CLEANING OR DELIMING OF THE UNIT OR ANY COMPONENT SUCH AS, BUT NOT LIMITED TO, WASH ARMS, RINSE ARMS OR STRAINERS AT ANYTIME. NOR DOES IT COVER ADJUSTMENTS SUCH AS, BUT NOT LIMITED TO TIMER CAMS, THERMOSTATS OR DOORS, BEYOND 30 DAYS FROM THE DATE OF INSTALLATION. IN ADDITION, THE WARRANTY WILL ONLY COVER REPLACEMENT WEAR ITEMS SUCH AS CURTAINS, DRAIN BALLS, DOOR GUIDES OR GASKETS DURING THE FIRST 30 DAYS AFTER INSTALLATION. ALSO, NOT COVERED ARE CONDITIONS CAUSED BY THE USE OF INCORRECT (NON-COMMERICAL) GRADE DETERGENTS, INCORRECT WATER TEMPERATURE OR PRESSURE, OR HARD WATER CONDITIONS.

[illegible]



TEMPSTAR GPX

Gas-heated, hot water sanitizing, door-type dishmachine

TEMPSTAR HH GPX

Gas-heated, hot water sanitizing, door-type dishmachine with higher hood

Model:_____

Serial No.:_____

Installation Date:_____

Service Rep. Name:_____

Phone Number:_____

Jackson WWS, INC provides technical support for all of the dishmachines detailed in this manual. We strongly recommend that you refer to this manual before making a call to our technical support staff. Please have this manual with you when you call so that our staff can refer you, if necessary, to the proper page. Technical support is not available on holidays. Contact technical support from 8:00 a.m. to 5:00 p.m. (EST), Monday through Friday, toll free at 1-888-800-5672. Please remember that technical support is available for service personnel only.

TABLE OF CONTENTS

| <u>Section</u> | <u>Description</u> | <u>Page</u> |
|----------------|--|-------------|
| I. | SPECIFICATION INFORMATION | |
| | Specifications of the Tempstar GPX | 2 |
| | Specifications of the Tempstar HH GPX | 3 |
| | Dimensions for the Tempstar GPX | 4 |
| | Dimensions for the Tempstar HH GPX | 5 |
| | Table Dimensions | 6 |
| II. | INSTALLATION/OPERATION INSTRUCTIONS | |
| | Installation Instructions | 8 |
| | Electrical Installation Instructions | 9 |
| | Gas Booster Heater Connection | 10 |
| | Operation Instructions | 12 |
| III. | PREVENTATIVE MAINTENANCE | 15 |
| IV. | TROUBLESHOOTING | 17 |
| V. | SERVICE PROCEDURES | |
| | Rinse Solenoid Valve Repair Parts Kit | 20 |
| | Vacuum Breaker Repair Parts Kit | 22 |
| VI. | PARTS | |
| | Control Box Assembly, Tempstar GPX | 27 |
| | Control Box Assembly, Tempstar HH GPX | 29 |
| | Hood Assembly, Tempstar GPX | 31 |
| | Hood Assembly, Tempstar HH GPX | 32 |
| | Frame Assemblies | 33 |
| | Tub Assembly | 34 |
| | Cantilever Arm/Door Assembly, Tempstar GPX | 36 |
| | Cantilever Arm/Door Assembly, Tempstar HH GPX | 38 |
| | Inlet Plumbing Assemblies | 40 |
| | Rinse Header Plumbing Assembly | 41 |
| | Recirculating Plumbing Assembly | 42 |
| | 1/2" Solenoid Valve/Vacuum Breaker Repair Kits | 43 |
| | Wash & Rinse Assemblies, Tempstar GPX | 44 |
| | Wash & Rinse Assemblies, Tempstar HH GPX | 46 |
| | Steam Coil Assembly | 48 |
| | Exhaust Fan Control Option/Safety Door Interlock Option | 49 |
| | Tempstar GPX False Panel Installation | 50 |
| | Tempstar HH GPX False Panel Installation | 51 |
| | Drain Quench Option | 52 |
| VII. | SCHEMATICS | |
| | 115 Volt, 50/60 Hertz, Single Phase Tempstar GPX | 54 |
| | 208 - 230 Volt, 50/60 Hertz, Single & Three Phase Tempstar GPX | 55 |
| | 115 Volt, 50/60 Hertz, Single Phase Tempstar HH GPX | 56 |
| | 208 -230 Volt, 50/60 Hertz, Single & Three Phase Tempstar HH GPX | 57 |
| | Exhaust Fan Control Option/Safety Door Interlock Option | 58 |

SECTION 1: SPECIFICATION INFORMATION

SECTION 1: SPECIFICATION INFORMATION

SPECIFICATIONS OF THE TEMPSTAR GPX

PERFORMANCE/CAPABILITIES

OPERATING CAPACITY (RACKS/HOUR)

| | |
|------------------|------|
| RACKS PER HOUR | 57 |
| DISHES PER HOUR | 1425 |
| GLASSES PER HOUR | 1425 |

OPERATING CYCLE (SECONDS)

| | |
|------------------|----|
| WASH TIME | 45 |
| RINSE TIME | 11 |
| DWELL TIME | 2 |
| TOTAL CYCLE TIME | 60 |

TANK CAPACITY (GALLONS)

| | |
|---------------------|-----|
| WASH TANK (MINIMUM) | 8.0 |
|---------------------|-----|

WASH PUMP CAPACITY

| | |
|--------------------|-----|
| GALLONS PER MINUTE | 150 |
|--------------------|-----|

ELECTRICAL REQUIREMENTS

| | |
|----------------------------|-----|
| WASH PUMP MOTOR HP | 3/4 |
| RECIRCULATOR PUMP MOTOR HP | 1/8 |

NOTE: Typical Electrical Circuit is based upon (1) 125% of the full amperage load of the machine and (2) typical fixed-trip circuit breaker sizes as listed in the NEC 2002 Edition. Local codes may require more stringent protection than what is displayed here. Always verify with your electrical service contractor that your circuit protection is adequate and meets all applicable national and local codes. These numbers are provided in this manual simply for reference and may change without notice at any given time.

| <u>VOLTS</u> | <u>PH</u> | <u>HZ</u> | <u>RINSE HEATER RATINGS</u> | <u>TOTAL AMPS</u> | <u>TYPICAL ELECTRICAL CIRCUIT</u> |
|--------------|-----------|-----------|-------------------------------------|-----------------------|---|
| 110 - 120 | 1 | 60 | N/A | 14 | 20 AMP |
| 208 - 240 | 1 | 60 | N/A | 7 | 15 AMP |

WATER REQUIREMENTS

| <u>INLET TEMPERATURE</u> | <u>BOOSTER OUTPUT (BTU)</u> |
|----------------------------------|-----------------------------|
| 60 -110°F | 100,000 |
| 110 -140°F | 60,000 |
| WASH TEMPERATURE (MINIMUM) | 150°F |
| RINSE TEMPERATURE (MINIMUM) | 180°F |
| GALLONS PER HOUR | 52.2 |
| WATER LINE SIZE I.P.S. (Minimum) | 1/2" |
| DRAIN LINE SIZE I.P.S. (Minimum) | 1-1/2" |
| FLOW PRESSURE P.S.I. | 20± 5 |

NOTE: Always refer to the machine data plate for specific electrical and water requirements. The material provided on this page is for reference only and may be subject to change without notice.

SECTION 1: SPECIFICATION INFORMATION

SPECIFICATIONS OF THE TEMPSTAR HH GPX

PERFORMANCE/CAPABILITIES

OPERATING CAPACITY (RACKS/HOUR)

| | |
|------------------|------|
| RACKS PER HOUR | 53 |
| DISHES PER HOUR | 1325 |
| GLASSES PER HOUR | 1325 |

OPERATING CYCLE (SECONDS)

SELECTION (A)

| | |
|------------------|----|
| WASH TIME | 45 |
| RINSE TIME | 15 |
| TOTAL CYCLE TIME | 60 |

SELECTION (B)

| | |
|------------------|-----|
| WASH TIME | 103 |
| RINSE TIME | 15 |
| DWELL TIME | 2 |
| TOTAL CYCLE TIME | 120 |

SELECTION (C)

| | |
|------------------|-----|
| WASH TIME | 163 |
| RINSE TIME | 15 |
| DWELL TIME | 2 |
| TOTAL CYCLE TIME | 180 |

SELECTION (D)

| | |
|------------------|-----|
| WASH TIME | 283 |
| RINSE TIME | 15 |
| DWELL TIME | 2 |
| TOTAL CYCLE TIME | 300 |

TANK CAPACITY (GALLONS)

| | |
|---------------------|-----|
| WASH TANK (MINIMUM) | 8.0 |
|---------------------|-----|

WASH PUMP CAPACITY

| | |
|--------------------|-----|
| GALLONS PER MINUTE | 150 |
|--------------------|-----|

ELECTRICAL REQUIREMENTS

| | |
|----------------------------|-----|
| WASH PUMP MOTOR HP | 2.0 |
| RECIRCULATOR PUMP MOTOR HP | 1/8 |

NOTE: Typical Electrical Circuit is based upon (1) 125% of the full amperage load of the machine and (2) typical fixed-trip circuit breaker sizes as listed in the NEC 2002 Edition. Local codes may require more stringent protection than what is displayed here. Always verify with your electrical service contractor that your circuit protection is adequate and meets all applicable national and local codes. These numbers are provided in this manual simply for reference and may change without notice at any given time.

| <u>VOLTS</u> | <u>PH</u> | <u>HZ</u> | <u>RINSE HEATER RATINGS</u> | <u>TOTAL AMPS</u> | <u>TYPICAL ELECTRICAL CIRCUIT</u> |
|--------------|-----------|-----------|-------------------------------------|-----------------------|---|
| 110 - 120 | 1 | 60 | N/A | 24 | 20 AMP |
| 208 - 240 | 1 | 60 | N/A | 7 | 15 AMP |

WATER REQUIREMENTS

| <u>INLET TEMPERATURE</u> | <u>BOOSTER OUTPUT (BTU)</u> |
|----------------------------------|-----------------------------|
| LESS THAN 60°F | 200,000 |
| 60 -110°F | 100,000 |
| 140°F | 60,000 |
| WASH TEMPERATURE (MINIMUM) | 150°F |
| RINSE TEMPERATURE (MINIMUM) | 180°F |
| GALLONS PER HOUR | 72.0 |
| WATER LINE SIZE I.P.S. (MINIMUM) | 1/2" |
| DRAIN LINE SIZE I.P.S. (MINIMUM) | 1-1/2" |
| FLOW PRESSURE P.S.I. | 20±5 |

NOTE: Always refer to the machine data plate for specific electrical and water requirements. The material provided on this page is for reference only and may be subject to change without notice.



SECTION 1: SPECIFICATION INFORMATION

DIMENSIONS FOR TEMPSTAR GPX



A - DRAIN 1 1/2" NPT
B - WATER INLET 1/2" NPT
C - ELECTRICAL CONNECTION

LEGEND

D - STANDARD WALL CLEARANCE WITH DISHTABLE 4"
E - OUTLET TO BOOSTER HEATER 3/4" NPT
F - INLET FROM BOOSTER HEATER 3/4" NPT

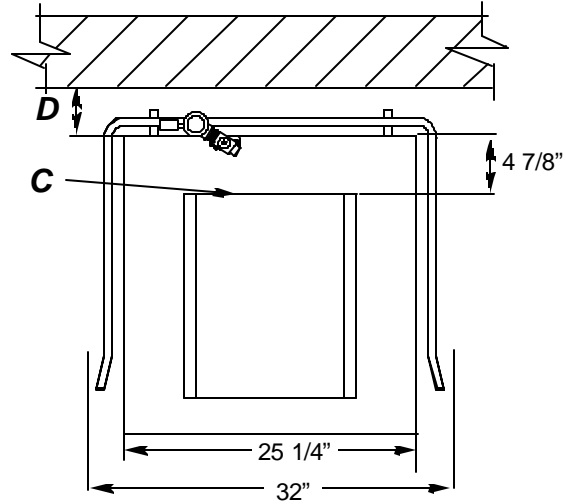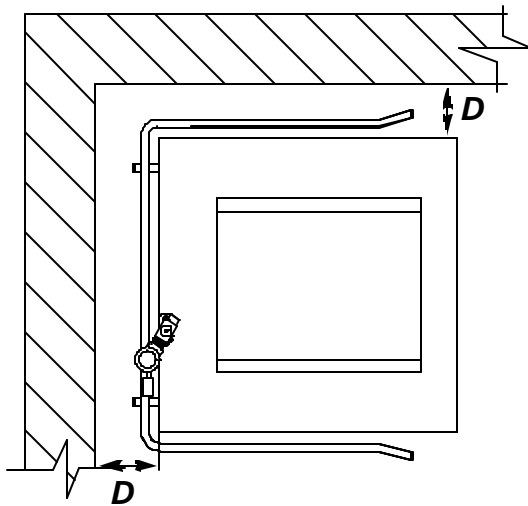

ALL DIMENSIONS ARE +/- 1/2"
 DUE TO ADJUSTABLE FEET.

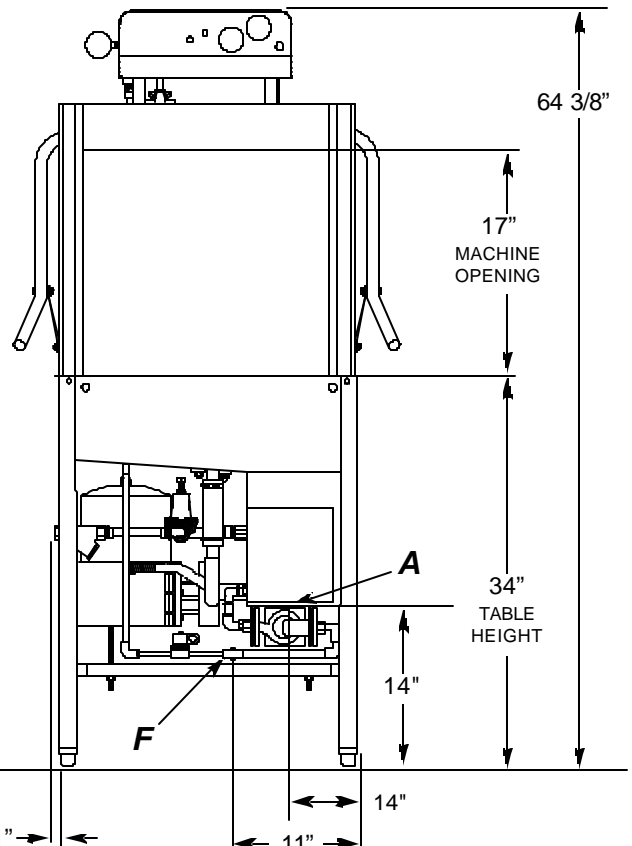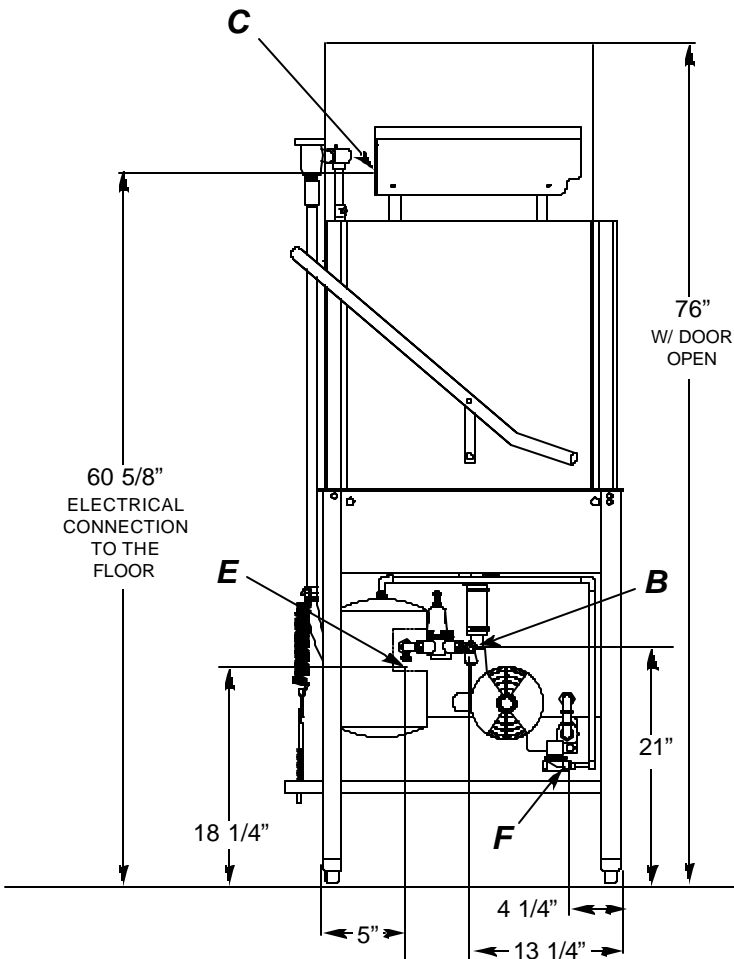

SECTION 1: SPECIFICATION INFORMATION

DIMENSIONS FOR TEMPSTAR HH GPX

LEGEND:

A - DRAIN 1 1/2" NPT

B - WATER INLET 1/2" NPT



C - ELECTRICAL CONNECTION

D - STANDARD WALL CLEARANCE WITH DISHTABLE 4"

E - OUTLET TO BOOSTER HEATER 3/4" N.P.T.

F - INLET FROM BOOSTER HEATER 3/4" N.P.T.

ALL DIMENSIONS ARE +/- 1/2" DUE TO ADJUSTABLE FEET.

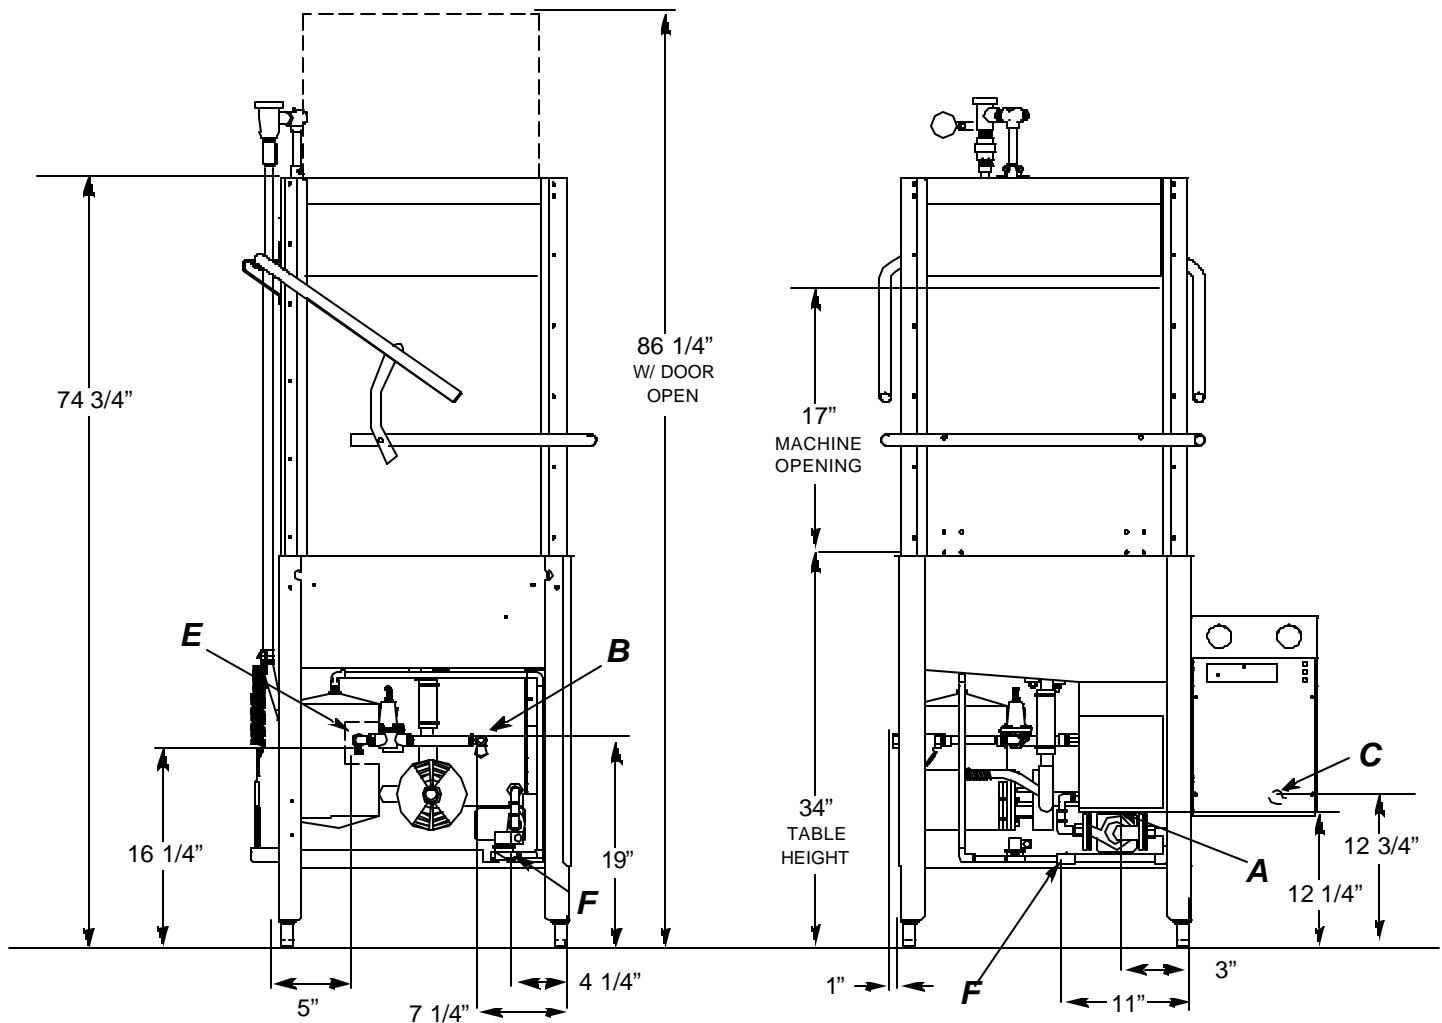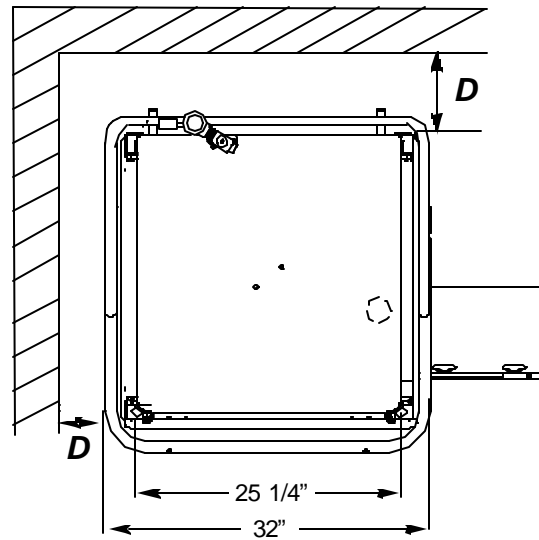

SECTION 1: SPECIFICATION INFORMATION

TABLE DIMENSIONS

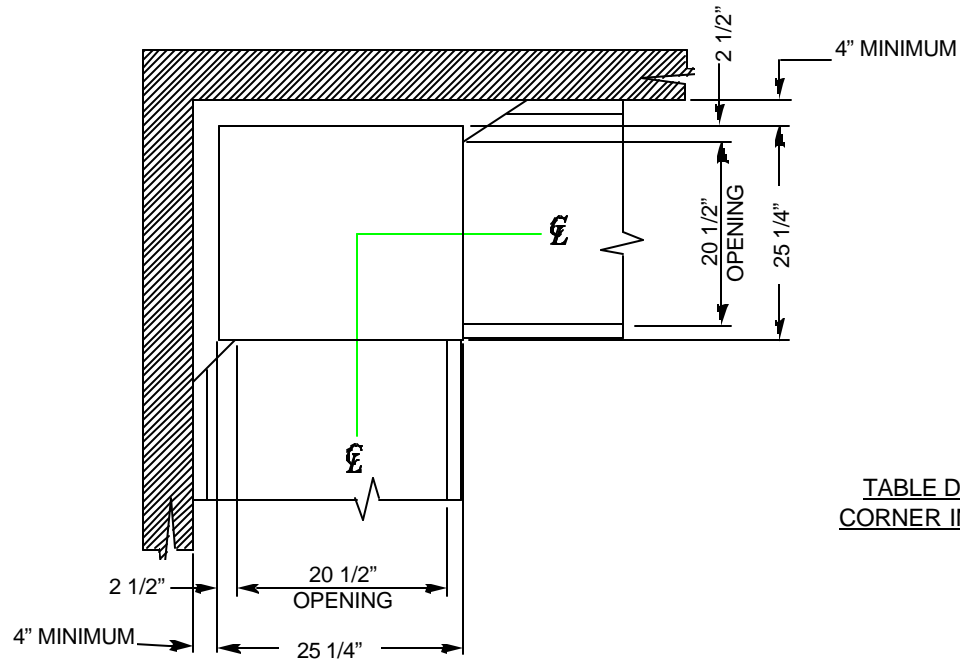


TABLE DIMENSIONS
CORNER INSTALLATION

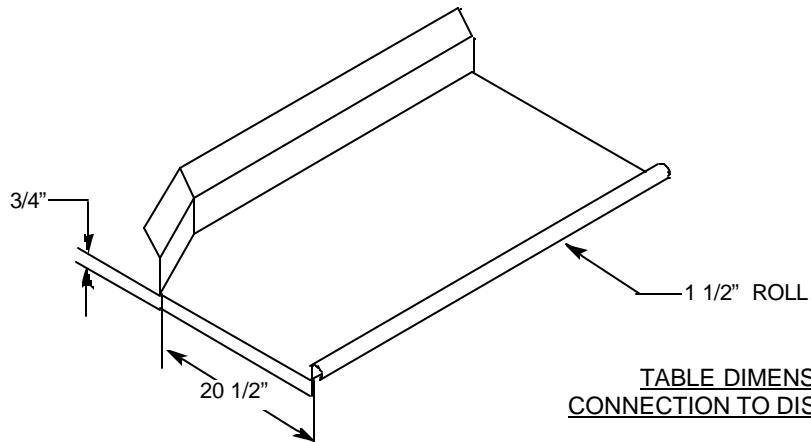


TABLE DIMENSIONS
CONNECTION TO DISH MACHINE

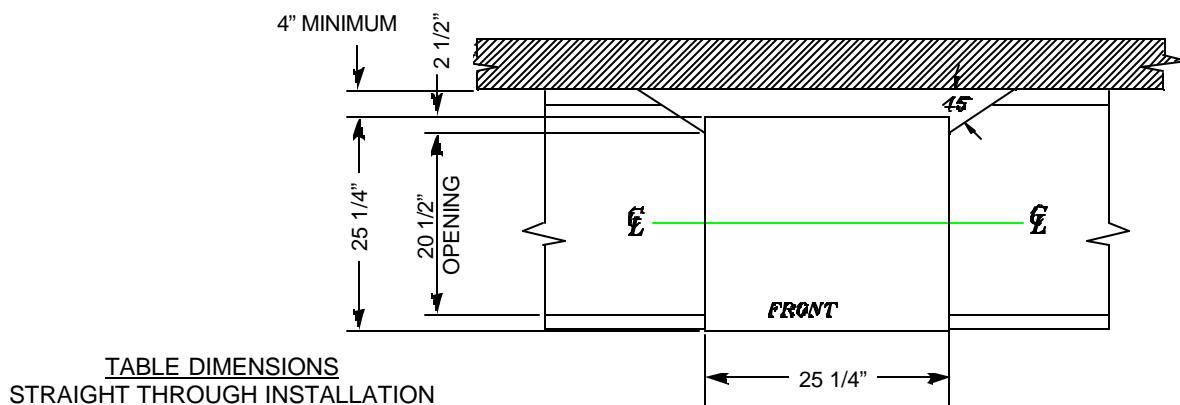


TABLE DIMENSIONS
STRAIGHT THROUGH INSTALLATION

SECTION 2: INSTALLATION/OPERATION INSTRUCTIONS

SECTION 2: INSTALLATION/OPERATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS


VISUAL INSPECTION: Before installing the unit, check the container and machine for damage. A damaged container is an indicator that there may be some damage to the machine. If there is damage to both the container and machine, do not throw away the container. The dishmachine has been inspected and packed at the factory and is expected to arrive to you in new, undamaged condition. However, rough handling by carriers or others may result in there being damage to the unit while in transit. If such a situation occurs, do not return the unit to Jackson; instead, contact the carrier and ask them to send a representative to the site to inspect the damage to the unit and to complete an inspection report. You must contact the carrier within 48 hours of receiving the machine. Also, contact the dealer through which you purchased the unit.

UNPACKING THE DISHMACHINE: Once the machine has been removed from the container, ensure that there are no missing parts from the machine. This may not be obvious at first. If it is discovered that an item is missing, contact Jackson immediately to have the missing item shipped to you.

LEVEL THE DISHMACHINE: The dishmachine is designed to operate while being level. This is important to prevent any damage to the machine during operation and to ensure the best results when washing ware. The unit comes with adjustable bullet feet, which can be turned using a pair of channel locks or by hand if the unit can be raised safely. Ensure that the unit is level from side to side and from front to back before making any connections.

PLUMBING THE DISHMACHINE: All plumbing connections must comply with all applicable local, state, and national plumbing codes. The plumber is responsible for ensuring that the incoming water line is thoroughly flushed prior to connecting it to any component of the dishmachine. It is necessary to remove all foreign debris from the water line that may potentially get trapped in the valves or cause an obstruction. Any valves that are fouled as a result of foreign matter left in the water line, and any expenses resulting from this fouling, are not the responsibility of the manufacturer.

CONNECTING THE DRAIN LINE: The drain for the Tempstar models covered in this manual are gravity discharge drains. All piping from the 1-1/2" FNPT connection on the wash tank must be pitched (1/4" per foot) to the floor or sink drain. All piping from the machine to the drain must be a minimum 1-1/2" NPT and shall not be reduced. There must also be an air gap between the machine drain line and the floor sink or drain. If a grease trap is required by code, it should have a flow capacity of 5 gallons per minute.

 **NOTE:** This equipment is not recommend for use with deionized water or other aggressive fluids. Use of deionized water or other aggressive fluids will result in corrosion and failure of materials and components. Use of deionized water or other aggressive fluids will void the manufacturer's warranty.

WATER SUPPLY CONNECTION: Ensure that you have read the section entitled "PLUMBING THE DISHMACHINE" above before proceeding. Install the water supply line (1/2" pipe size minimum) to the dishmachine line strainer using copper pipe. It is recommended that a water shut-off valve be installed in the water line between the main supply and the machine to allow access for service. The water supply line is to be capable of 25 PSI "flow" pressure at the recommended temperature indicated on the data plate. For the Tempstar GPX, the line should also have the capacity to supply 52.2 GPH @ 25 PSI "flow" pressure.

For the Tempstar HH GPX, the line should also have the capacity to supply 72 GPH @ 25 PSI "flow" pressure.

In areas where the water pressure fluctuates or is greater than the recommended pressure, it is suggested that a water pressure regulator be installed. The Tempstar models covered in this manual come with water pressure regulators as standard equipment. Please notify Jackson immediately if this component is not present on your machine.

Do not confuse static pressure with flow pressure. Static pressure is the line pressure in a "no flow" condition (all valves and services are closed). Flow pressure is the pressure in the fill line when the fill valve is opened during the cycle.

It is also recommended that a shock absorber (not supplied with the Tempstar models) be installed in the incoming water line. This prevents line hammer (hydraulic shock), induced by the solenoid valve as it operates, from causing damage to the equipment.

WATER CONNECTION TO THE GAS BOOSTER HEATER: Refer to page entitled "GAS BOOSTER HEATER CONNECTIONS".

SECTION 2: INSTALLATION/OPERATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS

GAS BOOSTER HEATER ELECTRICAL INSTALLATION: The gas booster heater must have a separate electric hookup than that supplied to the dishmachine. Please refer to the manual supplied with your gas booster heater.

GAS CONNECTION TO THE BOOSTER HEATER: Please refer to the manual supplied with your gas booster heater.

VENTILATION OF THE GAS BOOSTER HEATER: Please refer to the manual supplied with your gas booster heater.

PLUMBING CHECK: Slowly turn on the water supply to the machine after the incoming fill line and the drain line have been installed. Check for any leaks and repair as required. All leaks must be repaired prior to placing the machine in operation.

ELECTRICAL POWER CONNECTION: Electrical and grounding connections must comply with the applicable portions of the National Electrical Code ANSI/NFPA 70 (latest edition) and/or other electrical codes.

Disconnect electrical power supply and place a tag at the disconnect switch to indicate that you are working on the circuit.

The dishmachine data plate is located on the right side and to the front of the machine. Refer to the data plate for machine operating requirements, machine voltage, total amperage load and serial number.

To install the incoming power lines, remove the control box cover. Install 3/4" conduit into the pre-punched holes in the back of the control box. Route power wires and connect to power block and grounding lug. Install the service wires (L1 and L2) to the appropriate terminals as they are marked on the terminal block. Install the grounding wire into the lug provided. and tighten the connections. It is recommended that "DE-OX" or another similar anti-oxidation agent be used on all power connections.

VOLTAGE CHECK: Ensure that the power switch is in the OFF position and apply power to the dishmachine. Check the incoming power at the terminal block and ensure it corresponds to the voltage listed on the data plate. If not, contact a qualified service agency to examine the problem. Do not run the dishmachine if the voltage is too high or too low. Shut off the service breaker and mark it as being for the dishmachine. Advise all proper personnel of any problems and of the location of the service breaker. Replace the control box cover and tighten down the screws.

SECTION 2: INSTALLATION/OPERATION INSTRUCTIONS

GAS BOOSTER HEATER CONNECTIONS

⚠ WARNING ⚠

ENSURE THAT THERE IS NO ELECTRICAL POWER APPLIED TO THE MACHINE WHEN MAKING GAS CONNECTION.

CHECK ALL GAS CONNECTIONS FOR LEAKS PRIOR TO APPLYING POWER.

**THE GASES USED FOR COMBUSTION IN THIS DISH MACHINE ARE HIGHLY FLAMMABLE.
DO NOT SMOKE AROUND THIS MACHINE.**

ENSURE THAT THE AREA WHERE THIS MACHINE IS TO BE INSTALLED IS WELL-VENTILATED TO PREVENT THE BUILD-UP OF COMBUSTIBLE GASES.


ENSURE THAT ALL LOCAL HEALTH, FIRE, AND BUILDING CODES ARE BEING ADHERED TO WHEN INSTALLING THIS MACHINE. VERIFY WITH LOCAL OFFICIALS IF THERE ARE ANY QUESTIONS.

INSTALL A SHUT-OFF VALVE AT THE GAS SOURCE.

Due to the fact that each customer may have different requirements for the orientation of the gas booster heater relative to the main dishmachine, the hose lengths that connect the two units must be customized during each installation.


To prevent incorrect measurements of the hose, it is recommended to place one barbed hose fitting into the end of the uncut length of hose coil and attach that fitting to an appropriate connection. Run the hose to the corresponding connection on the other unit before cutting the hose. Use a barbed hose fitting that is screwed into the second connection on the other unit before cutting the hose. Use a barbed hose fitting that is screwed onto the second connection to gauge the correct distance. Ensure a smooth "flow" of hose without any sharp turns or kinks.

To aid in pushing the barbed hose fitting into the hose, place the fitting on a hard surface (i.e. the floor) with the barbed end of the fitting pointing upward and push the hose down onto the fitting. A small amount of lubricant (i.e. petroleum jelly) may aid in this process.

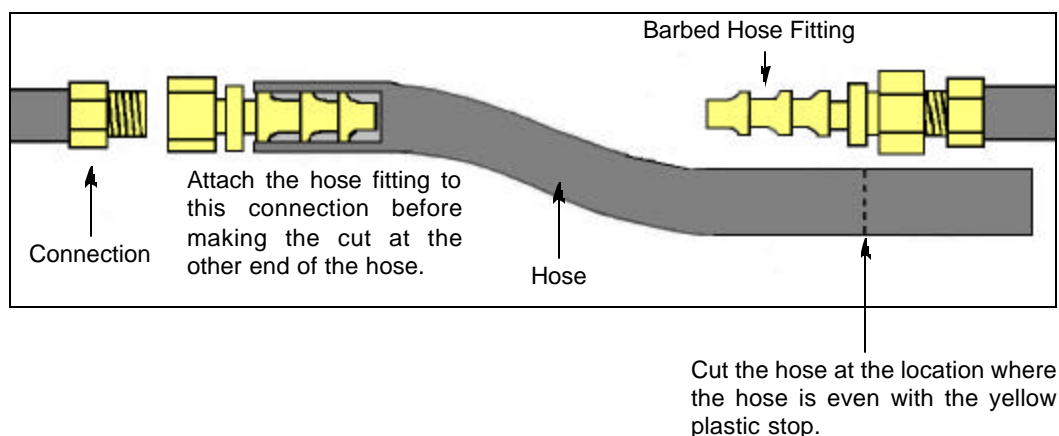

SECTION 2: INSTALLATION/OPERATION INSTRUCTIONS

GAS BOOSTER HEATER CONNECTIONS (CONTINUED)

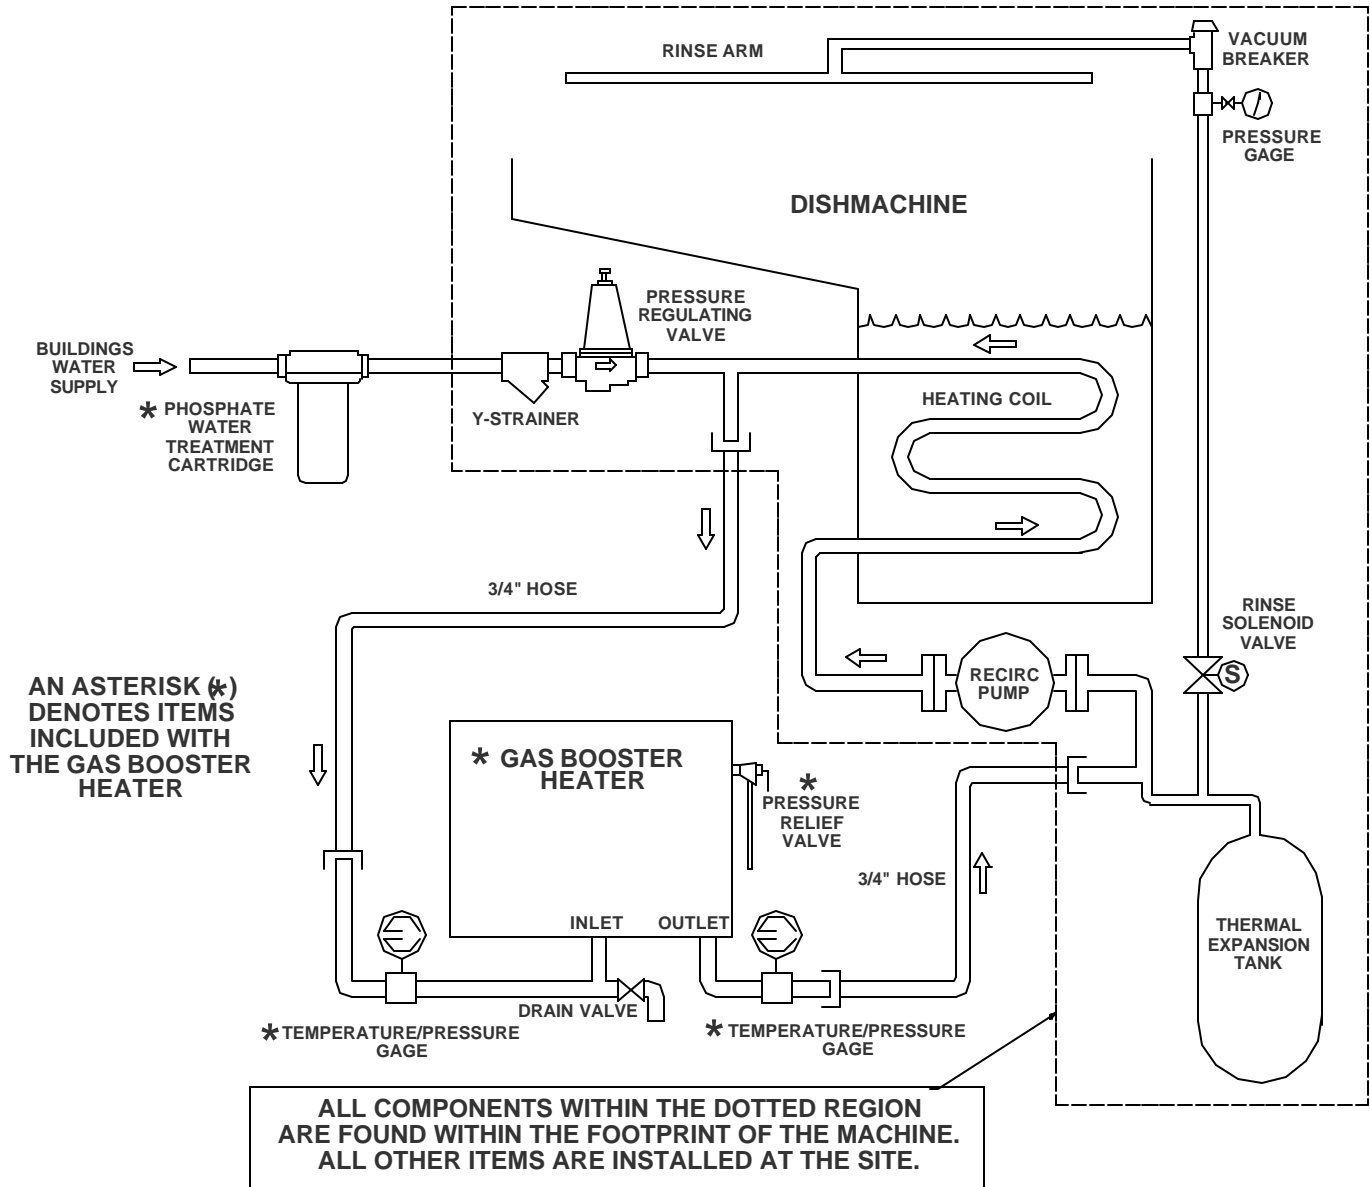

SECTION 2: INSTALLATION/OPERATION INSTRUCTIONS

OPERATION INSTRUCTIONS

PREPARATION: Before proceeding with the start-up of the unit, verify the following:

1. The pan strainer and pump suction strainer are in place and are clean.
2. The overflow tube and o-ring are installed.
3. That the wash and rinse arms are screwed securely into place and that their endcaps are tight. The wash and rinse arms should rotate freely.

GAS BOOSTER HEATER OPERATION: For all start up and operation information, please refer to the manual supplied with your gas booster heater.

POWER UP: To energize the unit, turn on the power at the service breaker. The voltage should have been previously verified as being correct. If not, the voltage will have to be verified.

FILLING THE WASH TUB (TEMPSTAR GPX): Ensure that the delime switch is in the NORMAL position, and place the power switch into the ON position. The Tempstar model should fill automatically and shut off when the appropriate level is reached (just below the pan strainer). Verify that the drain stopper is preventing the wash tub water from leaking excessively. There may be some slight leakage from the drain hole. Verify that there are no other leaks on the unit before proceeding any further. The wash tub must be completely filled before operating the wash pump to prevent damage to the component. Once the wash tub is filled, the unit is ready for operation.

FILLING THE WASH TUB (TEMPSTAR HH GPX): For the initial fill, ensure that the cycle selection switch is in the "AUTO" (automatic) position, and place the power switch in the "ON" position. The unit will fill automatically and run through a rinse cycle. Open the doors and verify that the water level is correct. Hereafter, the water level is controlled by the overflow tube. Verify that the drain stopper is preventing the wash tub water from draining excessively. There may be some slight leakage from the drain hole. Verify that there are no other leaks on the unit before proceeding any further. The wash tub must be completely filled before operating the wash pump to prevent damage to the component. Once the wash tub is filled, the unit is ready for operation.

WARE PREPARATION: Proper preparation of ware will help ensure good results and less re-washes. If not done properly, ware may not come out clean and the efficiency of the dishmachine will be reduced. It is important to remember that a dishmachine is not a garbage disposal and that simply throwing unscrapped dishes into the machine simply defeats the purpose altogether of washing the ware. Scraps should be removed from ware prior to being loaded into a rack. Pre-rinsing and pre-soaking are good ideas, especially for silverware and casserole dishes. Place cups and glasses upside down in racks so that they do not hold water during the cycle. The dishmachine is meant not only to clean, but to sanitize as well, to destroy all of the bacteria that could be harmful to human beings. In order to do this, ware must be properly prepared prior to being placed in the machine.

DAILY MACHINE PREPARATION: Refer to the section entitled "PREPARATION" at the top of this page and follow the instructions there. Afterwards, check that all of the chemical levels are correct and/or that there is plenty of detergent available for the expected workload.

WARM-UP CYCLES: For a typical daily start-up, it may be necessary to run the machine through 3 cycles to ensure that all of the cold water is out of the system and to verify that the unit is operating correctly. To cycle the machine, ensure that the power is on and that the tub has filled to the correct level. Lift the doors and the cycle light will illuminate. When the light goes out, close the doors, the unit will start, run through the cycle, and shut off automatically. Repeat this two more times. The unit should now be ready to proceed with the washing of ware.

WASHING A RACK OF WARE: To wash a rack, open the doors completely (being careful for hot water that may drip from the doors) and slide the rack into the unit. Close the doors and the unit will start automatically. Once the cycle is completed, open the door (again watching for the dripping hot water) and remove the rack of clean ware. Replace with a rack of soiled ware and close the doors. The process will then repeat itself.

SECTION 2: INSTALLATION/OPERATION INSTRUCTIONS

OPERATION INSTRUCTIONS (CONTINUED)

OPERATIONAL INSPECTION: Based upon usage, the pan strainer may become clogged with soil and debris as the workday progresses. Operators should regularly inspect the pan strainer to ensure it has not become clogged. If the strainer does, it will reduce the washing capability of the machine. Instruct operators to clean out the pan strainer at regular intervals or as required by work load.

SHUTDOWN AND CLEANING: At the end of the workday, close the doors. When the unit completes the cycle, turn the power switch to the OFF position and open the doors. Remove and clean the pan strainer. Remove the drain stopper from the tub and allow the tub to drain (NOTE: the wash tank water will be hot so caution is advised). Once the wash tub is drained, remove the pump suction strainer. Remove soil and debris from the strainer and set to the side. Unscrew the wash and rinse arms from their manifolds. Remove the endcaps and flush the arms with water. Use a brush to clean out the inside of the arms. If the nozzles appear to be clogged, use a toothpick to remove the obstruction. Wipe the inside of the unit out, removing all soil and scraps. Reassemble the wash and rinse arms and replace them in the unit. The arms only need to be hand tight, do not use tools to tighten them down. Reinstall the drain stopper and strainers and close the doors.

WATER CONSUMPTION ISSUES AND EFFICIENCY: The Tempstar HH GPX provides you, the customer, with the ability to control the hourly rack capacity of the machine. Extending the wash cycle to wash severely soiled ware, such as mixing bowls, does not increase the machine's water consumption. However, selecting a longer time cycle does lower the amount of dishes the machine will be able to wash per hour. It is important for operators to select the correct wash cycle depending on the amount of washing required. Not every rack of dishes requires the machine to be set on the longest wash cycle!

Using good prescrapping procedures and observing the results of individual racks of ware, operators will soon gain the experience and knowledge required to ensure that the Tempstar HH GPX operates at peak efficiency for your needs.

Water hardness and detergent usage will also effect the results of the Tempstar HH GPX. This manual provides a page entitled "Detergent Control" for your reference. It is recommended that owners and operators take the time to carefully review this section in order to ensure that everything is done to make sure the Tempstar HH GPX operates at peak performance!

SECTION 3: PREVENTATIVE MAINTENANCE

SECTION 3: PREVENTATIVE MAINTENANCE

PREVENTATIVE MAINTENANCE

The dishmachines covered in this manual are designed to operate with a minimum of interaction with the operator. However, this does not mean that some items will not wear out in time. Jackson highly recommends that any maintenance and repairs not specifically discussed in this manual should be performed by **QUALIFIED SERVICE PERSONNEL ONLY**. Performing maintenance on your dishmachine may void your warranty if it is still in effect, so if you have a question or concern, do not hesitate to contact one of the **QUALIFIED SERVICE AGENCIES** listed in the back of this manual.

There are many things that operators can do to prevent catastrophic damage to the dishmachine. One of the major causes of component failure has to do with prescrapping procedures. A dishmachine is not a garbage disposal; any large pieces of material that are put into the machine shall remain in the machine until they are either broken up (after spreading out on your ware!) or physically removed. Strainers are installed to help catch debris, but they do no good if they are clogged. Have operators regularly inspect the pan strainers to ensure (1) that they are free of soil and debris and (2) they are laying flat in the tub.

When cleaning out strainers, do NOT beat them on waste cans. The strainers are made of metal and can be forgiving; but once severe damage is done, it is next to impossible for the strainer to work in the way it was designed to. Wipe out strainers with a rag and rinse under a faucet if necessary. For stubborn debris, a toothpick should be able to dislodge any obstructions from the perforations. Always ensure that strainers are placed back in the machine before operation and that they lay flat in the tub.

You may wish to also refer to the page entitled "Detergent Control" in order to learn more about how your water hardness will effect the performance of your machine. Hard water makes dishmachines work harder and decreases efficiency.

Again, it is important to remind operators that trying to perform corrective maintenance on the dishmachine could lead to larger problems or even cause harm to the operator. If a problem is discovered; secure the dishmachine using proper shut down procedures as listed in this manual and contact a **QUALIFIED SERVICE AGENCY** as listed in the back of this manual.

Some problems, however, may have nothing to do with the machine itself and no amount of preventative maintenance is going to help. A common problem has to do with temperatures being too low. Verify that the water temperatures coming to your dishmachine match the requirements listed on the machine data plate. There can be a variety of reasons why your water temperature could be too low and you should discuss it with a **QUALIFIED SERVICE AGENCY** to determine what can be done.

By following the operating and cleaning instructions in this manual, you should get the most efficient results from your machine. As a reminder, here are some steps to take to ensure that you are using the dishmachine the way it was designed to work:

1. Ensure that the water temperatures match those listed on the machine data plate.
2. Ensure that all strainers are in place before operating the machine.
3. Ensure that all wash and/or rinse arms are secure in the machine before operating.
4. Ensure that drains are closed/sealed before operating.
5. Remove as much soil from dishes by hand as possible before loading into racks.
6. Do not overfill racks.
7. Ensure that glasses are placed upside down in the rack.
8. Ensure that all chemicals being injected to machine have been verified as being at the correct concentrations.
9. Clean out the machine at the end of every workday as per the instructions in the manual.
10. Always contact a **QUALIFIED SERVICE AGENCY** whenever a serious problem arises.
11. Follow all safety procedures, whether listed in this manual or put forth by local, state or national codes/regulations.

SECTION 4: TROUBLESHOOTING

SECTION 4: TROUBLESHOOTING

COMMON PROBLEMS



WARNING: Inspection, testing and repair of electrical equipment should be performed only by qualified service personnel. Certain procedures in this section require electrical tests or measurements while power is applied to the machine. **Exercise extreme caution at all times.** If test points are not easily accessible, disconnect power, attach test equipment and reapply power to test. When replacing electrical parts, disconnect power at source circuit breaker.

Problem: Dishmachine will not fill after the door is close. Power “ON” light is illuminated.

1. Faulty rinse solenoid valve. Repair or replace valve as required.
2. Faulty door switch. Verify the wiring of the switch; if correct, replace the switch.
3. Fouled/faulty high level probe. Clean probe if fouled. If clean, and still not working, replace.

Problem: Dishmachine will not fill after the door is closed. Power “ON” light is not illuminated.

1. Service breaker tripped. Reset. If the breaker trips again, contact an electrician to verify the amp draw of the machine.
2. Machine not connected to power source. Verify that the machine has been properly connected to the power source.
3. Faulty power source. Verify the wiring of the switch; if correct, replace switch.

Problem: Dishmachine will not run after the door is closed. Power “ON” light is illuminated and the unit is filling.

1. Timer motor is faulty. Verify that the timer is rotating. If not, check to see that the motor is receiving power. If so, replace the motor and/or timer assembly.
2. Wash motor faulty/damaged. Verify that the wash motor is getting power. If so, replace the motor.
3. Wash motor contactor faulty. Check for continuity; if contacts are open, replace the contactor.

Problem: (TEMPSTAR GPX) Dishmachine runs continuously in the wash cycle.

1. Machine is in Delime mode. Flip NORMAL/DELIME switch to NORMAL mode.
2. Timer motor is faulty. Verify that the timer is rotating. If not, check to see that the motor is receiving power. If so, replace the motor and/or timer assembly.
3. Cam timer jammed by obstruction. Remove obstruction.

Problem: (TEMPSTAR HH GPX) Dishmachine runs continuously in the wash cycle.

1. Machine is in delime mode. Change Operation Mode from DELIME to NORMAL position.
2. Wash cycle delay timer is faulty. During the wash cycle, the cam timer will move for the first 30 seconds of the wash cycle. The cycle delay timer will then cause the cam timer to stop, in order to increase the length of the wash cycle. The red light on the delay timer is in control of the cam timer. If the red light is not turning on (only during cycles B, C or D), replace the cycle timer.
3. Wash cycle delay timer settings not correctly adjusted. If the wash cycle delay timer and rotating cam timer are working correctly, the time cycles on the delay timer may be incorrectly adjusted. Adjust the delay potentiometer corresponding to the B, C or D cycle. Rerun the appropriate cycle and see if the adjustment has made any change in the length of the cycle. If not, replace the cycle delay timer.
4. Cam timer is faulty. Confirm that the wash cycle delay timer is functioning correctly (see above). Confirm that the timer motor is receiving power. If it is, replace the motor and/or timer assembly. Make sure there are no obstructions which limit the rotation of the cam timer.

Problem: Wash or rinse heater does not work.

1. Faulty heater element. Check element for continuity; if open, replace the heater.
2. Faulty heater contactor. Replace the contactor.
3. Misadjusted/faulty thermostat(s). Verify operation and setting of thermostats, replace if necessary.

Problem: Dishmachine fill slowly and/or the rinse is weak.

1. Clogged or obstructed rinse arms. Remove and clean the rinse arms.
2. Low incoming water pressure. Adjust the water pressure regulator to ensure that there is 20 ± 5 PSI flow.
3. Y-strainer is clogged. Clean out the Y-strainer.

SECTION 4: TROUBLESHOOTING

COMMON PROBLEMS (CONTINUED)

Problem: Rinse water not reaching required temperature.

1. Faulty rinse heater. Check element for continuity; if open, replace heater.
2. Misadjusted/faulty thermostat(s). Verify operation and setting of thermostats, replace if necessary.
3. Rinse thermometer is defective. Replace thermometer.

Problem: Wash water is not reaching required temperature.

1. Faulty wash heater. Check element for continuity; if open, replace the heater.
2. Misadjusted/faulty thermostat(s). Verify operation and setting of thermostats, replace if necessary.
3. Wash thermometer is defective. Replace thermometer.

Problem: Doors will not close completely.

1. Improper spring tension. Adjust spring tension as required by loosening (not removing) spring bolt nuts and adjusting the tension. Tighten nuts back when done.
2. Obstruction in door channel. Remove the obstruction.
3. Doors are not square with frame. Adjust the frame to accommodate the doors.

Problem: Doors are hard to open.

1. Improper tension on door springs. Adjust tension.
2. Door guides worn or obstructed. Replace if worn or cracked. Clean the door guides.
3. Doors not positioned correctly. Adjust the door positioning.
4. Dish table may be pinching the door runners. Adjust the table position.

Problem: Water leaks at the wash pump.

1. Wash pump seal defective. Replace the seal.
2. Petcock or pump drain (if equipped) not shut/tight. Close or tighten.
3. Loose hoses (hose clamps) on the wash pump. Tighten the hose clamps.

Problem: Will not rinse during autocycle.

1. Defective rinse solenoid. Repair or replace the rinse solenoid as required.
2. Faulty fill microswitch. Replace microswitch.
3. No water to the machine. Verify that there is water a 20 ± 5 PSI connected to the machine.

Problem: Dishes are not coming clean.

1. Machine temperatures are not up to the minimum requirements. Verify that incoming water, rinse water, and wash water match the required temperatures as listed on the machine data plate.
2. No detergent/too much detergent. Adjust detergent concentration as required for the amount of water held by the machine.
3. Solid dispenser canister is empty. Replace the canister.

SECTION 5: SERVICE PROCEDURES

SECTION 5: SERVICE PROCEDURES

RINSE SOLENOID VALVE REPAIR PARTS KIT

These dishmachines are equipped with electrical solenoid valves to allow for automatic fill and rinse. These valves are designed to specific tolerances and design aspects that must be met in order to function properly.

Ecolab offers repair kits for replacing some of the wear items associated with solenoid valves which will allow you to save money in that replacement of these parts can take place *without* removing the solenoid valve from the plumbing assembly.

The instructions provided here are for maintenance personnel only. Unauthorized persons should not attempt any of the steps contained in these instructions.

Warning: many of the instructions and steps within this document require the use of tools. Only authorized personnel should ever perform any maintenance procedure on the dishmachine!

PREPARATION

1. Power must be secured to the unit at the service breaker. Tag or lock out the service breaker to prevent accidental or unauthorized energizing of the machine.

2. Ensure that incoming water to the machine is secured either by use of a shut-off valve or disconnecting the incoming water line.

TOOLS REQUIRED

The following tools will be needed to perform this maintenance evolution:

1. Small flathead screwdriver
2. Medium flathead screwdriver
2. Needle nose pliers
3. 5/16" nutdriver
4. Channel locks
5. 12" pipe wrench

TIME REQUIRED

It is estimated that it will take (1) person twenty minutes to perform this task, not including all of the items indicated in the section entitled "PREPARATION".

IMPORTANT NOTES

1. Read these instructions thoroughly before attempting this maintenance evolution. Become familiar with the parts and what actions need to be taken. This will save time in the long run!

2. The procedures demonstrated in this manual are shown being performed on an AJ-44CE rack conveyor dish-machine. The actual maintenance steps, however, apply to any Parker style solenoid valve found on a Jackson dish-machine.

STEPS

1. Remove the top screw with the 5/16" nutdriver. Remove the screw and the data plate and set to the side.



Removing the top screw

2. With the top screw and data plate removed, grasp the solenoid coil and gently pull up. The coil should slide up, allowing you to remove it from the valve bonnet. If you are wanting to replace the coil, continue on with Step 3. If you are wanting to replace some of the internal components of the valve, proceed to step 12.




Removing the coil

3. **NOTE:** Replacing the solenoid coil requires working with the wiring of your machine. It is important that all wiring maintenance be performed by qualified personnel. Always verify the wiring steps presented in this instruction with the schematic that shipped with the unit. A current schematic can also be found in the unit's installation manual. Before beginning any step that involves working with wiring, ensure that the steps located in the section entitled "Preparation" have been performed. Power must be secured to the machine at the service breaker. Failure to do so could result in severe injury to maintenance personnel.


SECTION 5: SERVICE PROCEDURES

RINSE SOLENOID VALVE REPAIR PARTS KIT (CONTINUED)

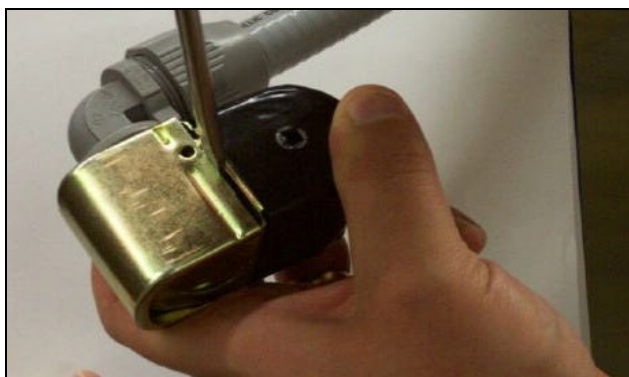

Prying open the coil wire cover

4. When replacing the coil, ensure that when removing the coil wire cover that care is taken not to damage the wires inside. Using the medium flathead screwdriver, gently use it to open the cover enough to where it could be pulled off.

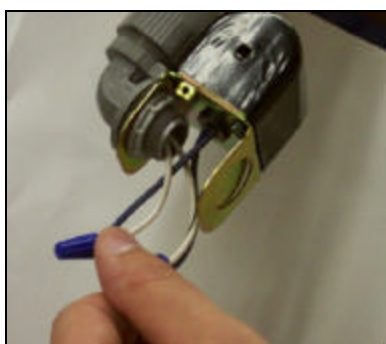

Straightening the wires

5. Once the coil wire cover has been removed and set to the side, take the internal wires and pull them out straight.



Removing the wire nuts

6. Remove the wire nuts from the wires and separate them.



Loosening the conduit nut

7. Using a pair of channel locks, gently loosen the conduit retaining ring for the conduit nut. Once it is loosened, use your fingers to unscrew and remove it.

8. Pull the conduit away and discard the bad coil. Take the new coil and attach the conduit, reinstall & tighten the conduit nut, and pull the wires through so that you will be able to wire the valve back up.

9. Reconnect the wires from the conduit to the wires from the solenoid as they had been connected previously. Ensure that the wire nuts are on tight.

10. Slide the coil wire cover back on, taking care not to damage the wires.

11. If you are done performing maintenance on the valve, continue on to step 23. Otherwise, please go on to step 12.L



Loosening the valve bonnet

12. To remove the valve bonnet, grasp it with the jaws of the pipe wrench and turn to the left. **Note:** on some models you may have to remove the valve in order to perform this and any further steps. Be careful not to damage the plumbing assembly. Only use the pipe wrench enough to where you can spin the valve bonnet off with your hand.


SECTION 5: SERVICE PROCEDURES

RINSE SOLENOID VALVE REPAIR PARTS KIT (CONTINUED)



Removing the valve bonnet

13. Slowly remove the valve bonnet. **Note:** The spring for the plunger is located directly under the bonnet and may come free if you are not careful. Remove the plunger, spring and valve bonnet and place to the side.

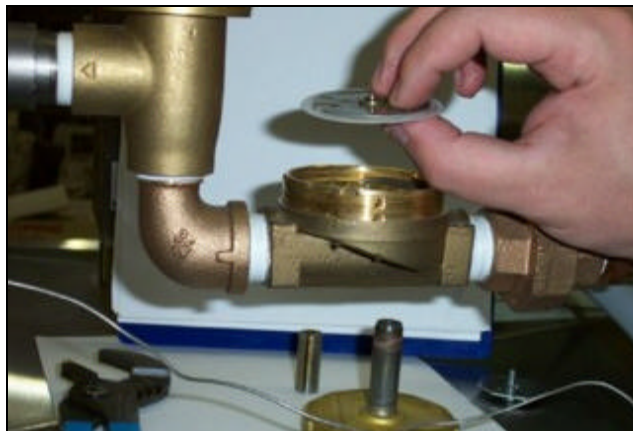

Removing the diaphragm

17. Remove the diaphragm retainer and then the diaphragm itself. Many problems associated with a solenoid valve can be traced to a clogged pilot port in the diaphragm.



Removing the O-ring

14. Remove the O-ring and inspect it. If it has any tears or cuts or excessive flat spaces, it should be replaced.


15. Examine the threads for the valve bonnet. Check them for scoring or signs of damage. Take a cloth and clean them out to remove any foreign particles that might get lodged in the threads and cause a leak. Severely damage threads should not be repaired; instead it is recommended that the entire valve should be replaced. These instructions do not provide information on replacing the solenoid valve.

16. **Note:** Even though an O-ring may not appear damaged, it is a good idea to go ahead and replace it if you have a new one. This will help ensure that your valve remains leak-free in the future!



Pointing out the extension hole

18. As indicated in the photo above, the extension hole can become clogged. If it is difficult to clean out, you can use a heated straight pin to push through the hole. The center hole, the pilot port, must also be clear. If the diaphragm is torn or bent in any way, it must be replaced.

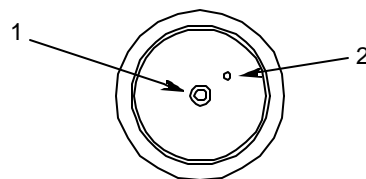

Diaphragm showing (1) pilot port and (2) extension hole

SECTION 5: SERVICE PROCEDURES

RINSE SOLENOID VALVE REPAIR PARTS KIT (CONTINUED)




Removing the screen retainer

19. Using the small flathead screwdriver, lift out the screen retainer. Verify that the holes in it are free of clogs and debris.



Removing the mesh strainer screen

20. Again using the small flathead screwdriver, carefully remove the mesh screen from inside the valve body. The screen should be taken and rinsed out to remove any debris fouling it.

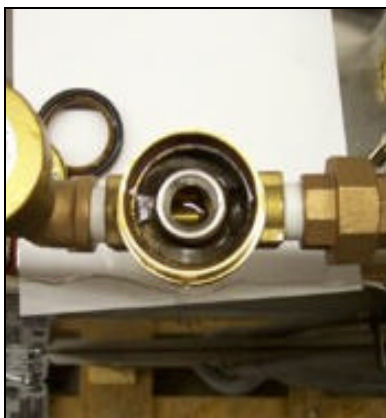

View inside the solenoid valve body

21. With the mesh screen removed, look down into the valve and verify it is not clogged. Remove any foreign objects from the valve body that would obstruct flow.

22. Reassemble the valve, reversing the steps needed to take it apart. Replace defective replacement parts with new parts from ordered kits. Ensure that components are sufficiently tightened to prevent leakage.

AFTER MAINTENANCE ACTIONS

Reconnect the incoming water (if disconnected) and turn on. Then restore power to the unit. Run the unit for at least 10 minutes to ensure there are no leaks. If any problems arise please contact your Jackson representative.

SPECIAL PARTS

Plunger and Spring Replacement Kit
06401-003-07-40

Diaphragm and O-Ring Replacement Kit (3/4")
06401-003-07-42

110V Coil and Housing
06401-003-07-43

SECTION 5: SERVICE PROCEDURES

VACUUM BREAKER REPAIR PARTS KIT

These dishmachines are equipped with vacuum breakers to serve as back-flow prevention devices. ASSE requirements specify what type of back-flow prevention is necessary on dishmachines. Vacuum breakers, unlike air gaps, have certain parts that have specific tolerances and design aspects that must be met in order to function properly.

Ecolab offers repair kits for replacing some of the wear items associated with vacuum breakers which will allow you to save money in that replacement of these parts can take place *without* removing the vacuum breaker from the plumbing assembly.

The instructions provided here are for maintenance personnel only. Unauthorized persons should not attempt any of the steps contained in these instructions.

Warning: many of the instructions and steps within this document require the use of tools. Only authorized personnel should ever perform any maintenance procedure on the dishmachine!

PREPARATION

1. Power must be secured to the unit at the service breaker. Tag or lock out the service breaker to prevent accidental or unauthorized energizing of the machine.

2. Ensure that incoming water to the machine is secured either by use of a shut-off valve or disconnecting the incoming water line.

TOOLS REQUIRED

The following tools will be needed to perform this maintenance evolution:

1. Small flathead screwdriver
2. Needle nose pliers

TIME REQUIRED

It is estimated that it will take (1) person twenty minutes to perform this task, not including all of the items indicated in the section entitled "PREPARATION".

IMPORTANT NOTES

1. Read these instructions thoroughly before attempting this maintenance evolution. Become familiar with the parts and what actions need to be taken. This will save time in the long run!

STEPS

1. **Note:** These instructions only apply to vacuum breakers (1/2" NPT and 3/4" NPT) as pictured below. The repair kits indicated in these instructions will only work on those style of back-flow preventers. If you have a machine with a different style of vacuum breaker, contact your Ecolab representative about replacement components.



Vacuum breaker

2. **Note:** Even though the photos in these instructions show a vacuum breaker that has been removed from the plumbing assembly, these maintenance steps could be performed with it installed so long as the requirements in the section entitled "PREPARATION" have been met.

3. Remove the top cap by gripping firmly and turning to the left. The cap should come off after a few turns.



Removing the cap

4. Set the cap to the side.

5. Using the needle nose pliers, gently lift out the plunger and set to the side. Examine the brass seating surface inside the vacuum breaker. The plunger is required to sit flat on this surface so it must be free of defects, imperfections and the like. If there is debris, remove it. If it is chipped or cracked then the vacuum breaker must be replaced. Failure to do so may result in the vacuum breaker not working according to its design and could result in damage to the dishmachine.


SECTION 5: SERVICE PROCEDURES

VACUUM BREAKER REPAIR PARTS KIT (CONTINUED)



Removing the plunger

6. Your repair kit comes with a new plunger. Examine the old one and ensure that the mating surface is not damaged or cut. Also inspect the rubber seal on the top of the plunger to ensure it is in good condition and not torn.

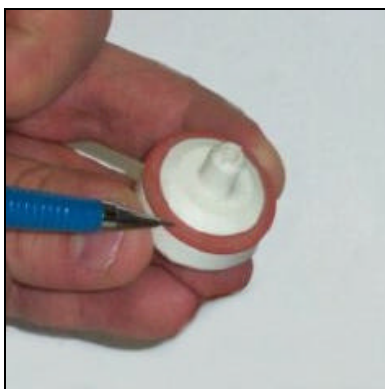

Examining the seal ring on the plunger



Examining the plunger seating surface

7. If any of these conditions are present, replace the old plunger with the new one from your kit. Verify that the new plunger is also free from defects. If it is not, contact your Ecolab representative immediately.

8. The plunger should drop into the vacuum breaker and seat. Ensure it is not flipped upside down (the orange seal ring should be up towards the top of the vacuum breaker).

9. Pick up the cap and examine it. With a soft towel, remove any grit, grime or debris that may have gotten caught in the threads of both the cap retainer or the vacuum breaker body. There is an O-ring that should be present on the cap retainer as well. Regardless of the condition of the plunger, this O-ring should be replaced once the cap is removed. Using a small flathead screwdriver, remove the old O-ring.



Replacing the O-ring

10. With the new O-ring in place, screw the cap back on the vacuum breaker body. The cap needs to only be hand tight (snug).

AFTER MAINTENANCE ACTIONS

1. Reconnect the incoming water (if disconnected) and turn on. Then restore power to the unit. Run the unit for at least 10 minutes to ensure there are no leaks. If any problems arise please contact your Jackson representative.

SPECIAL PARTS

To order the kit with components and instructions:


Components of 1/2" Repair Kit
06401-003-06-23

Components of 3/4" Repair Kit
06401-003-06-24

SECTION 6: PARTS SECTION

SECTION 6: PARTS SECTION

TEMPSTAR GPX CONTROL BOX ASSEMBLY

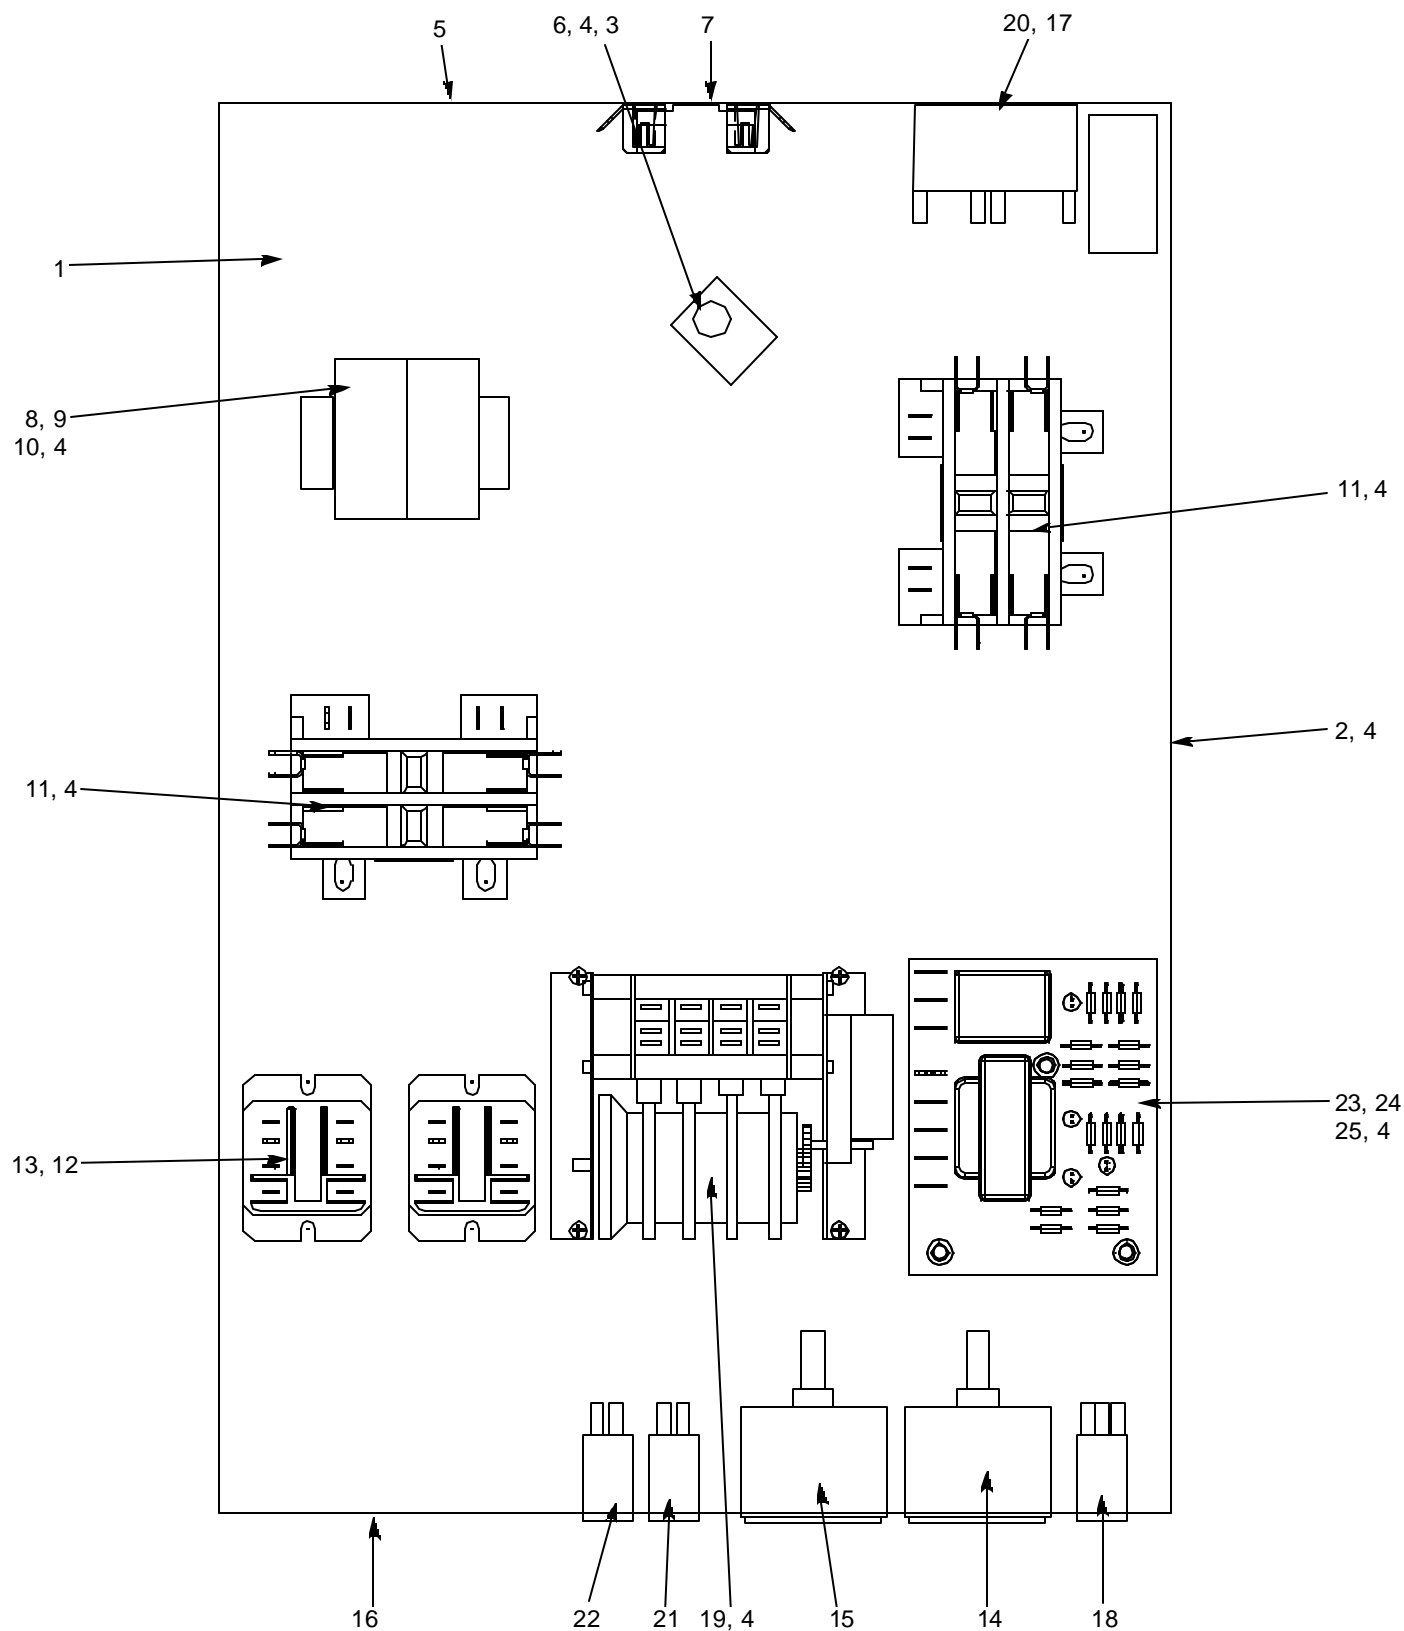

SECTION 6: PARTS SECTION


TEMPSTAR GPX CONTROL BOX ASSEMBLY (CONTINUED)

| ITEM | QTY | DESCRIPTION | Mfg. No. |
|------|-----|--|-----------------|
| 1 | 1 | Control Box Weldment | 05700-002-57-08 |
| 2 | 1 | Terminal Board, Dispenser | 05940-001-97-91 |
| 3 | 1 | Decal, Ground | 09905-011-86-86 |
| 4 | 6 | Locknut, 10-24 S/S Hex with Nylon Insert | 05310-373-01-00 |
| 5 | 4 | Plug, Heyco | 05975-011-47-81 |
| 6 | 1 | Wire Lug | 05940-200-76-00 |
| 7 | 1 | Decal, Use Copper Conductors | 09905-011-47-35 |
| 8 | 1 | Decal, L1, L2, L3 | 09905-101-12-66 |
| 9 | 2 | Curtis Block | 05940-500-02-19 |
| 10 | 1 | Terminal Track | 05700-000-43-60 |
| 11 | 2 | Contactora | 05945-109-03-69 |
| 12 | 8 | Locknut, 6-32 S/S Hex with Nylon Insert | 05310-373-03-00 |
| 13 | 2 | Relay | 05945-111-47-51 |
| 14 | 1 | Rinse Thermometer | 06685-111-68-48 |
| 15 | 1 | Wash Thermometer | 06685-111-68-49 |
| 16 | 1 | Decal, Tempstar GPX | 09905-002-31-84 |
| 17 | 1 | Decal, Delime/Normal | 09905-011-34-96 |
| 18 | 1 | Switch | 05930-002-43-44 |
| 19 | 1 | Timer, 4 CKT 60Hz | 05945-303-31-00 |
| 20 | 1 | Switch, Wash | 05930-301-21-18 |
| 21 | 1 | Light, Red | 05945-111-44-45 |
| 22 | 1 | Light, Green | 05945-111-44-43 |
| 23 | 1 | Liquid Level Control Board | 06680-200-08-21 |
| 24 | 4 | Screw, 6-32 x 5/8" S/S | 05305-011-39-85 |
| 25 | 1 | Bracket, LLC Board Mounting | 05700-002-13-22 |
| 26* | 1 | Cover, Control Box | 05700-002-23-03 |
| 27* | 1 | Decal, Warning - Disconnect Power | 09905-100-75-93 |
| 28* | 1 | Bolt, 10-32 x 1/2" Slotted Truss Head | 05305-173-12-00 |
| 29* | 4 | Leg, Control Box Support | 05700-002-33-05 |
| 30* | 4 | Screw, 1/4"-20 x 2 3/4" S/S Hex Head Cap | 05305-274-13-00 |
| 31* | 4 | Washer, 1/4"-20 I.D. | 05311-174-01-00 |
| 32* | 4 | Locknut, 1/4"-20 S/S Hex with Nylon Insert | 05310-374-01-00 |

* Represents an item not shown.

SECTION 6: PARTS SECTION

TEMPSTAR HH GPX CONTROL BOX ASSEMBLY

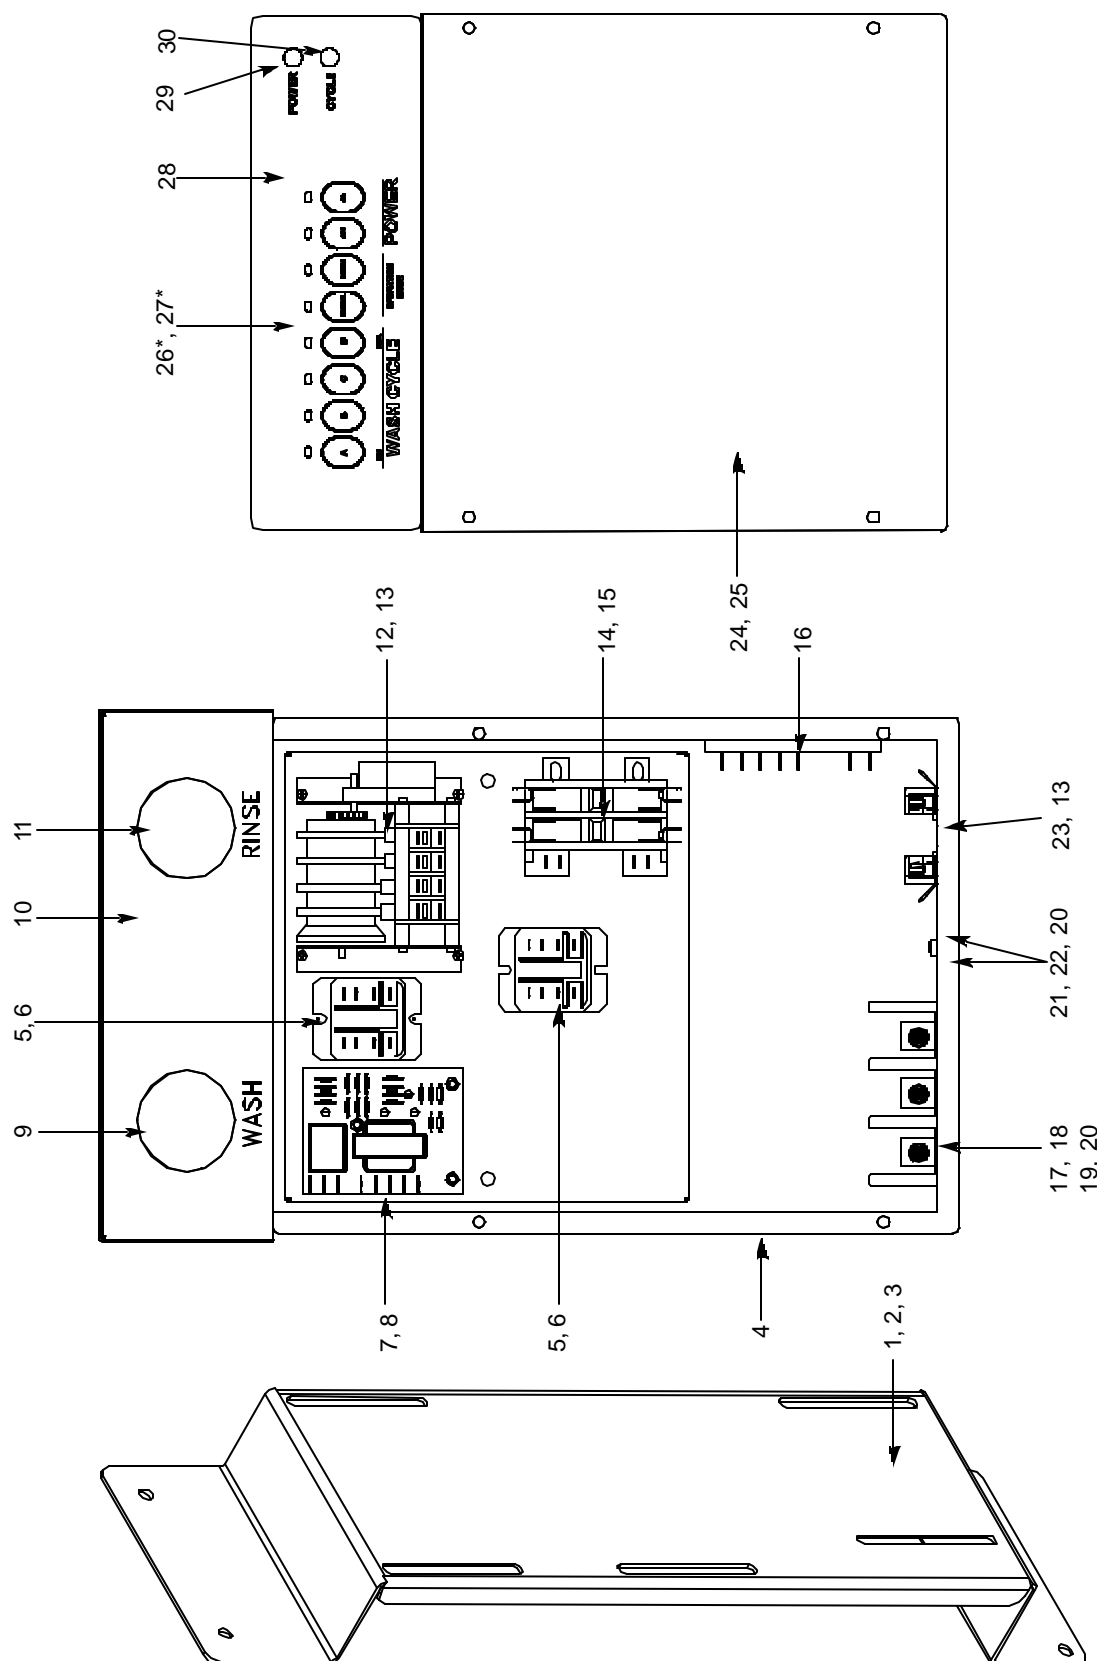

SECTION 6: PARTS SECTION


TEMPSTAR HH GPX CONTROL BOX ASSEMBLY (CONTINUED)

| ITEM | QTY | DESCRIPTION | Mfg. No. |
|------|-----|--|-----------------|
| 1 | 1 | Bracket, Electrical Box Mounting | 05700-002-18-48 |
| 2 | 9 | Locknut, 1/4"-20 S/S Hex with Nylon Insert | 05310-374-01-00 |
| 3 | 9 | Washer, 1/4"-20 I.D. S/S | 05311-174-01-00 |
| 4 | 1 | Control Box Weldment | 05700-002-06-48 |
| 5 | 2 | Relay | 05945-111-47-51 |
| 6 | 4 | Screw, 10-32 x 1/2" Phillips Pan Head with Washer | 05305-002-32-37 |
| 7 | 1 | Liquid Level Control | 06680-200-08-21 |
| 8 | 3 | Screw, 6-32 x 5/8" | 05305-011-39-85 |
| * | 1 | Bracket, LLC Board | 05700-002-13-22 |
| 9 | 1 | Thermometer, 48 Lead | 06685-111-68-48 |
| 10 | 1 | Decal, Control Box Gauge | 09905-002-00-45 |
| 11 | 1 | Thermometer, 96 Lead | 06685-111-68-49 |
| 12 | 1 | Timer, 4CKT 208-230V Single REV | 05945-303-31-00 |
| 13 | 8 | Screw, 6-32 x 3/8" SEMS with External Tooth Washer | 05305-002-25-91 |
| 14 | 2 | Contactor, 2 Pole 220V 20AMP | 05945-109-03-69 |
| 15 | 3 | Screw, 10-32 x 3/8" Phillips Pan Head | 05305-173-26-00 |
| 16 | 1 | Timer, Cycle Delay | 05945-002-13-78 |
| 17 | 1 | Curtis Block | 05940-500-02-19 |
| 18 | 1 | Decal, L1, L2, L3 | 09905-101-12-66 |
| 19 | 1 | Decal, Copper Conductors | 09905-011-47-35 |
| 20 | 4 | Locknut, 10-24 S/S Hex with Nylon Insert | 05310-373-01-00 |
| 21 | 1 | Wire Lug | 05940-200-76-00 |
| 22 | 1 | Terminal Board, Dispenser | 05940-001-97-91 |
| 22 | 1 | Terminal Track | 05700-000-43-60 |
| 23 | 1 | Decal, Ground | 09905-011-86-86 |
| 24 | 1 | Cover, Control Box Weldment | 05700-002-06-52 |
| 25 | 4 | Bolt, 10-32 x 1/2" | 05305-173-26-00 |
| 26* | 1 | Switch, 8 Button Tap Touch | 05930-001-99-51 |
| 27* | 1 | Spacer, Switch Panel | 05700-002-50-02 |
| 28 | 1 | Decal, Control Box Cover | 09905-002-31-84 |
| 29 | 1 | Light, Red | 05945-504-07-18 |
| 30 | 1 | Light, Green | 05945-504-08-18 |
| * | 1 | Cover, Dielectric Control Panel | 05700-021-50-89 |

* Represents an item not shown.

SECTION 6: PARTS SECTION

TEMPSTAR GPX HOOD ASSEMBLY

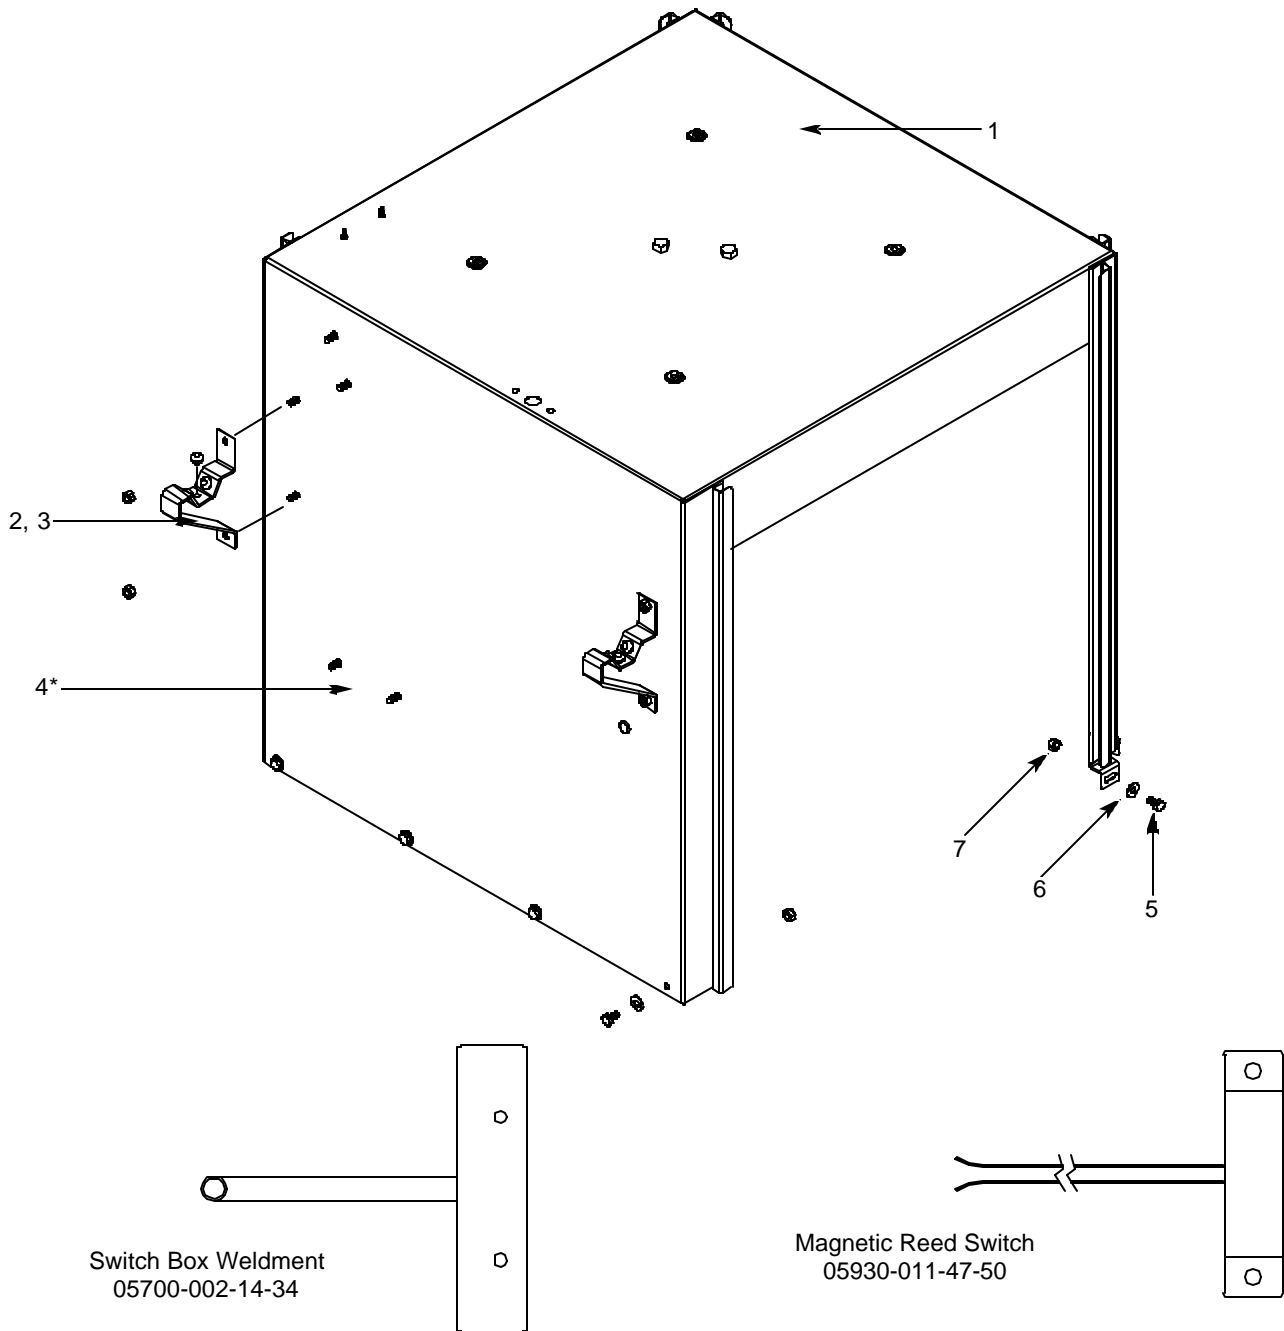


| ITEM | QTY | DESCRIPTION | Mfg. No. |
|------|-----|--|-----------------|
| 1 | 1 | Hood, Single Piece Weldment | 05700-002-57-02 |
| 2 | 2 | Bracket, Cantilever Support | 05700-031-88-00 |
| 3 | 6 | Wear Button .50 Dia. | 05700-011-88-01 |
| 4* | 1 | Conduit Bracket (not shown) | 05700-021-70-88 |
| 5 | 8 | Bolt, 1/4"-20 x 1/2" S/S Hex Head | 05305-274-02-00 |
| 6 | 8 | Washer, 1/4" I.D. S/S | 05311-174-01-00 |
| 7 | 14 | Locknut, 1/4"-20 S/S Hex with Nylon Insert | 05310-374-01-00 |

SECTION 6: PARTS SECTION

TEMPSTAR HH GPX HOOD ASSEMBLY


* Represents an item not shown.

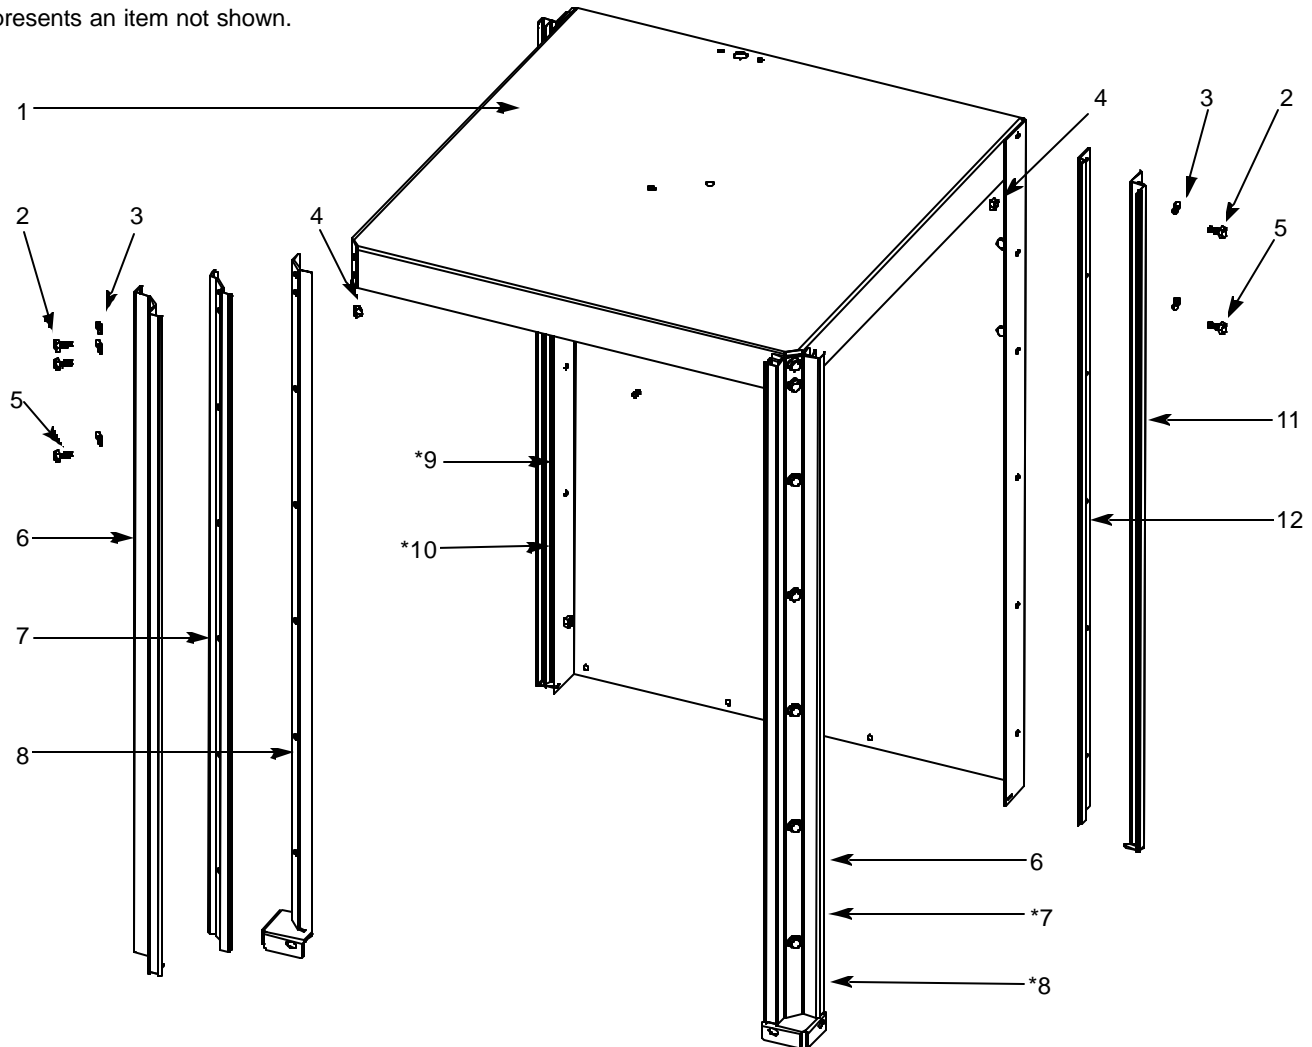

| ITEM | QTY | DESCRIPTION | Mfg. No. |
|------|-----|---|-----------------|
| 1 | 1 | Hood Weldment | 05700-002-01-23 |
| 2 | 6 | Bolt, 1/4"-20 X 5/8" Long Hex | 05305-274-24-00 |
| 3 | 26 | Washer, 1/4" ID S/S | 05311-174-01-00 |
| 4 | 26 | Locknut, 1/4"-20 S/S Hex with Nylon Inserts | 05310-374-01-00 |
| 5 | 26 | Bolt, 1/4"-20 X 1/2" Long Hex | 05305-274-02-00 |
| 6 | 2 | Right/Left Front Outer Door Guide | 05700-031-76-85 |
| 7 | 2 | Right/Left Front Inner Door Guide | 05700-031-76-82 |
| 8 | 2 | Right/Left Front Hood Support Weldment | 05700-002-17-68 |
| 9 | 1 | Left Rear Outer Door Guide | 05700-031-76-34 |
| 10 | 1 | Left Rear Inner Door Guide | 05700-031-76-33 |
| 11 | 1 | Right Rear Outer Door Guide | 05700-031-76-35 |
| 12 | 1 | Right Rear Inner Door Guide | 05700-031-76-32 |


SECTION 6: PARTS SECTION

FRAME ASSEMBLIES

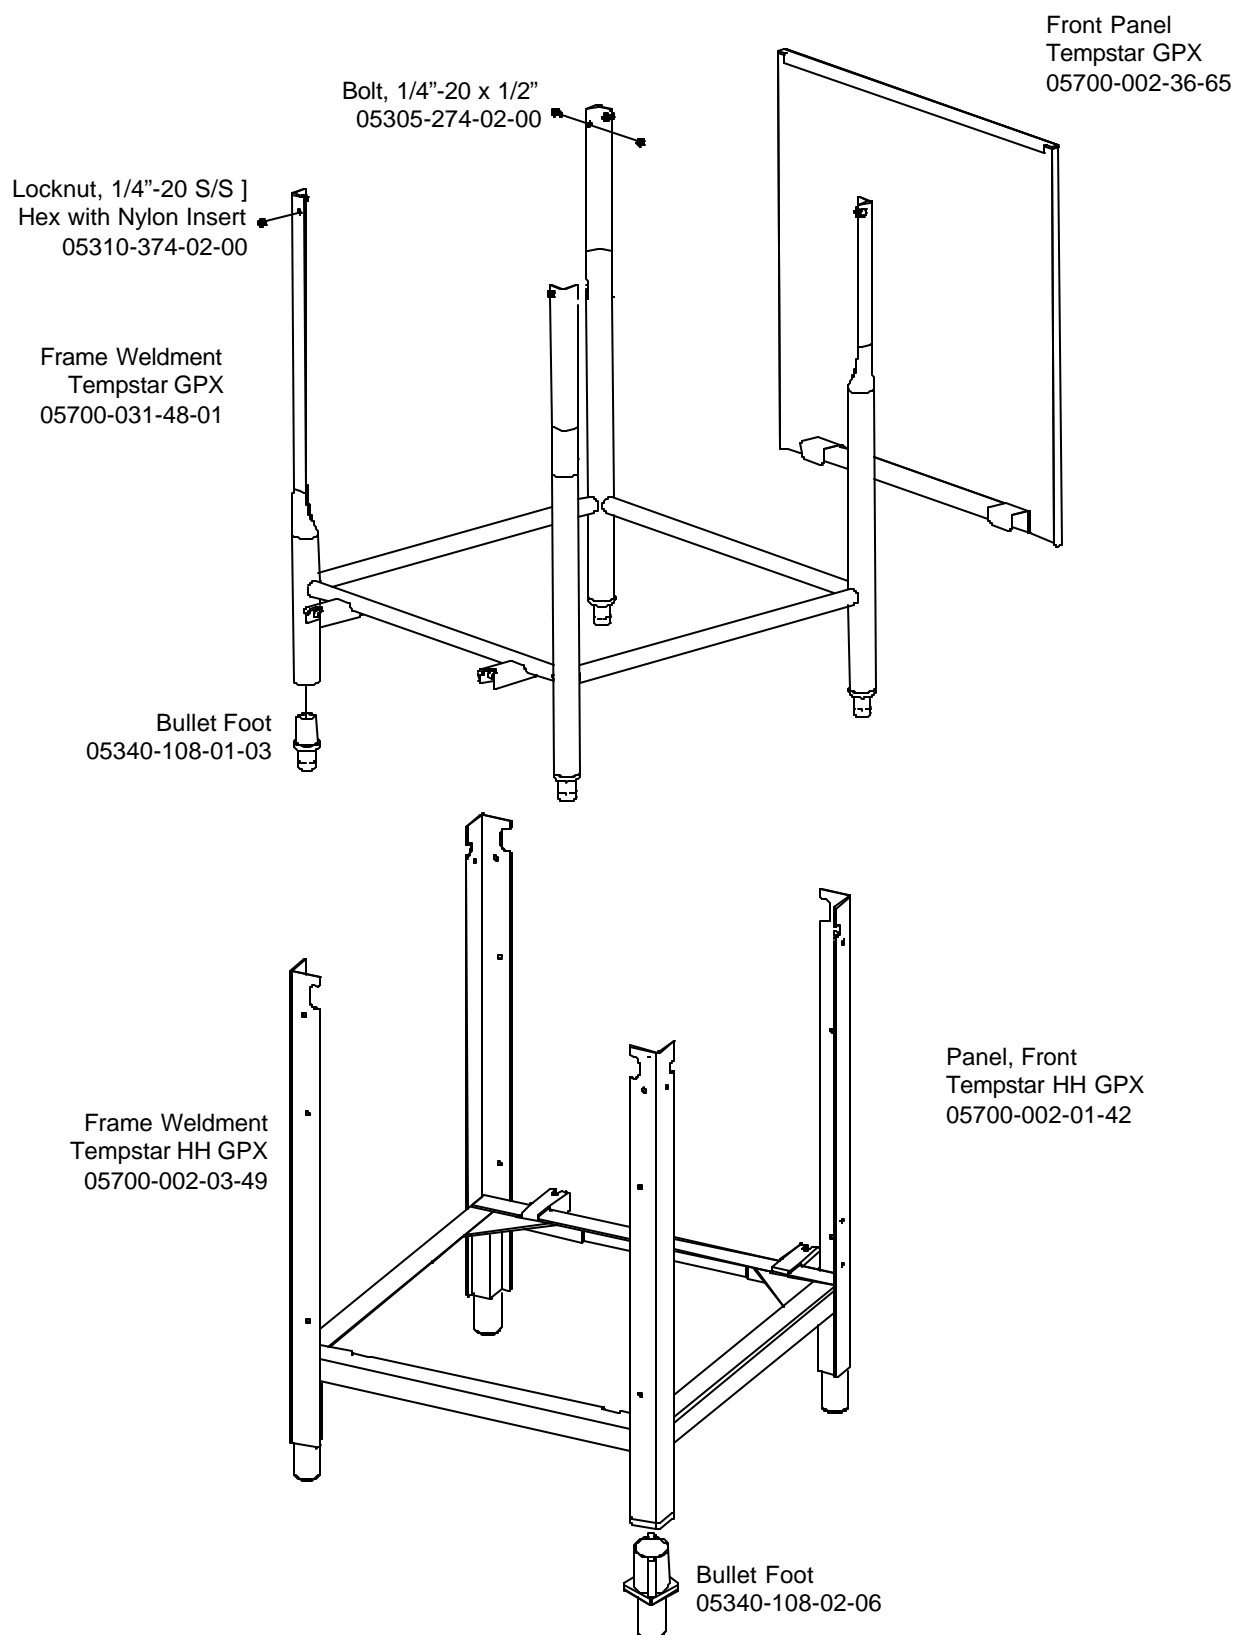


SECTION 6: PARTS SECTION

TUB ASSEMBLY

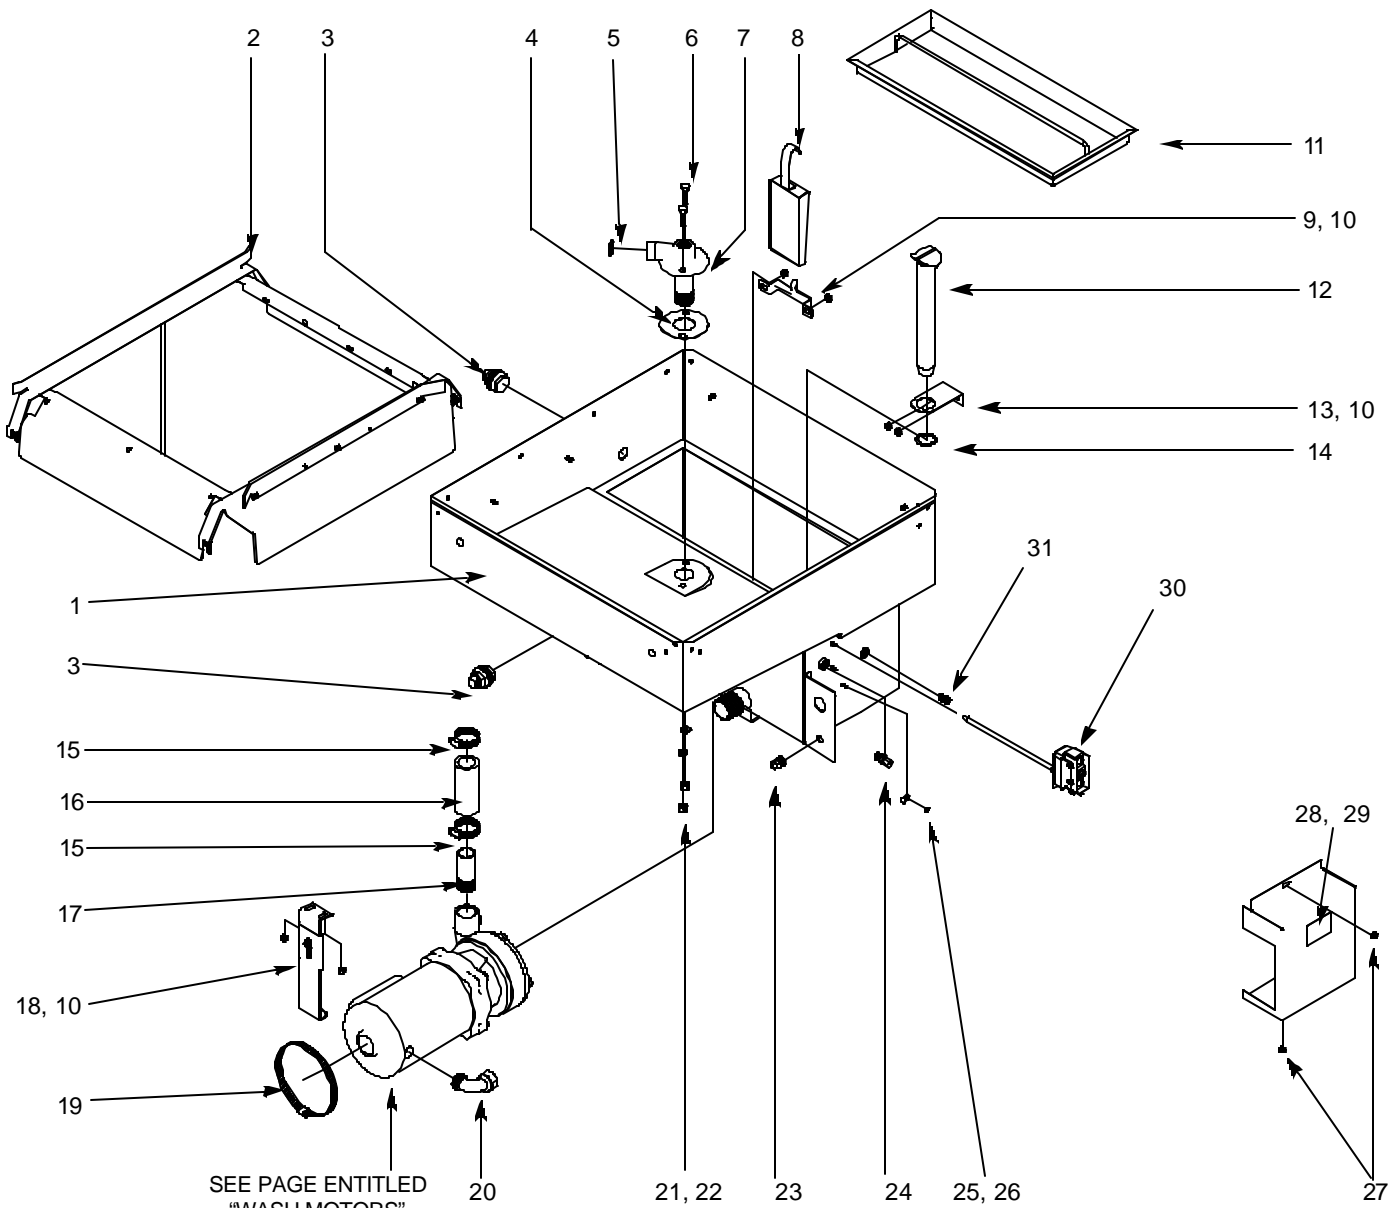

* Represents an item not shown.

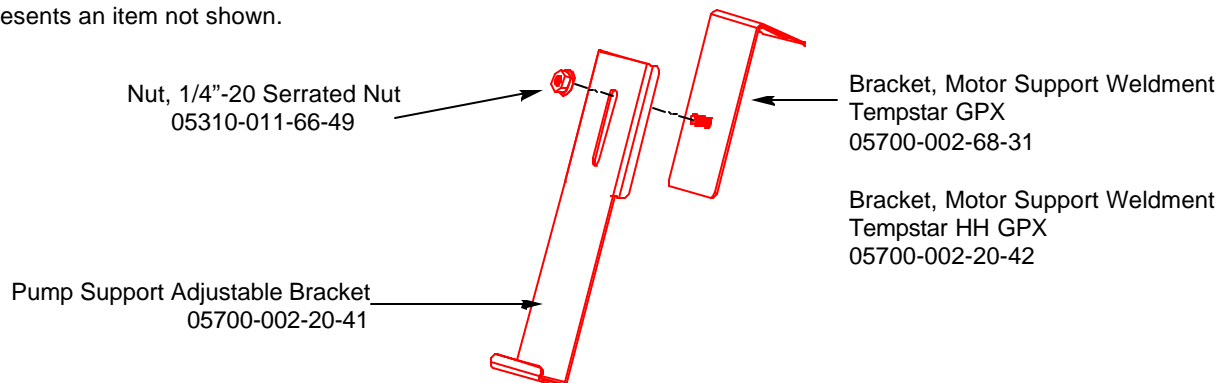

SECTION 6: PARTS SECTION

TUB ASSEMBLY (CONTINUED)

| ITEM | QTY | DESCRIPTION | Mfg. No. |
|------|-----|--|-----------------|
| 1 | 1 | Tub Weldment, Tempstar GPX | 05700-002-57-03 |
| 1 | 1 | Tub Weldment, Tempstar HH GPX | 05700-002-63-13 |
| 2 | 1 | Rack Assembly | 05700-002-01-00 |
| 3 | 2 | Bulk Head Plug | 04730-609-05-00 |
| 4 | 1 | Gasket | 05700-111-35-03 |
| 5 | 1 | O-ring | 05330-400-05-00 |
| 6 | 4 | Bolt, Hex 3/8"-16 x 1 1/4" Long | 05305-276-10-00 |
| 7 | 1 | Lower Wash Manifold Weldment, Tempstar GPX | 05700-031-46-00 |
| 7 | 1 | Lower Wash Manifold Weldment, Tempstar HH GPX | 05700-002-21-70 |
| 8 | 1 | Suction Strainer Weldment, Tempstar GPX | 05700-001-22-23 |
| 8 | 1 | Suction Strainer Weldment, Tempstar HH GPX | 05700-002-16-13 |
| 9 | 1 | Suction Strainer Bracket, Tempstar GPX | 05700-001-22-24 |
| 9 | 1 | Suction Strainer Bracket, Tempstar HH GPX | 05700-002-18-28 |
| 10 | 8 | Locknut, 1/4"-20 with Nylon Insert | 05310-374-02-00 |
| 11 | 1 | Strainer Weldment | 05700-021-50-07 |
| 12 | 1 | Wash Overflow Weldment | 05700-001-25-69 |
| 13 | 1 | Overflow Support Bracket | 05700-001-27-55 |
| 14 | 1 | O-Ring | 05330-400-05-00 |
| 15 | 2 | Clamp, Hose 1 5/16" to 2 1/4" | 04730-719-01-37 |
| 16 | 1 | Discharge Hose | 05700-011-88-24 |
| 17 | 1 | Nipple | 05700-021-34-84 |
| 18 | 1 | Pump Support Bracket Assembly, Tempstar GPX | 05700-002-00-46 |
| 18 | 1 | Pump Support Bracket Assembly, Tempstar HH GPX | 05700-002-22-73 |
| 19 | 1 | Clamp, Hose 5 5/8" to 6" | 04730-011-34-90 |
| 20 | 1 | Connector, 1/2" 90° | 05975-111-01-00 |
| 21 | 4 | Nut, 3/8"-16 S/S Hex | 05310-276-01-00 |
| 22 | 4 | Lockwasher 3/8" | 05311-276-01-00 |
| 23 | 1 | Fitting, Olflex | 05975-205-43-00 |
| 24 | 1 | Union, 1/4" | 05700-001-16-52 |
| 25 | 1 | Clamp, 1/8" Nylon | 05975-601-10-15 |
| 26 | 1 | Locknut, 6-32 with Nylon Insert | 05310-373-03-00 |
| 27 | 4 | Locknut, 10-24 with Nylon Insert | 05310-373-01-00 |
| 28 | 1 | Cover, Wash | 05700-031-47-57 |
| 29 | 1 | Decal, Warning-Disconnect Power | 09905-100-75-93 |
| 30 | 1 | Kit, Thermostat Regulating, Tempstar GPX | 06401-003-18-25 |
| 30 | 1 | Kit, Thermostat Regulating, Tempstar HH GPX | 06401-003-18-27 |
| 31 | 1 | Fitting, 1/4" Imperial Brass | 05310-924-02-05 |



The Tempstar models covered in this manual come supplied with various wash motor assemblies (a wash motor assembly includes the wash motor and the pump end), depending on the characteristics of the machine. To ensure that you order the correct wash motor assembly for the model you are servicing, please refer to the following table:

| <u>Model</u> | <u>Volts</u> | <u>Hz</u> | <u>Phase</u> | <u>Wash Motor Assembly</u> |
|-----------------|--------------|-----------|--------------|----------------------------|
| Tempstar GPX | 208 | 60 | 1 | 06105-121-35-18 |
| Tempstar GPX | 230 | 60 | 1 | 06105-121-35-18 |
| Tempstar HH GPX | 208 | 60 | 1 | 06105-002-01-29 |
| Tempstar HH GPX | 230 | 60 | 1 | 06105-002-01-29 |

Important note: When servicing a wash motor, it is important to refer to the wiring schematic found on the motor, to ensure that the motor is wired correctly. Different manufacturers of motors may not use the same wire color codes and therefore, your new motor, which may have been built by someone different than who built your original motor, may not connect using the same wires. Always refer to the wiring diagrams on the motor you are installing. If the motor you are installing has had the schematic removed, contact Jackson MSC immediately for technical support.

SECTION 6: PARTS SECTION

CANTILEVER ARM/DOOR ASSEMBLIES TEMPSTAR GPX

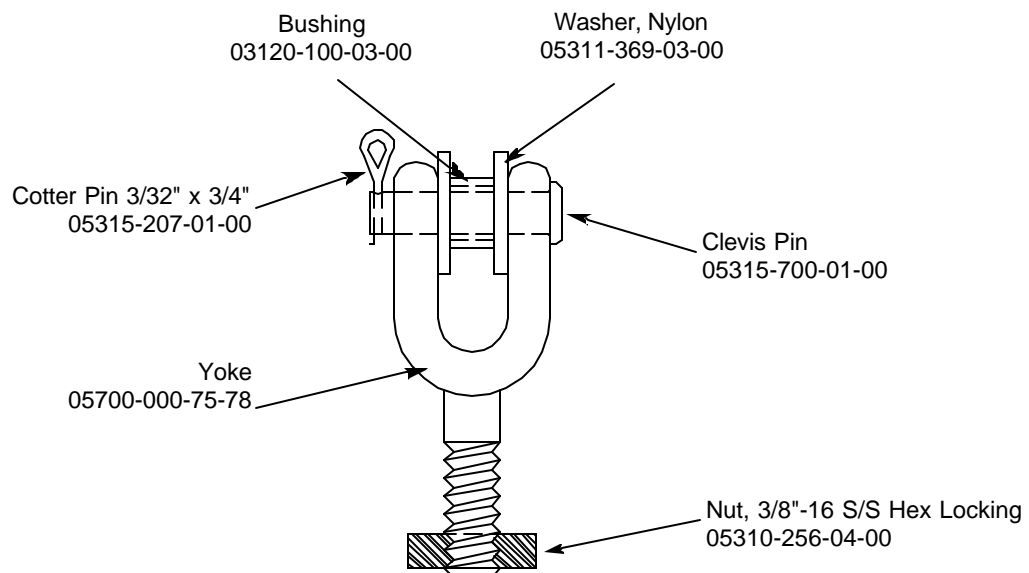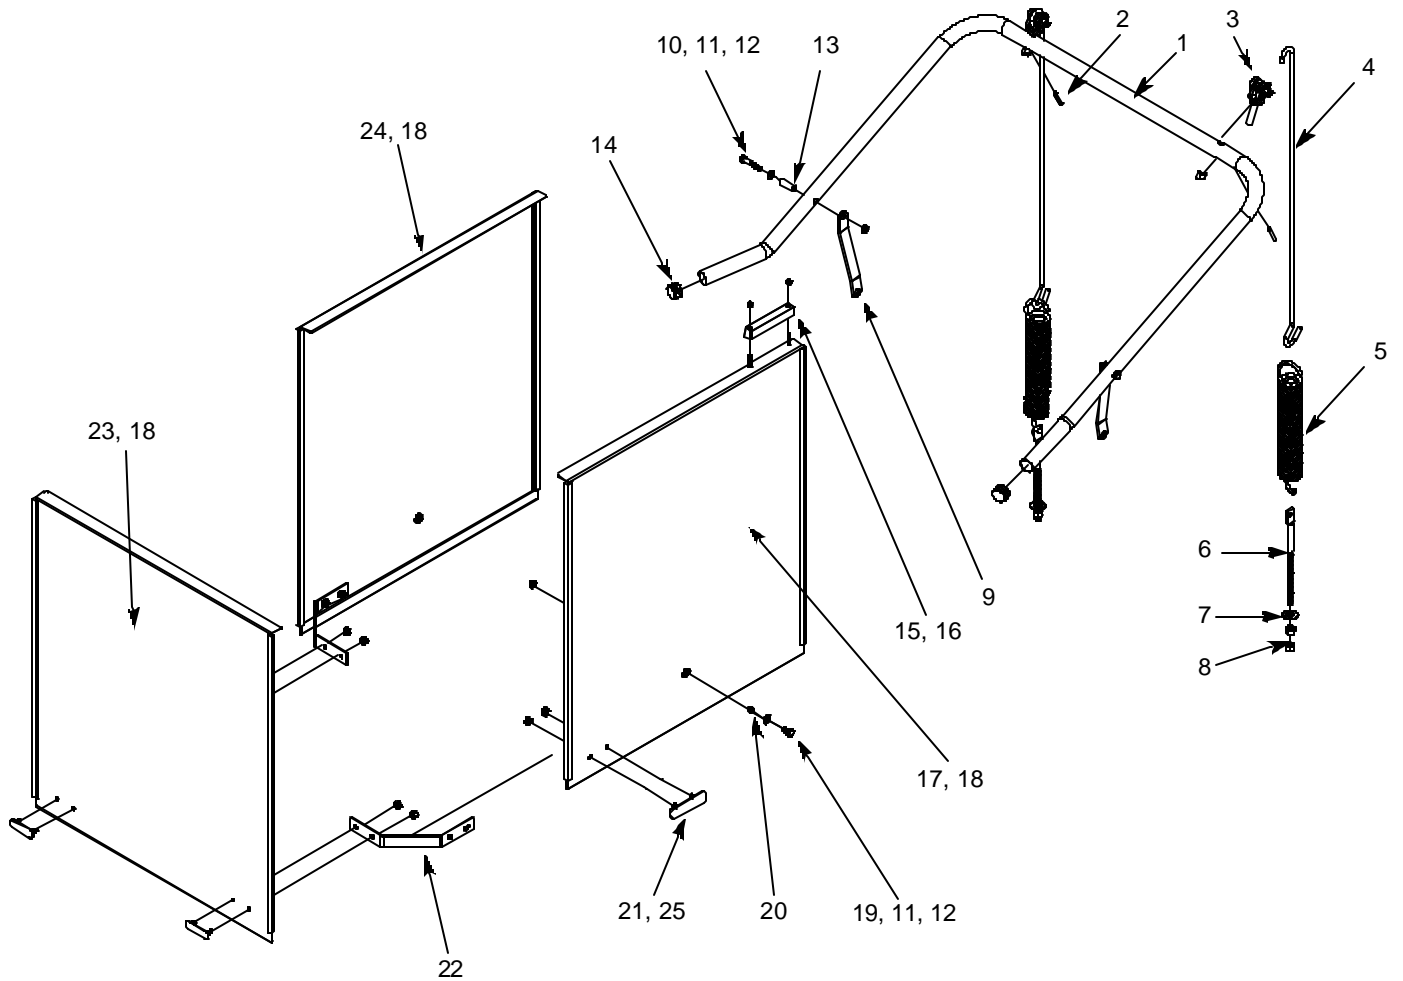


SECTION 6: PARTS SECTION

CANTILEVER ARM/DOOR ASSEMBLIES TEMPSTAR GPX (CONTINUED)

| ITEM | QTY | DESCRIPTION | Mfg. No. |
|------|-----|--|-----------------|
| 1 | 1 | Cantilever Arm | 05700-031-50-67 |
| 2 | 2 | Spring Pin, 1/4" x 1 1/8" | 05315-407-06-00 |
| 3 | 2 | Yoke Assembly | 05700-000-75-77 |
| 4 | 2 | Rod, Spring | 05700-002-29-38 |
| 5 | 2 | Spring | 05340-109-02-00 |
| 6 | 2 | Bolt, Cantilever Hanger Eye 3/8"-16 | 05306-956-05-00 |
| 7 | 2 | Washer, 3/8" ID x 7/8" OD S/S | 05311-176-02-00 |
| 8 | 4 | Nut, 3/8"-16 S/S Hex | 05310-276-01-00 |
| 9 | 2 | Connector, Cantilever Arm | 05700-011-90-99 |
| 10 | 2 | Screw 1/4"-20 x 1 1/2" Long S/S | 05305-274-23-00 |
| 11 | 4 | Washer, 1/4" S/S | 05311-174-01-00 |
| 12 | 4 | Locknut, 1/4"-20 S/S Hex with Nylon Insert Low Profile | 05310-374-02-00 |
| 13 | 2 | Sleeve, Cantilever Arm | 05700-000-85-69 |
| 14 | 2 | Plug, Cantilever Arm | 05340-011-35-00 |
| 15 | 1 | Magnet, Reed Switch | 05930-111-51-68 |
| 16 | 2 | Locknut, 8-32 S/S Hex with Nylon Insert | 05310-272-02-00 |
| 17 | 1 | Door, Right Side (Complete Assembly) | 05700-002-30-88 |
| 17A | 1 | Right Door Weldment with Studs | 05700-002-29-85 |
| 18 | 6 | Door, Guides | 05700-111-33-59 |
| 19 | 2 | Screw, 1/4"-20 x 1/2" Long S/S | 05305-274-02-00 |
| 20 | 2 | Spacer, PB Bolt | 05700-000-29-40 |
| 21 | 4 | Door Plate | 05700-002-20-78 |
| 22 | 2 | Door Connector Bracket | 05700-021-33-39 |
| 23 | 1 | Door, Front (Complete Assembly) | 05700-002-30-89 |
| 23A | 1 | Door Only, Front | 05700-002-29-83 |
| 24 | 1 | Door, Left Side (Complete Assembly) | 05700-002-30-87 |
| 24A | 1 | Door Only, Left Side | 05700-002-29-86 |
| 25 | 8 | Locknut, 1/4"-20 with Nylon Insert | 05310-374-02-00 |

SECTION 6: PARTS SECTION

CANTILEVER ARM/DOOR ASSEMBLIES TEMPSTAR HH GPX

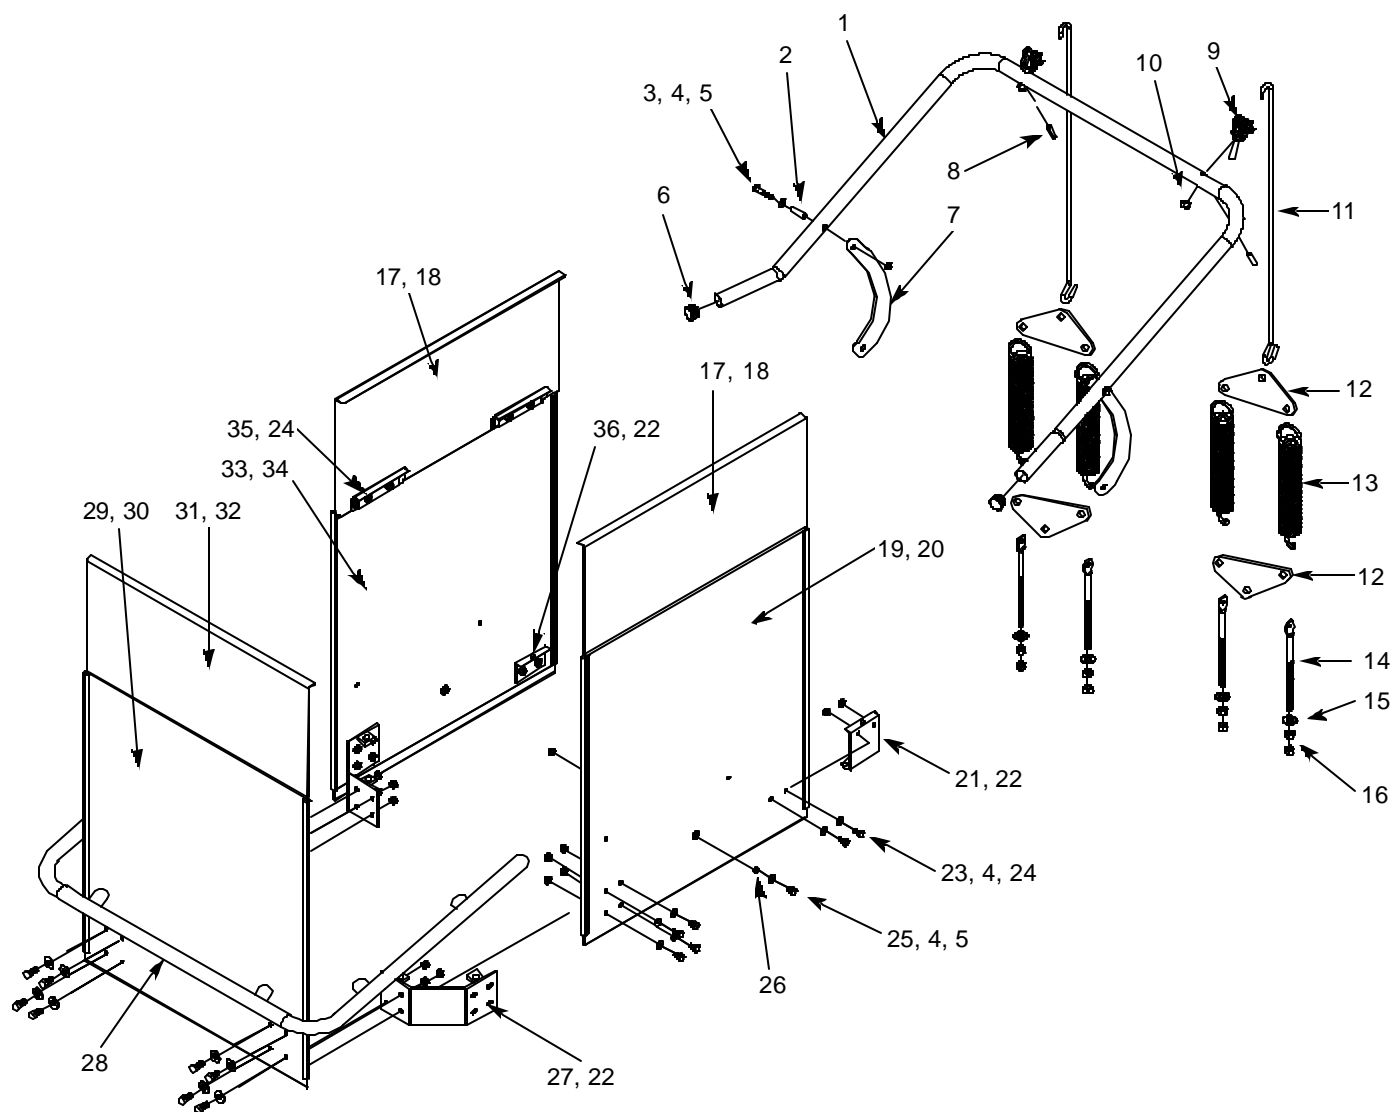

SECTION 6: PARTS SECTION


CANTILEVER ARM/DOOR ASSEMBLIES TEMPSTAR HH GPX (CONTINUED)

| ITEM | QTY | DESCRIPTION | Mfg. No. |
|------|-----|--|-----------------|
| 1 | 1 | Cantilever Arm | 05700-031-92-44 |
| 2 | 2 | Sleeve, Cantilever Arm | 05700-000-85-69 |
| 3 | 2 | Screw, 1/4"-20 x 1 1/2" Long Hex Head | 05305-274-23-00 |
| 4 | 4 | Washer, 1/4" ID S/S | 05311-174-01-00 |
| 5 | 4 | Locknut, 1/4"-20 S/S Low Profile with Nylon Insert | 05310-374-02-00 |
| 6 | 4 | Plug, Cantilever | 05340-011-35-00 |
| 7 | 2 | Connecting Link | 05700-021-92-45 |
| 8 | 2 | Spring Pin, 1/4" Dia. x 1 1/8" Long | 05315-407-06-00 |
| 9 | 2 | Yoke Assembly | 05700-000-75-77 |
| 10 | 2 | Nut, 3/8"-16 S/S Hex Locking | 05310-256-04-00 |
| 11 | 2 | Rod, Spring Connecting | 05700-002-00-91 |
| 12 | 4 | Plate, Spring Multiplier | 05700-002-00-88 |
| 13 | 4 | Spring, Cantilever Door | 05340-111-35-22 |
| 14 | 4 | Bolt, Cantilever Hanger Eye 3/8"-16 | 05306-956-05-00 |
| 15 | 4 | Washer, Impeller | 05311-176-02-00 |
| 16 | 8 | Nut, 3/8"-16 S/S Hex | 05310-276-01-00 |
| * | 2 | Door, Upper, Left and Right Assemblies | 05700-002-01-30 |
| 17 | 2 | Door, Upper, Left and Right Weldment | 05700-002-29-59 |
| 18 | 4 | Glide, Upper Door | 05700-002-00-83 |
| * | 1 | Door, Lower, Right Assembly | 05700-002-01-33 |
| 19 | 1 | Door, Lower, Right | 05700-031-76-80 |
| 20 | 2 | Glide, Lower Door | 05700-002-23-64 |
| 21 | 1 | Door Stop Magnet Assembly | 05700-002-25-08 |
| * | 1 | Door Stop Magnet Weldment | 05700-002-01-27 |
| * | 1 | Magnet | 05930-111-69-25 |
| * | 2 | End Cap | 05700-011-60-92 |
| 22 | 6 | Wear Button | 05700-011-88-01 |
| 23 | 20 | Screw, 1/4"-20 x 5/8" | 05305-274-24-00 |
| 24 | 20 | Locknut, 1/4"-20 S/S Hex with Nylon Insert | 05310-374-01-00 |
| 25 | 2 | Screw, 1/4"-20 x 1/2" Long Hex Head | 05305-274-02-00 |
| 26 | 2 | Spacer, PB Bolt | 05700-000-29-40 |
| 27 | 2 | Bracket, Door Connector | 05700-001-99-39 |
| 28 | 1 | Handle, Front Door Weldment | 05700-002-00-90 |
| * | 1 | Door, Lower, Front Assembly | 05700-002-01-31 |
| 29 | 1 | Door, Lower, Front | 05700-031-76-77 |
| 30 | 2 | Glide, Lower Door | 05700-002-23-64 |
| * | 1 | Door, Upper Front Assembly | 05700-002-24-92 |
| 31 | 1 | Door, Upper, Front Weldment | 05700-002-29-57 |
| 32 | 2 | Glide, Upper Door | 05700-002-00-83 |
| * | 1 | Door, Lower, Left Assembly | 05700-002-01-32 |
| 33 | 1 | Door, Lower, Left | 05700-031-76-79 |
| 34 | 2 | Glide, Lower Door | 05700-002-23-64 |
| 35 | 6 | Door Stop Weldment | 05700-002-29-60 |
| 36 | 1 | Door Stop | 05700-002-00-84 |

SECTION 6: PARTS SECTION


INLET PLUMBING ASSEMBLIES

TEMPSTAR GPX

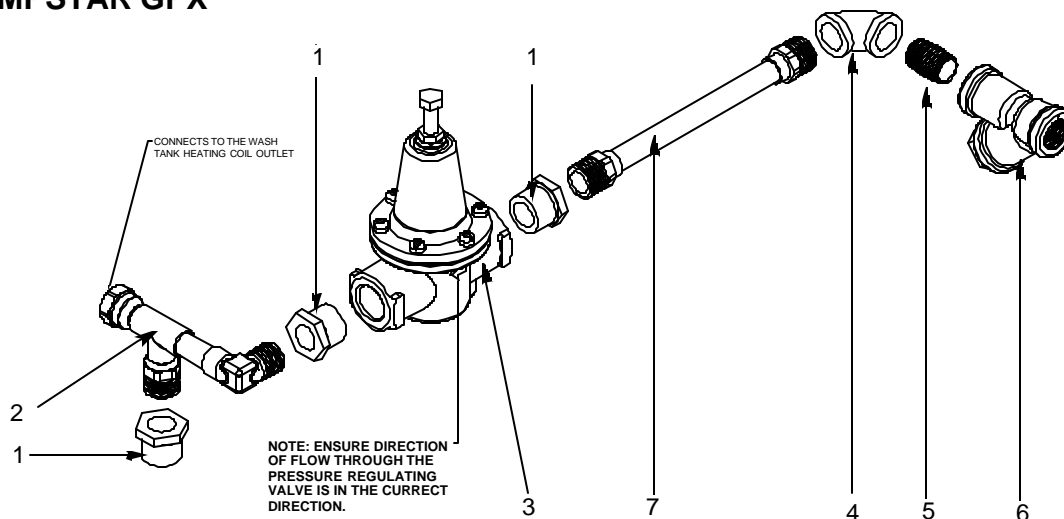

| ITEM | QTY | DESCRIPTION | Mfg. No. |
|------|-----|--------------------------------------|-----------------|
| * | 1 | Plumbing, Inlet, Tempstar GPX | 05700-002-56-69 |
| 1 | 3 | Bushing, Hex 3/4" M to 1/2" F, Brass | 04730-002-56-27 |
| 2 | 1 | Outlet, Heating Coil Assembly | 05700-002-56-70 |
| 3 | 1 | Valve, Pressure Reducing, 3/4" | 04820-002-51-53 |
| 4 | 1 | Elbow, 90° 1/2" Street Brass | 04730-206-08-00 |
| 5 | 1 | Nipple, 1/2" Close Brass | 04730-207-15-00 |
| 6 | 1 | Y-Strainer, 1/2" | 04730-217-01-10 |
| 7 | 1 | Tubing, Inlet Plumbing Assembly | 05700-002-56-71 |

TEMPSTAR HH GPX

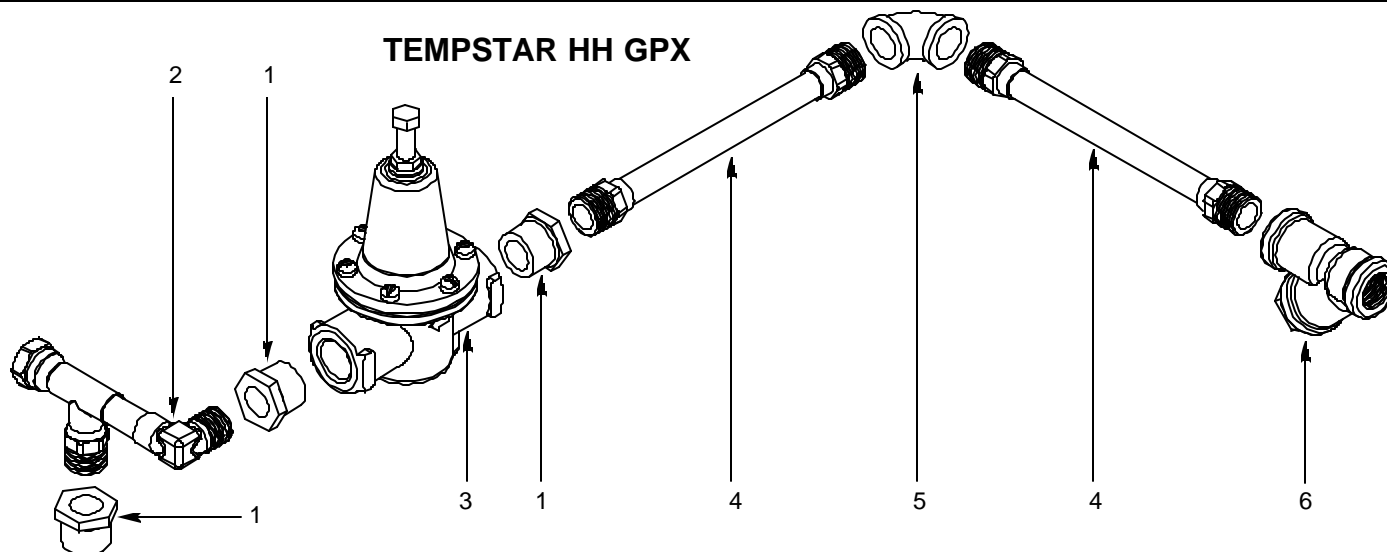

| ITEM | QTY | DESCRIPTION | Mfg. No. |
|------|-----|--------------------------------------|-----------------|
| * | 1 | Plumbing, Inlet, Tempstar HH GPX | 05700-002-63-16 |
| 1 | 3 | Bushing, Hex 3/4" M to 1/2" F, Brass | 04730-002-56-27 |
| 2 | 1 | Outlet, Heating Coil Assembly | 05700-002-56-70 |
| 3 | 1 | Valve, Pressure Reducing, 3/4" | 04820-002-51-53 |
| 4 | 2 | Tubing, Inlet Plumbing Assembly | 05700-002-56-71 |
| 5 | 1 | Elbow, 90° 1/2" | 04730-406-32-01 |
| 6 | 1 | Y-Strainer, 1/2" | 04730-217-01-10 |


SECTION 6: PARTS SECTION

RINSE HEADER PLUMBING ASSEMBLY

Rinse Header Plumbing Assembly, Tempstar GPX
Rinse Header Plumbing Assembly, Tempstar HH GPX

05700-002-56-67
05700-002-58-02

Vacuum Breaker, 1/2"
04820-003-06-13



Rinse Tube Assembly, Tempstar GPX
05700-002-56-68


Rinse Tube Assembly, Tempstar HH GPX
05700-002-58-03



Ball Valve, 1/4"
04810-011-72-67



Pressure Gauge, 0-100 PSI
06685-111-88-34

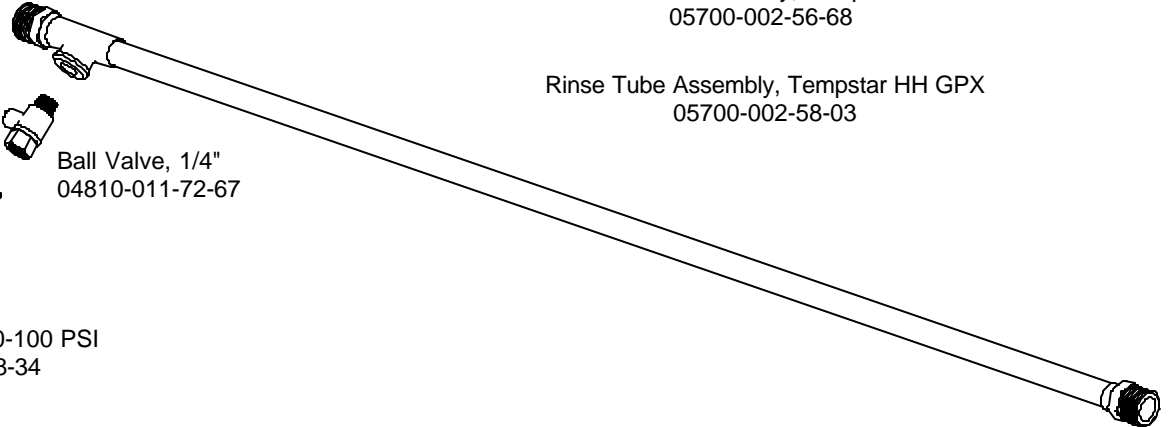


| ITEM | QTY | DESCRIPTION |
|------|-----|---------------------|
| * | 1 | Rinse Hose Assembly |
| | 1 | Hose, 1/2" x 27" |
| | 1 | Fitting, 1/2" |

| Mfg. No. |
|-----------------|
| 05700-002-57-05 |
| 05700-002-57-04 |
| 04730-011-93-99 |

SECTION 6: PARTS SECTION


RECIRCULATING PLUMBING ASSEMBLY

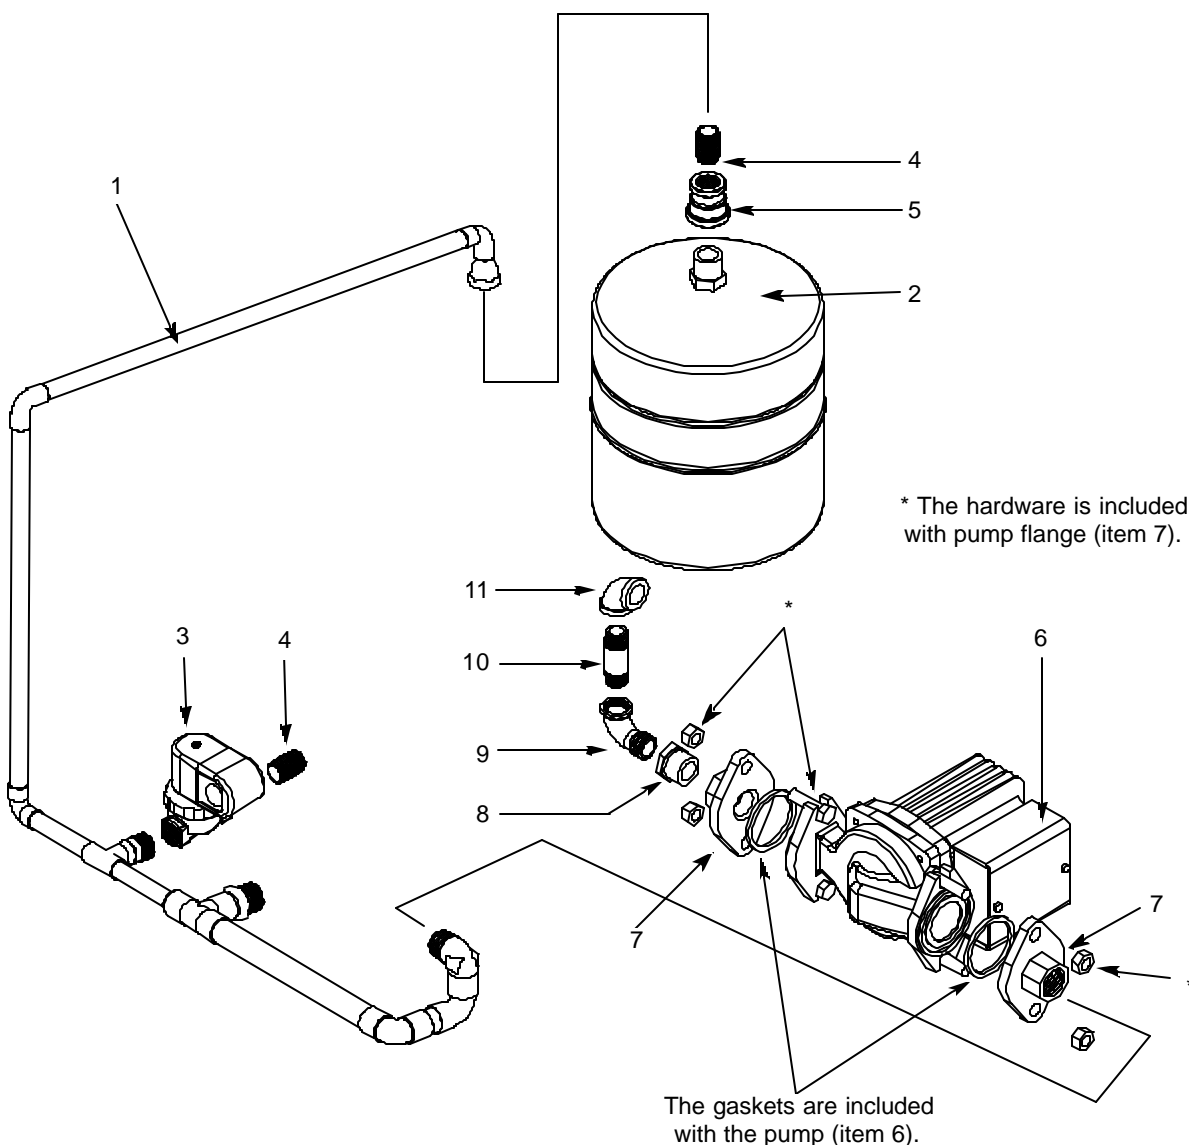

| ITEM | QTY | DESCRIPTION | Mfg. No. |
|------|-----|--|-----------------|
| * | 1 | Plumbing, 110V Recirculating System Assembly | 05700-002-56-64 |
| * | 1 | Plumbing, 208-230V Recirculating System Assembly | 05700-002-56-65 |
| 1 | 1 | Tubing Assembly | 05700-002-56-66 |
| 2 | 1 | Tank, Thermal Expansion | 05700-002-65-77 |
| 3 | 1 | Valve, Solenoid 1/2" 110 Volt | 04810-100-12-18 |
| 3 | 1 | Valve, Solenoid 1/2" 208-230 Volt | 04810-100-09-18 |
| 4 | 2 | Nipple, 1/2" Close Brass | 04730-207-15-00 |
| 5 | 1 | Coupling, 1/2" x 3/4" Brass | 04730-204-07-00 |
| 6 | 1 | Pump, 110V Recirculating | 06105-002-56-25 |
| 6 | 1 | Pump, 208-230V Recirculating | 06105-002-56-26 |
| 7 | 1 | Pump, Flange | 04320-002-38-17 |
| 8 | 1 | Bushing, Hex 3/4" M to 1/2" F Brass | 04730-002-56-27 |
| 9 | 1 | Elbow, 90° 1/2" Street Brass | 04730-206-08-00 |
| 10 | 1 | Nipple, 1/2" x 2" Brass | 04730-207-19-00 |
| 11 | 1 | Elbow, 1/2" NPT, 90° Brass | 04730-011-42-96 |

SECTION 6: PARTS SECTION

RINSE SOLENOID VALVE & VACUUM BREAKER REPAIR PARTS KITS

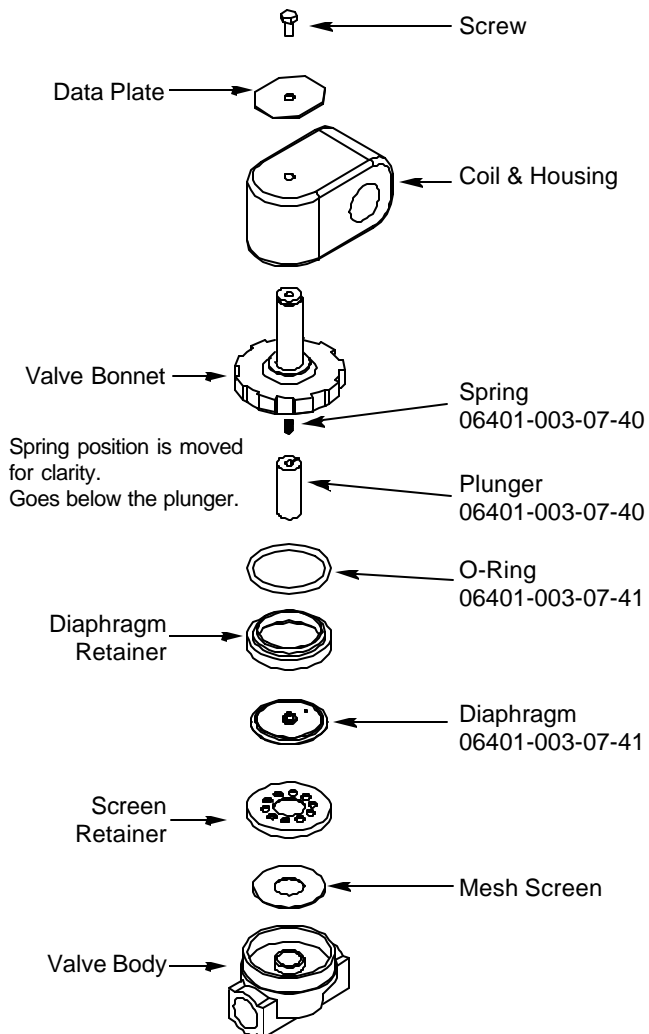

Complete 110 Volt Solenoid Valve Assembly

04810-100-12-18

Coil & Housing only


06401-003-07-43

Complete 220 Volt Solenoid Valve Assembly

04810-100-09-18


Coil & Housing only

06401-003-07-44

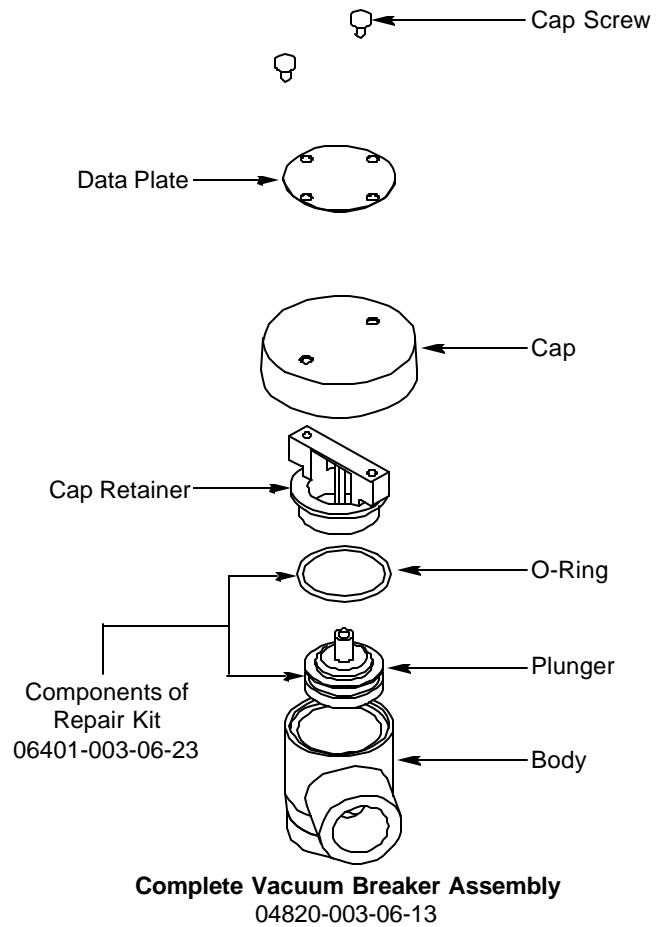


SECTION 6: PARTS SECTION

WASH & RINSE ARM/MANIFOLD ASSEMBLIES (TEMPSTAR GPX)

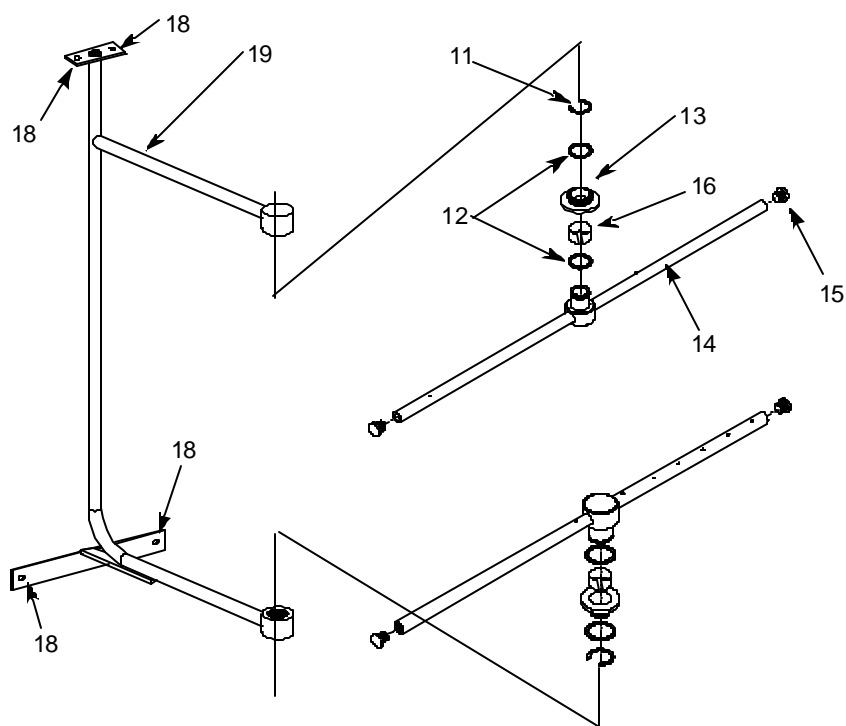


DETAIL "A"
FINAL RINSE ARMS & MANIFOLD


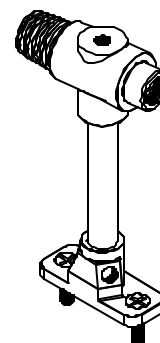


Rinse Injector Weldment
1 per machine
05700-002-56-75

Plug, 1/8" NPT, Brass
3 per Rinse Injector
04730-209-07-37

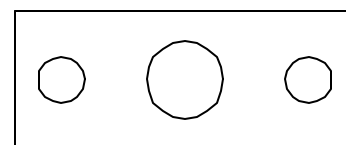

Rinse Injector Gasket
2 per machine
05330-111-42-81

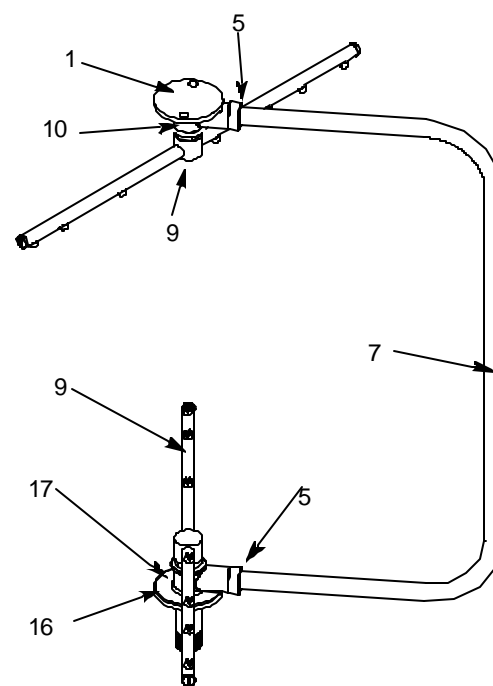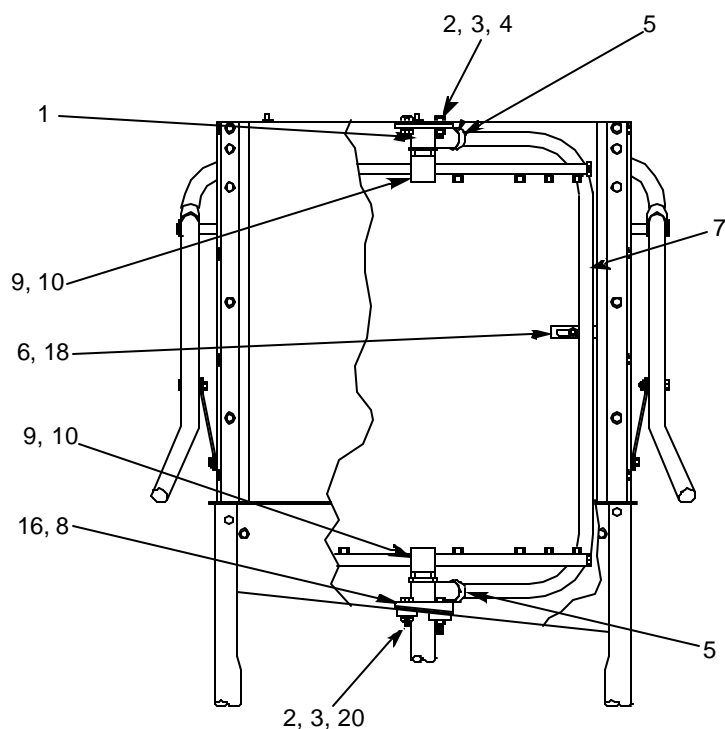


DETAIL "B"
WASH ARMS & MANIFOLD

SECTION 6: PARTS SECTION


WASH & RINSE ARM/MANIFOLD ASSEMBLIES (TEMPSTAR GPX) (CONTINUED)

| ITEM | QTY | DESCRIPTION | Mfg. No. |
|------|-----|--|-----------------|
| 1 | 1 | Upper Manifold | 05700-031-34-82 |
| 2 | 4 | Nut, 3/8"-16 S/S Hex | 05310-276-01-00 |
| 3 | 4 | Lockwasher, 3/8 | 05311-276-01-00 |
| 4 | 2 | Bolt, Hex 3/8"-16 x 7/8" Long | 05306-011-36-95 |
| 5 | 2 | O Ring | 05330-111-35-15 |
| 6 | 1 | Positioning Bracket, Manifold Tube | 05700-011-34-63 |
| 7 | 1 | Tube, Wash Manifold | 05700-031-92-58 |
| 8 | 2 | Gasket, Manifold | 05700-111-35-03 |
| * | 1 | Wash Arm Assembly | 05700-021-35-39 |
| 9 | 1 | Wash Arm Weldment | 05700-021-35-93 |
| 9a | 1 | Hub Nut | 05700-011-35-94 |
| 9b | 1 | Hub Bushing | 05700-011-35-96 |
| 9c | 1 | Hub Spindle | 05700-011-35-95 |
| 9d | 1 | Ring, Retainer | 05340-011-37-81 |
| 9e | 15 | 3/16" Stainless Steel Ball | 03120-100-02-00 |
| 9f | 20 | 1/8" Stainless Steel Ball | 03120-011-37-82 |
| 10 | 1 | Bearing Assembly | 05700-021-35-97 |
| * | 1 | O-ring | 05330-002-60-69 |
| * | 2 | Rinse Arm Assembly | 05700-002-58-09 |
| 11 | 2 | Clip, Retaining, Rinse Head Bushing | 05340-112-01-11 |
| 12 | 4 | Washer | 05330-011-42-10 |
| 13 | 2 | Bushing, Rinse Head | 05700-021-33-84 |
| 14 | 2 | Rinse Arm | 05700-031-49-58 |
| 15 | 4 | Plug | 04730-609-04-00 |
| 16 | 2 | Bearing | 03120-002-72-24 |
| 17 | 1 | Lower Wash Manifold Weldment | 05700-002-21-70 |
| 18 | 5 | Locknut, 1/4"-20 S/S Hex with Nylon Insert | 05310-374-01-00 |
| 19 | 1 | Rinse Manifold Weldment | 05700-002-01-19 |
| 20 | 2 | Bolt, Hex 3/8"-16 x 1 1/4" Long | 05305-276-10-00 |
| 21 | 1 | Wash Arm, Double Assembly | 05700-031-92-49 |

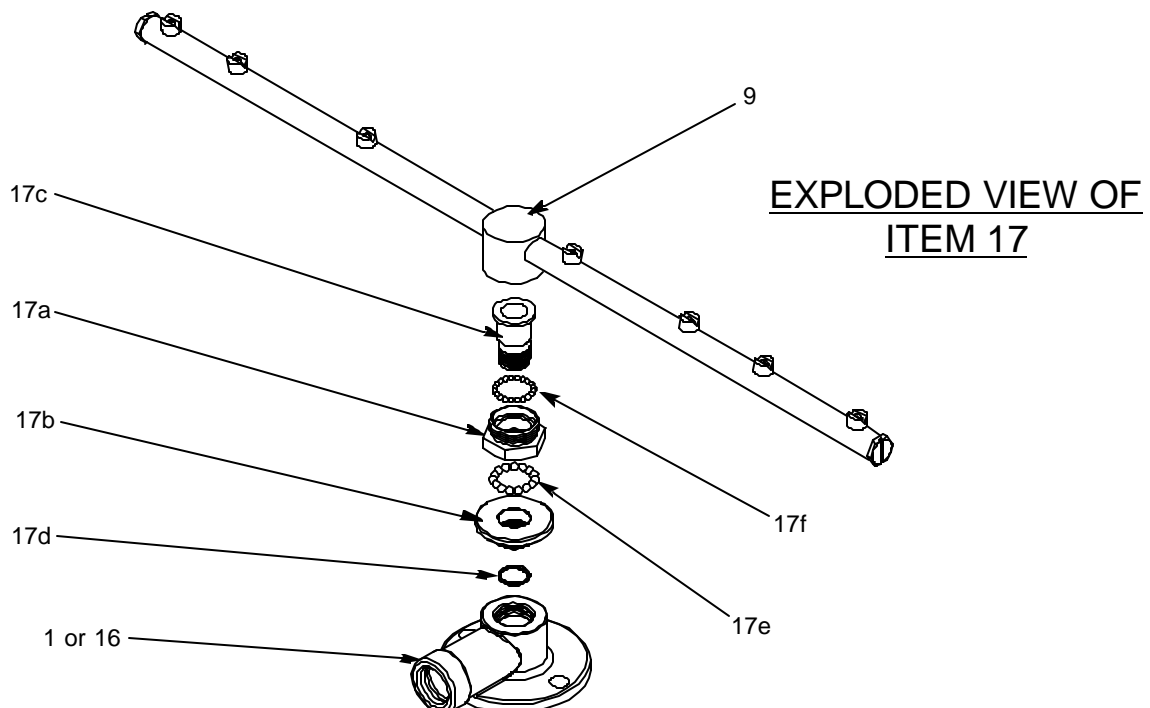


SECTION 6: PARTS SECTION

WASH & RINSE ARM/MANIFOLD ASSEMBLIES (TEMPSTAR HH GPX)


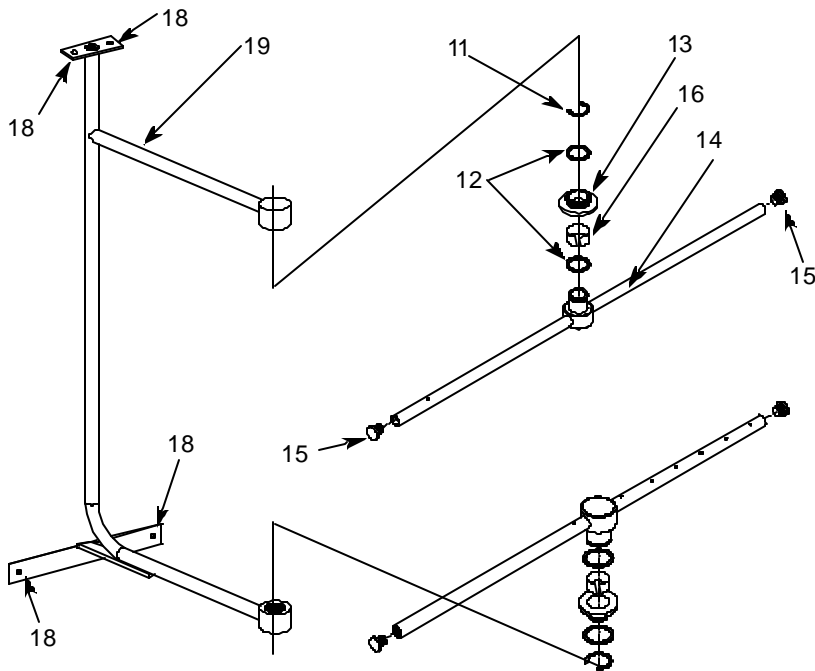


DETAIL "A"
FINAL RINSE ARMS & MANIFOLD

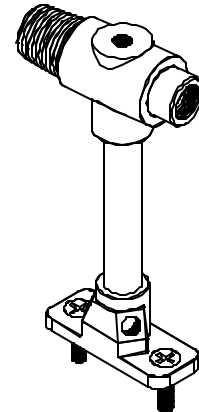

Rinse Injector Weldment
1 per machine
05700-002-56-75

Plug, 1/8" NPT, Brass
3 per Rinse Injector
04730-209-07-37

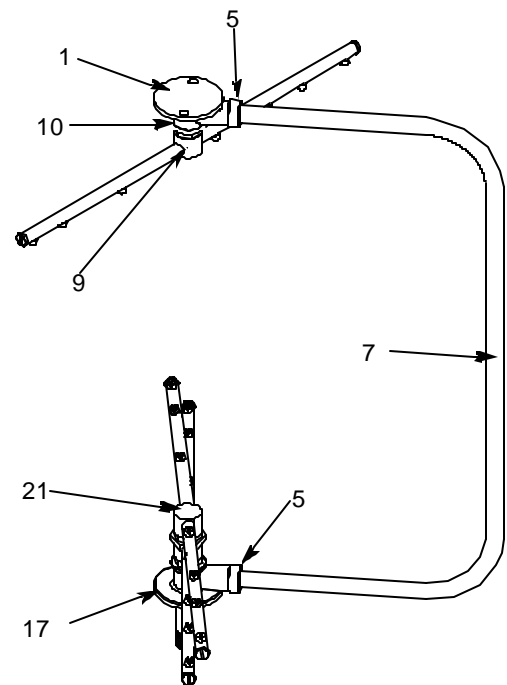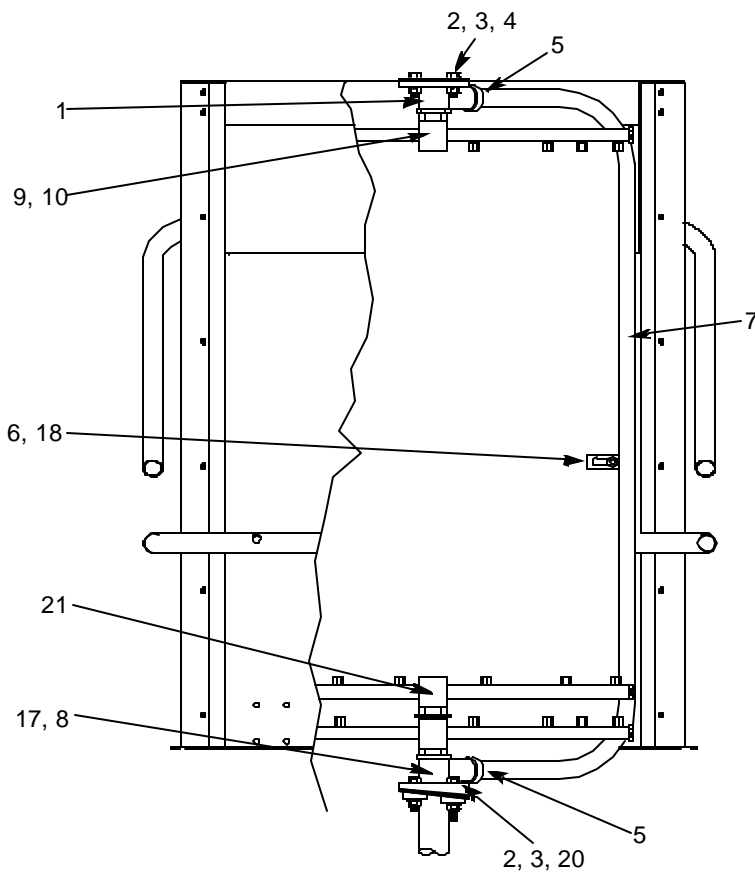


DETAIL "B"
WASH ARMS & MANIFOLD

SECTION 6: PARTS SECTION

WASH & RINSE ARM/MANIFOLD ASSEMBLIES (TEMPSTAR HH GPX) (CONTINUED)


| ITEM | QTY | DESCRIPTION | Mfg. No. |
|------|-----|--|-----------------|
| 1 | 1 | Upper Manifold | 05700-031-34-82 |
| 2 | 4 | Nut, 3/8"-16 S/S Hex | 05310-276-01-00 |
| 3 | 4 | Lockwasher, 3/8 | 05311-276-01-00 |
| 4 | 2 | Bolt, Hex 3/8"-16 x 7/8" Long | 05306-011-36-95 |
| 5 | 2 | O Ring | 05330-111-35-15 |
| 6 | 1 | Positioning Bracket, Manifold Tube | 05700-011-34-63 |
| 7 | 1 | Tube, Wash Manifold | 05700-031-92-58 |
| 8 | 2 | Gasket, Manifold | 05700-111-35-03 |
| * | 1 | Wash Arm Assembly | 05700-021-35-39 |
| 9 | 1 | Wash Arm Weldment | 05700-021-35-93 |
| 10 | 1 | Bearing Assembly | 05700-021-35-97 |
| * | 1 | O-ring | 05330-002-60-69 |
| * | 2 | Rinse Arm Assembly | 05700-002-58-09 |
| 11 | 2 | Clip, Retaining, Rinse Head Bushing | 05340-112-01-11 |
| 12 | 4 | Washer | 05330-011-42-10 |
| 13 | 2 | Bushing, Rinse Head | 05700-021-33-84 |
| 14 | 2 | Rinse Arm | 05700-031-49-58 |
| 15 | 4 | Plug | 04730-609-04-00 |
| 16 | 2 | Bearing | 03120-002-72-24 |
| 17 | 1 | Lower Wash Manifold Weldment | 05700-002-21-70 |
| 18 | 5 | Locknut, 1/4"-20 S/S Hex with Nylon Insert | 05310-374-01-00 |
| 19 | 1 | Rinse Manifold Weldment | 05700-002-01-19 |
| 20 | 2 | Bolt, Hex 3/8"-16 x 1 1/4" Long | 05305-276-10-00 |
| 21 | 1 | Wash Arm, Double Assembly | 05700-031-92-49 |

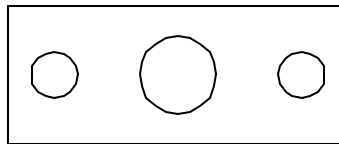

Rinse Injector Gasket
2 per machine
05330-111-42-81


SECTION 6: PARTS SECTION

COIL ASSEMBLY

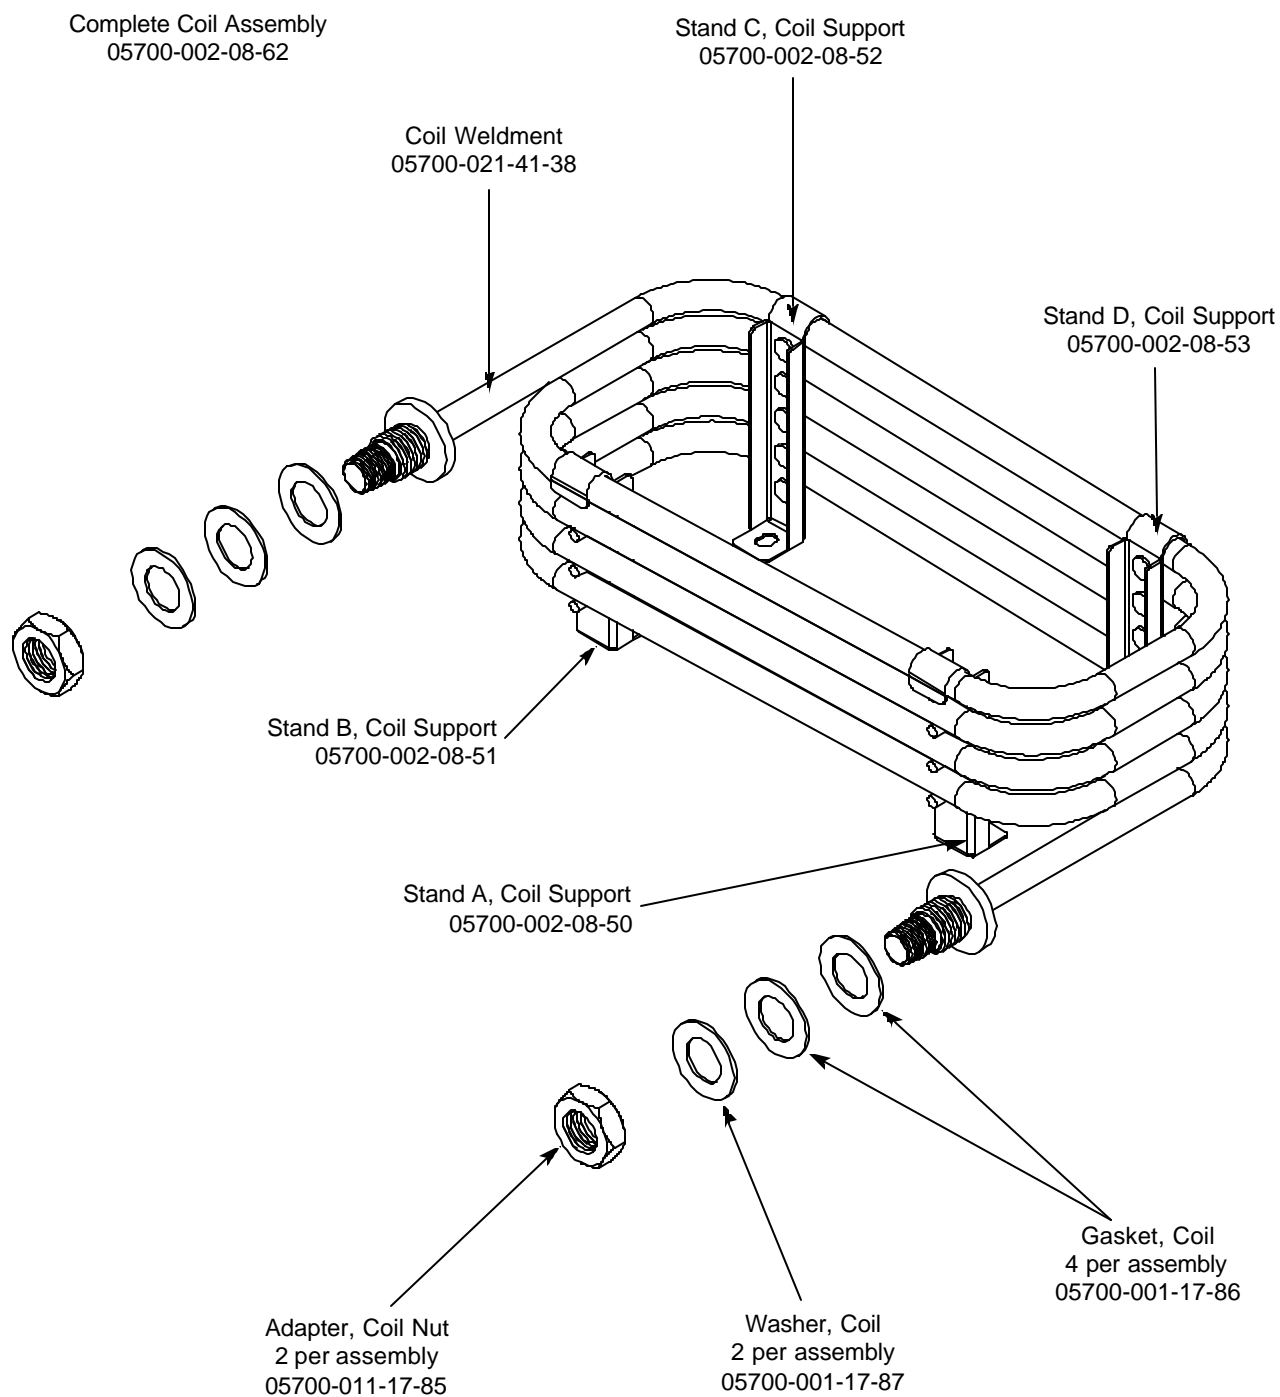


SECTION 6: PARTS SECTION


EXHAUST FAN CONTROL OPTION/SAFETY DOOR INTERLOCK (SDI) OPTION

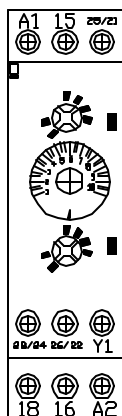


Exhaust Fan Control
Delay Timer
05945-011-65-44

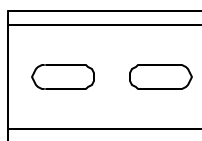


Exhaust Fan Control
2" Din Rail
05700-002-36-09

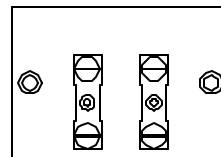

Exhaust Fan Control
Terminal Board
05940-011-84-41

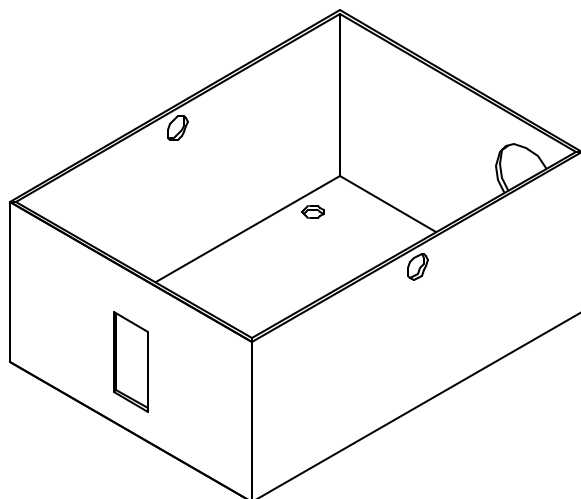

Safety Door Interlock Box Bottom
05700-001-21-26

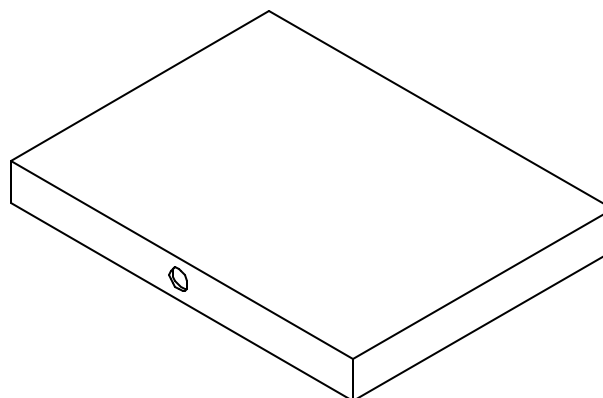

Safety Door Interlock Box Cover
05700-001-21-27


Other Safety Door Interlock (SDI) components (not shown):

Pipe Clamp (found on the side of the machine)
Solenoid, Electrical Interlock Option
Relay

05700-000-35-05
04810-100-61-33
05945-111-47-51

SECTION 6: PARTS SECTION

TEMPSTAR GPX FALSE PANEL INSTALLATION

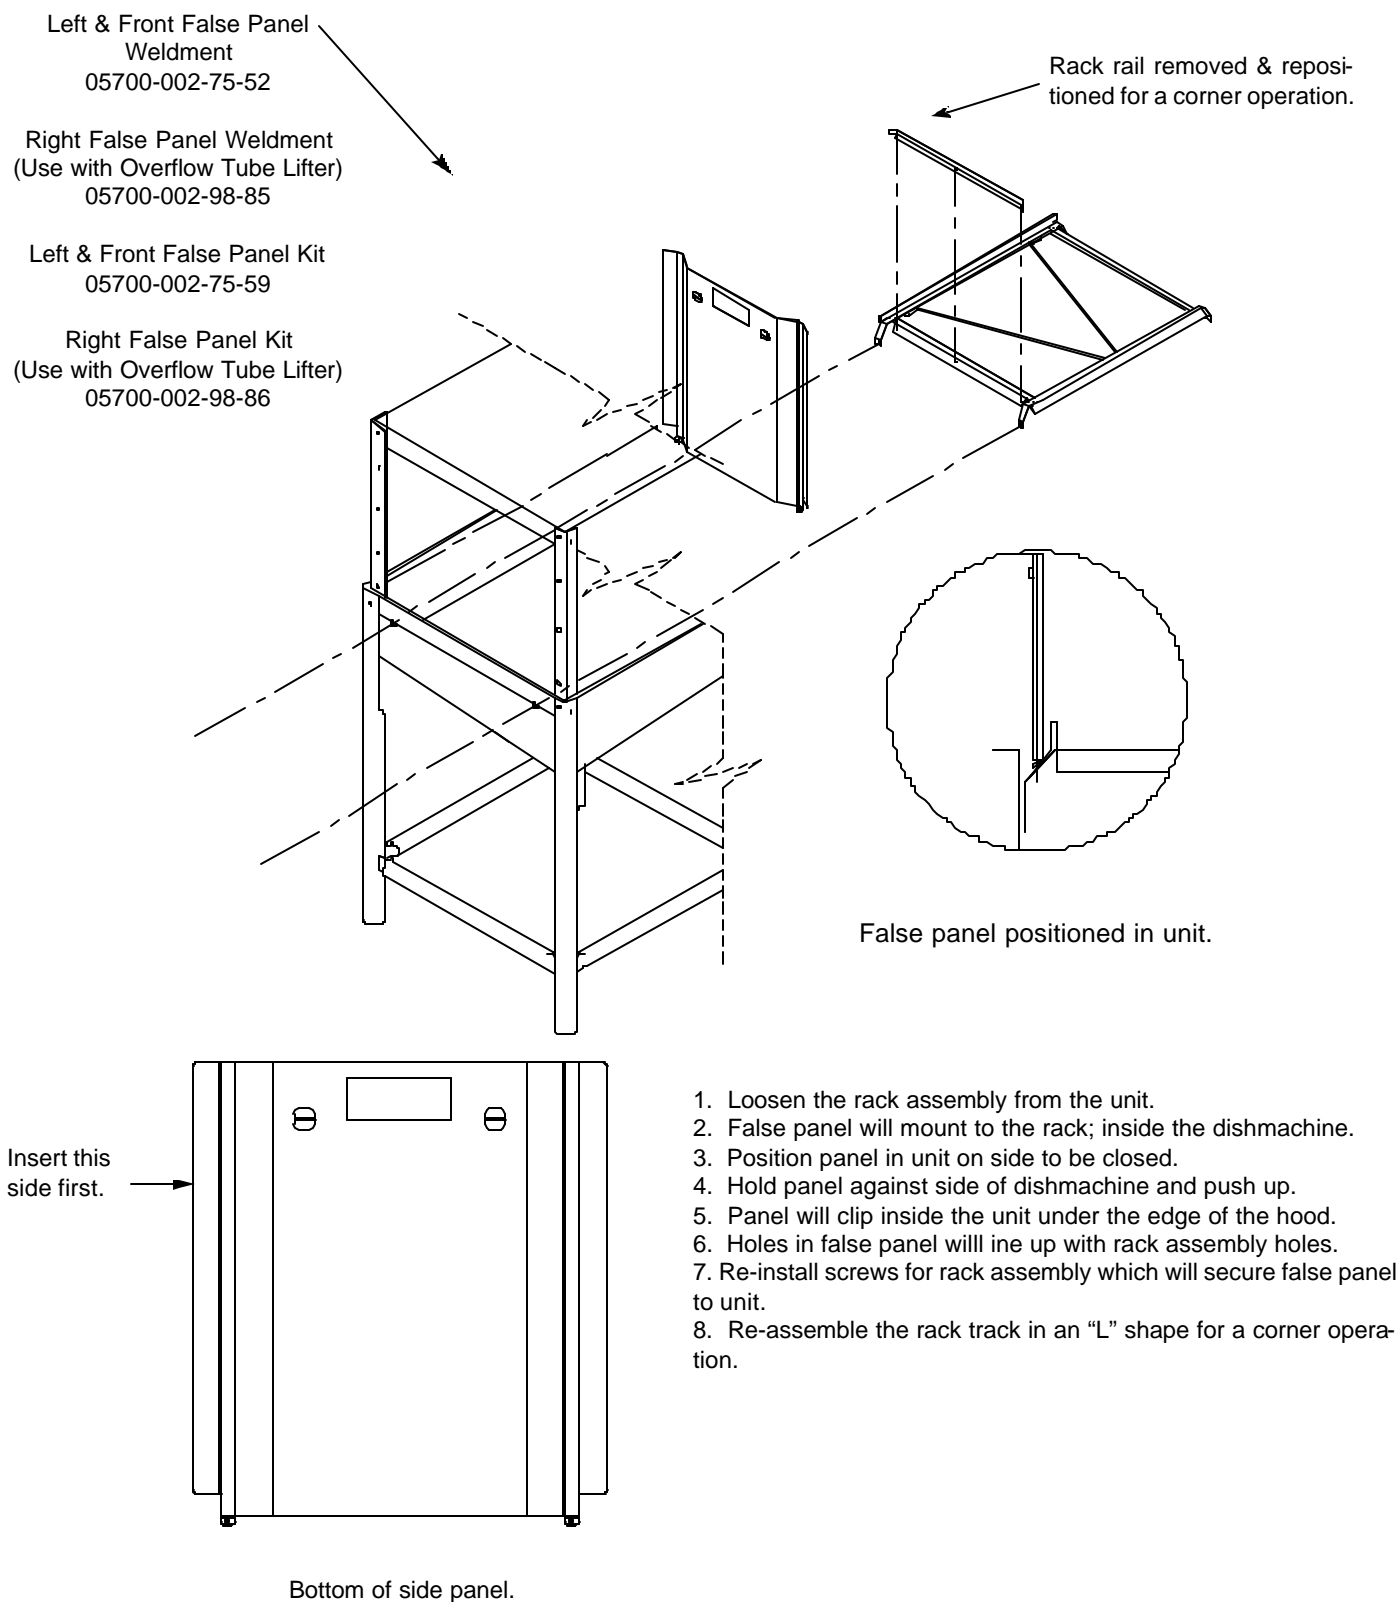


SECTION 6: PARTS SECTION

TEMPSTAR HH GPX FALSE PANEL INSTALLATION

False Panel
05700-002-52-54


Kit, False Panel with
Mounting Hardware
05700-002-52-89

Rack rail removed and repositioned for a corner operation.

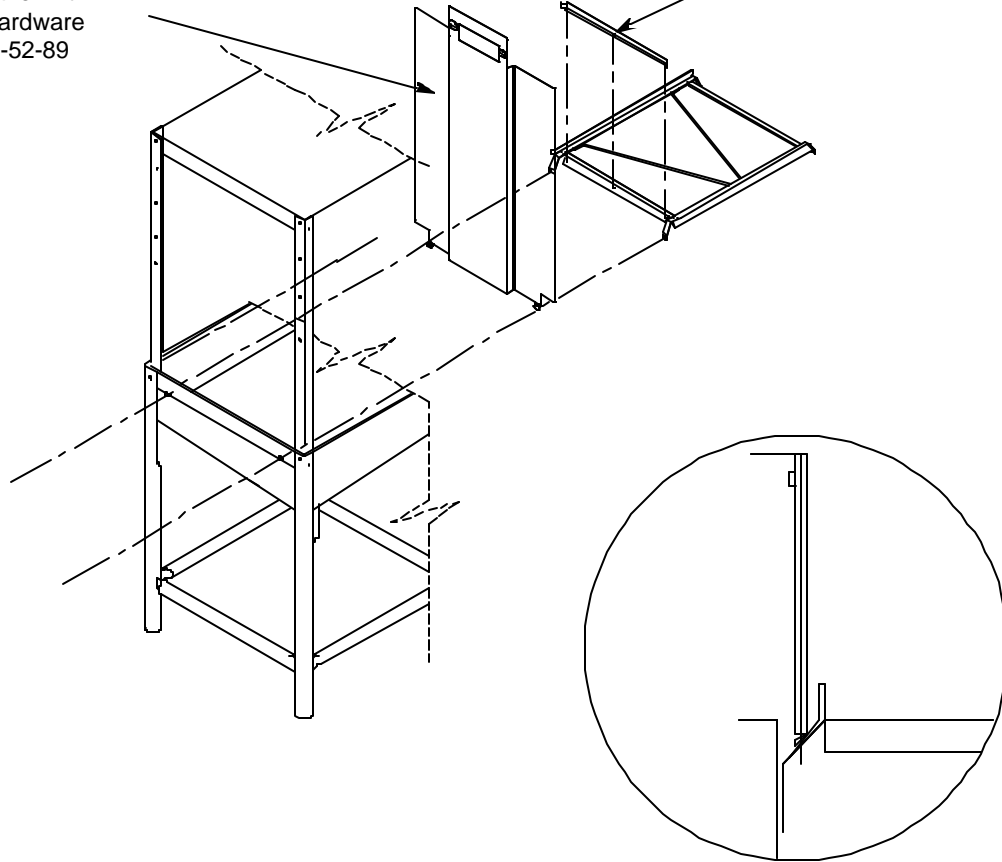

False Panel Positioned in unit.

Insert this
side first.

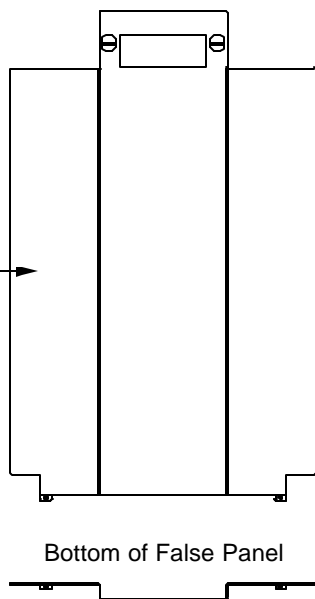


Bottom of False Panel

1. Remove the rack assembly from the dishmachine.
2. The false panel will mount inside of the dishmachine.
3. Position the panel in the dishmachine on the side to be closed.
4. Hold the panel against the side of the dishmachine and push upward.
5. The panel will clip in at the top, inside of the unit.
6. The holes in the false panel will line up with the rack assembly holes.
7. Re-install the screws for the rack assembly which will secure the false panel to the unit.
8. Re-assemble the rack track in an "L" shape for a corner operation.

SECTION 6: PARTS SECTION

DRAIN QUENCH ASSEMBLY

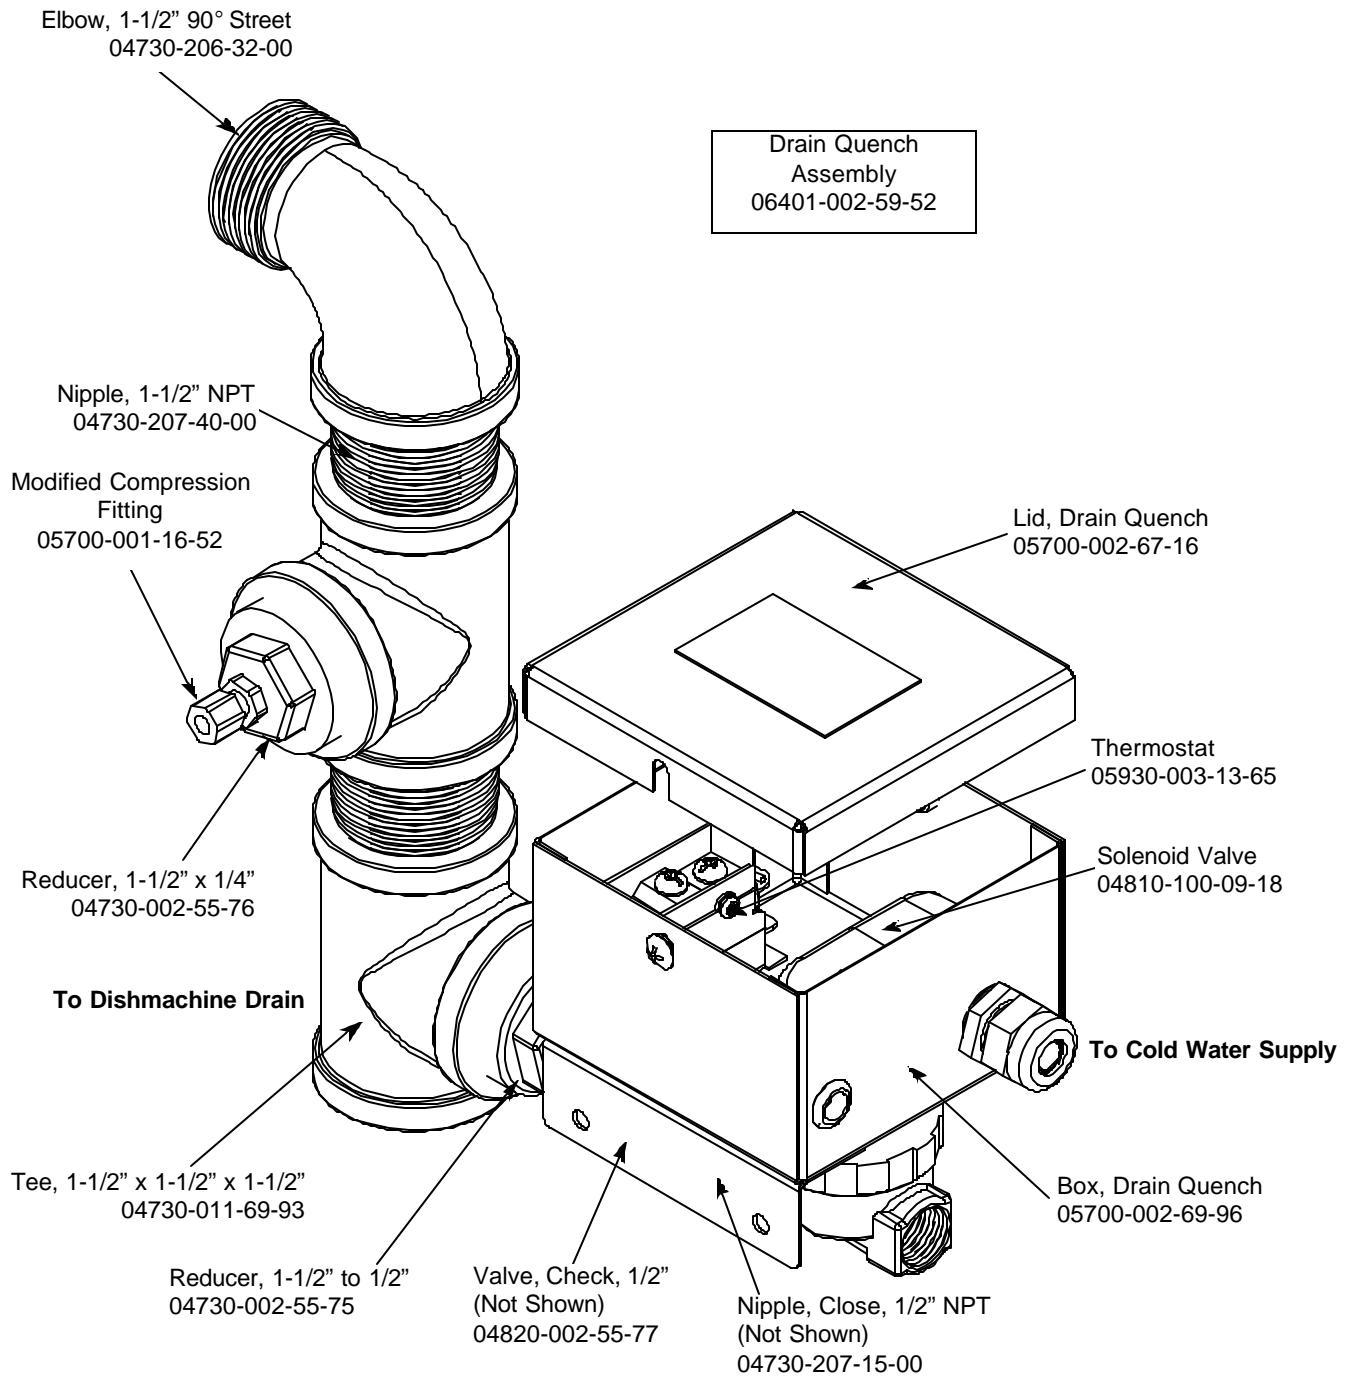

From the existing drain, attach the two additional Tees using the 1-1/2" NPT Close Nipples. Tighten the Reducers into the Tees as shown above. Attach the Modified Compression Fitting into the 1-1/2" to 1/4" Reducer. Position the bulb of the thermostat so that it rests approximately 1/4" from the bottom of the Tee. Tighten the Modified Compression Fitting as required. Attach to the incoming cold water line. Use pipe dope or thread tape as required to prevent any leaks.




SECTION 7: ELECTRICAL SCHEMATICS

SECTION 7: ELECTRICAL SCHEMATICS

TEMPSTAR GPX 115 VOLT - 50/60 HERTZ - SINGLE PHASE

LEGEND

| | |
|------|-----------------------------|
| L1 N | POWER DISTRIBUTION BLOCK |
| GND | GROUND |
| M1 | WASH PUMP MOTOR |
| P1 | CIRCULATOR PUMP |
| R1 | CONTROL RELAY |
| R2 | WASH MOTOR CONTACTOR |
| R3 | WASH TEMPERATURE RELAY |
| R4 | CIRCULATOR PUMP RELAY |
| TM | TIMER MOTOR |
| C1 | CYCLE SWITCH |
| C2 | AUTO START RESET SWITCH |
| C3 | WASH CYCLE SWITCH |
| C4 | RINSE/FILL SWITCH |
| S1 | POWER SWITCH |
| S2 | DOOR SWITCH |
| S3 | NORMAL/DELIME SWITCH |
| E1 | POWER LIGHT |
| E2 | CYCLE LIGHT |
| FS | FILL SOLENOID |
| TS | WASH THERMOSTAT SWITCH |
| WL | WATER LEVEL CONTROL |
| HP | HIGH LEVEL PROBE |
| CF | CONSTANT VOLTAGE CONNECTION |
| SF | SWITCHED VOLTAGE CONNECTION |
| RF | RINSE AID CONNECTION |
| DF | DETERGENT CONNECTION |

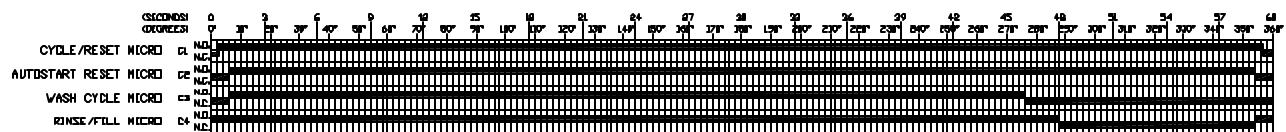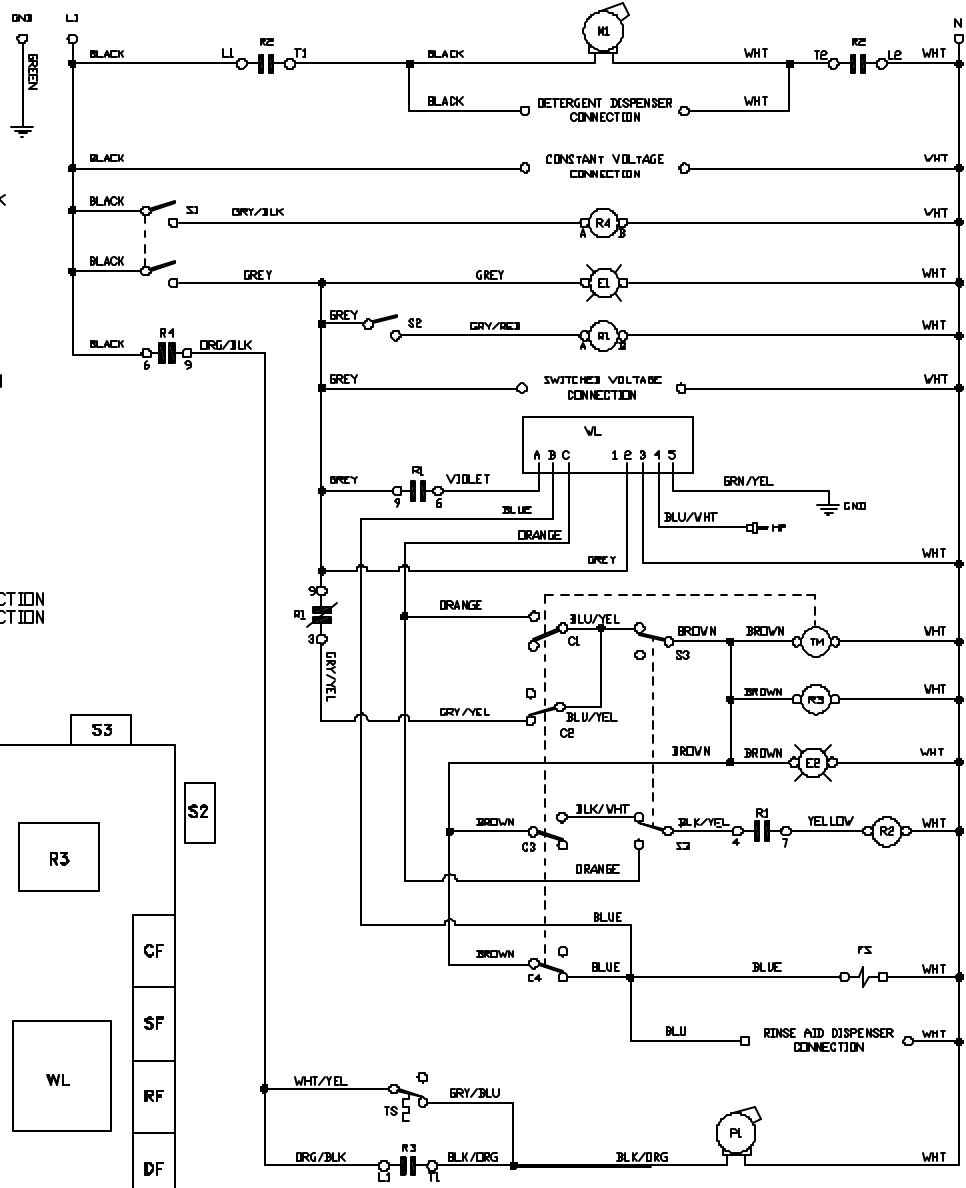
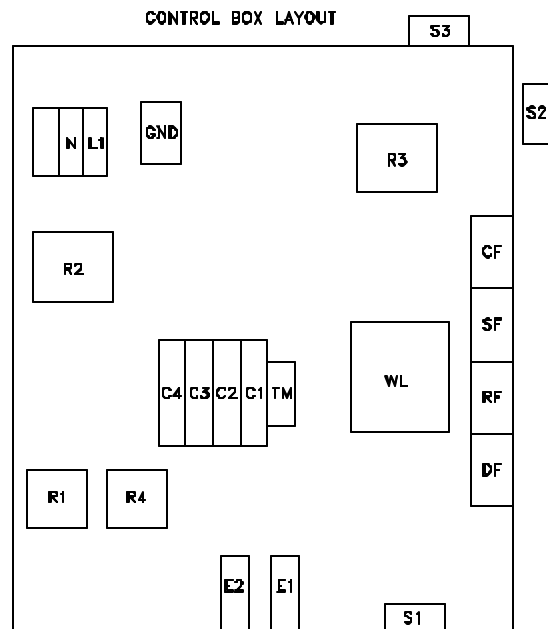


SECTION 7: ELECTRICAL SCHEMATICS

TEMPSTAR GPX 208-230 VOLT - 50/60 HERTZ - SINGLE PHASE

LEGEND

| | |
|-------|-----------------------------|
| L1 L2 | POWER DISTRIBUTION BLOCK |
| GND | GROUND |
| M1 | WASH PUMP MOTOR |
| P1 | CIRCULATOR PUMP |
| R1 | CONTROL RELAY |
| R2 | WASH MOTOR CONTACTOR |
| R3 | WASH TEMPERATURE RELAY |
| R4 | CIRCULATOR PUMP RELAY |
| TM | TIMER MOTOR |
| C1 | CYCLE SWITCH |
| C2 | AUTO START RESET SWITCH |
| C3 | WASH CYCLE SWITCH |
| C4 | RINSE/FILL SWITCH |
| S1 | POWER SWITCH |
| S2 | DOOR SWITCH |
| S3 | NORMAL/DELIME SWITCH |
| E1 | POWER LIGHT |
| E2 | CYCLE LIGHT |
| FS | FILL SOLENOID |
| TS | WASH THERMOSTAT SWITCH |
| VL | WATER LEVEL CONTROL |
| HP | HIGH LEVEL PROBE |
| CF | CONSTANT VOLTAGE CONNECTION |
| SF | SWITCHED VOLTAGE CONNECTION |
| RF | RINSE AID CONNECTION |
| DF | DETERGENT CONNECTION |

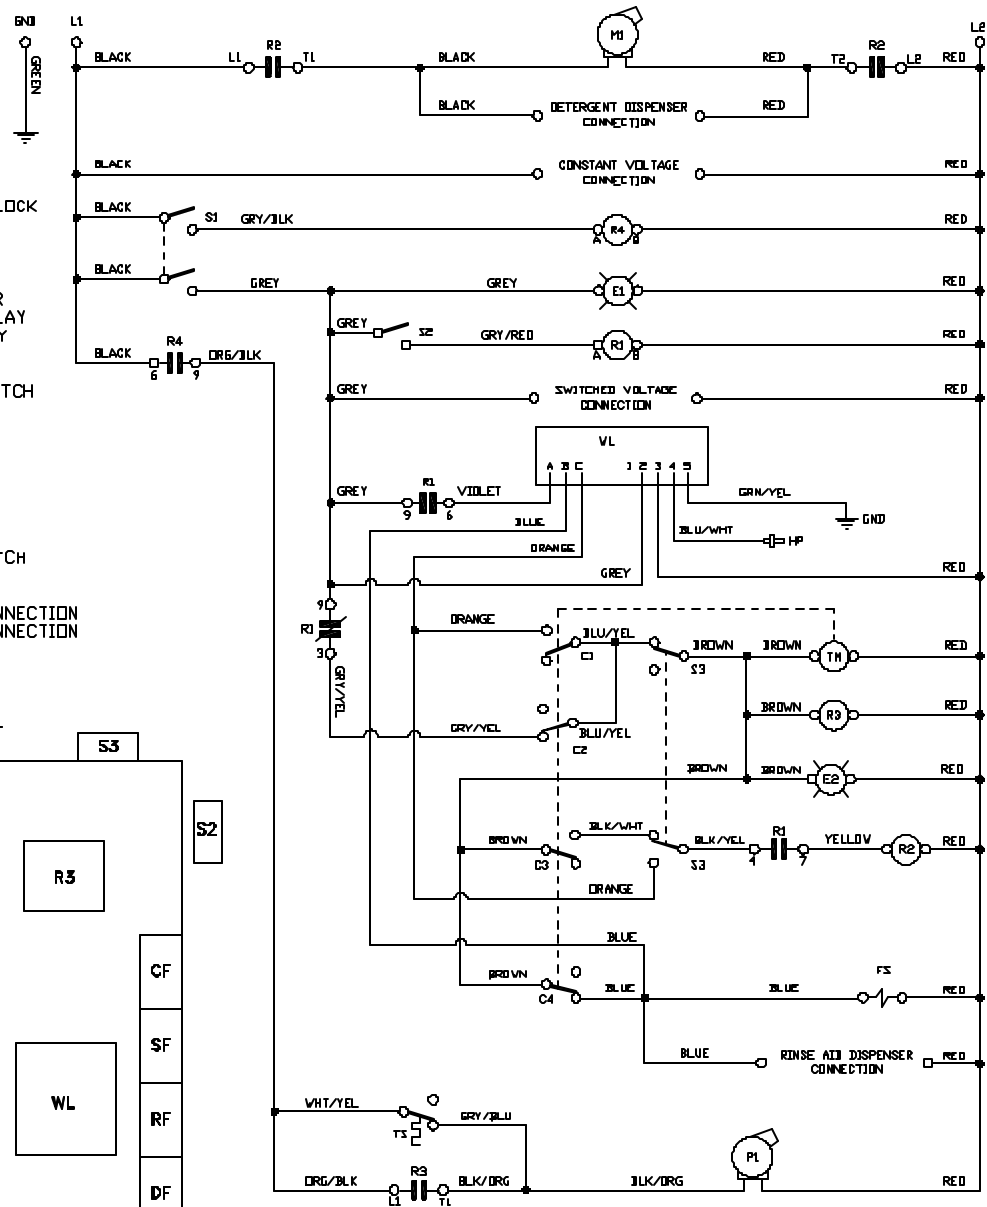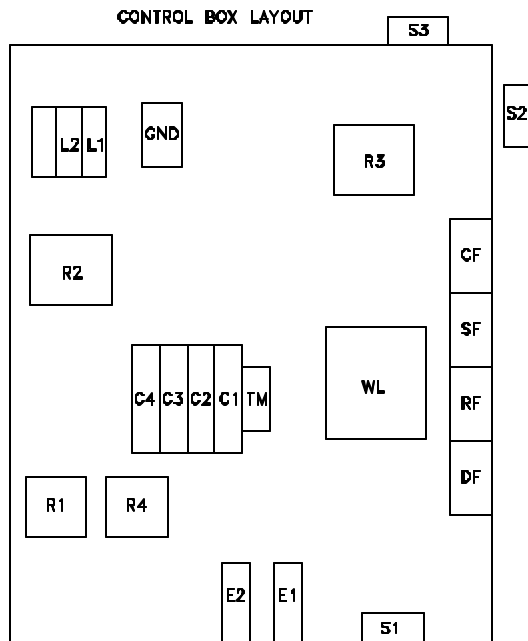


| | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 |
|------------------------|---|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| CYCLE/RESET MICRO | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 |
| AUTO START RESET MICRO | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 |
| WASH CYCLE MICRO | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 |
| RINSE/FILL MICRO | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 |

TEMPSTAR HH GPX 115 VOLT - 50/60 HERTZ - SINGLE PHASE

115 VOLT 50/60 HERTZ 1 PHASE

| | |
|-----|-----------------------------|
| 1 N | POWER DISTRIBUTION BLOCK |
| GND | CHASSIS GROUND |
| M1 | WASH PUMP MOTOR |
| P1 | CIRCULATOR PUMP |
| R1 | CONTROL RELAY |
| R2 | WASH MOTOR CONTACTOR |
| R3 | WASH TEMPERATURE RELAY |
| S1 | POWER SWITCH |
| S2 | DOOR SWITCH |
| S3 | NORMAL/DELTIME SWITCH |
| S4 | CYCLE SELECTOR |
| C1 | CYCLE SWITCH |
| C2 | AUTO START RESET SWITCH |
| C3 | WASH CYCLE SWITCH |
| C4 | RINSE/FILL SWITCH |
| E1 | POWER LIGHT |
| E2 | CYCLE LIGHT |
| FS | FILL SOLENOID |
| HP | HIGH LEVEL PROBE |
| TS | WASH THERMOSTAT SWITCH |
| TM | TIMER MOTOR |
| WL | WATER LEVEL CONTROL |
| WCT | WASH CYCLE TIMER |
| CF | CONSTANT VOLTAGE CONNECTION |
| SCF | SWITCHED VOLTAGE CONNECTION |
| RF | RINSE AID CONNECTION |
| DF | DETERGENT CONNECTION |

The schematic diagram illustrates the proposed 1T1R1C1 architecture. It features a central array of memory cells (R1, R2, R3) and peripheral control blocks. The top row includes a word line (WL) and a memory cell (R1). The middle row includes a memory cell (R3) and a memory cell (R2). The bottom row includes a memory cell (R2) and a memory cell (R3). The right side of the diagram shows a vertical stack of control blocks: TM, C1, C2, C3, C4, and VCT. The bottom left corner shows a row of control blocks: N, L1, and GND. The bottom right corner shows a row of control blocks: CF, SF, RF, and DF.

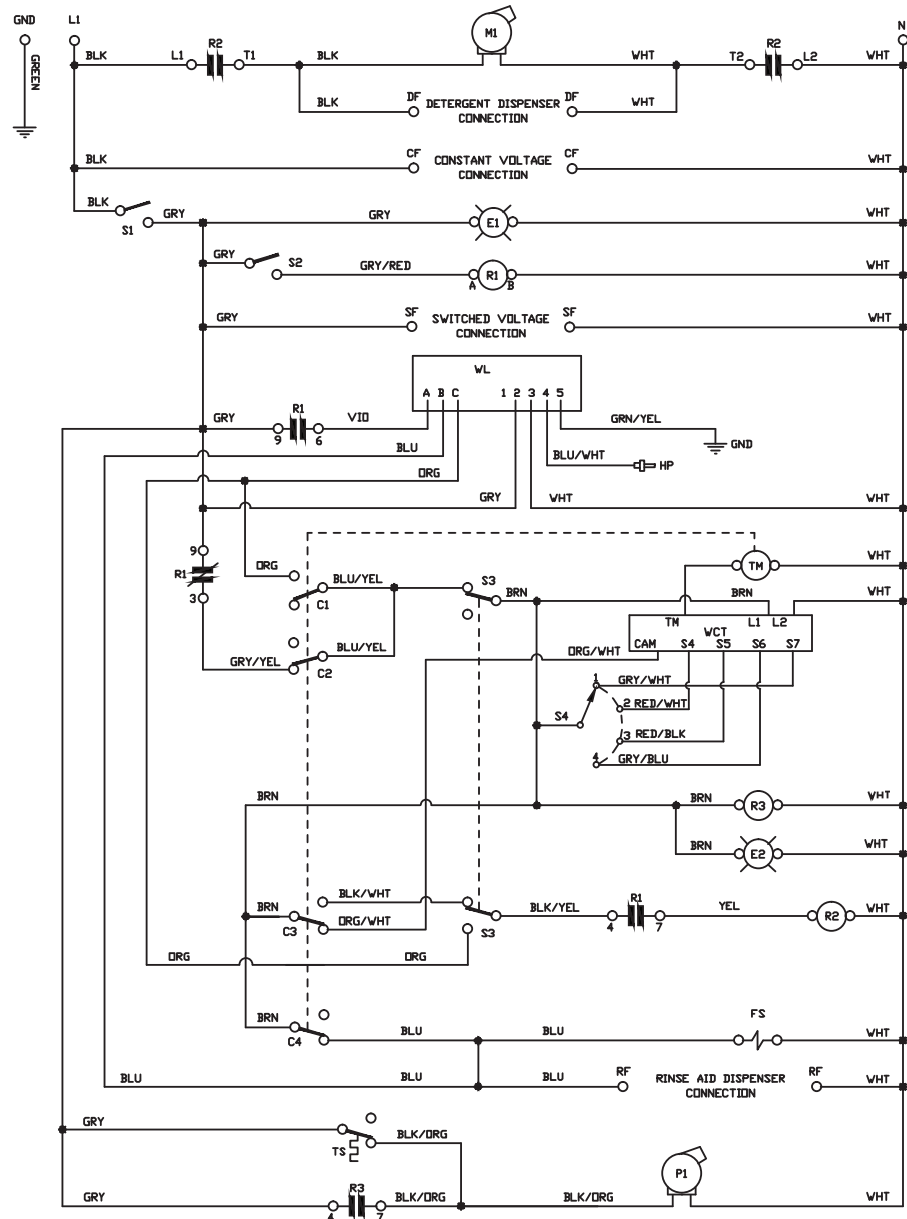

Tempstar/HH GPX Series Technical Manual 07610-002-57-32
Issued: 07-24-2006 Revised: N/A

SECTION 7: ELECTRICAL SCHEMATICS

TEMPSTAR HH GPX 208-230 VOLT - 50/60 HERTZ - SINGLE PHASE



TEMPSTAR HIGHER HOOD GPX ELECTRICAL DIAGRAM

200-240 VOLT 50/60 HERTZ 1/3 PHASE

LEGEND

| | |
|----------|-----------------------------|
| L1 L2 L3 | POWER DISTRIBUTION BLOCK |
| GND | CHASSIS GROUND |
| M1 | WASH PUMP MOTOR |
| P1 | CIRCULATOR PUMP |
| R1 | CONTROL RELAY |
| R2 | WASH MOTOR CONTACTOR |
| R3 | WASH TEMPERATURE RELAY |
| S1 | POWER SWITCH |
| S2 | DOOR SWITCH |
| S3 | NORMAL/DELIME SWITCH |
| S4 | CYCLE SELECTOR |
| C1 | CYCLE SWITCH |
| C2 | AUTO START RESET SWITCH |
| C3 | WASH CYCLE SWITCH |
| C4 | RINSE/FILL SWITCH |
| E1 | POWER LIGHT |
| E2 | CYCLE LIGHT |
| FS | FILL SOLENOID |
| HP | HIGH LEVEL PROBE |
| TS | WASH THERMOSTAT SWITCH |
| TM | TIMER MOTOR |
| WL | WATER LEVEL CONTROL |
| WCT | WASH CYCLE TIMER |
| CF | CONSTANT VOLTAGE CONNECTION |
| SF | SWITCHED VOLTAGE CONNECTION |
| RF | RINSE AID CONNECTION |
| DF | DETERGENT CONNECTION |

COMPONENT LAYOUT

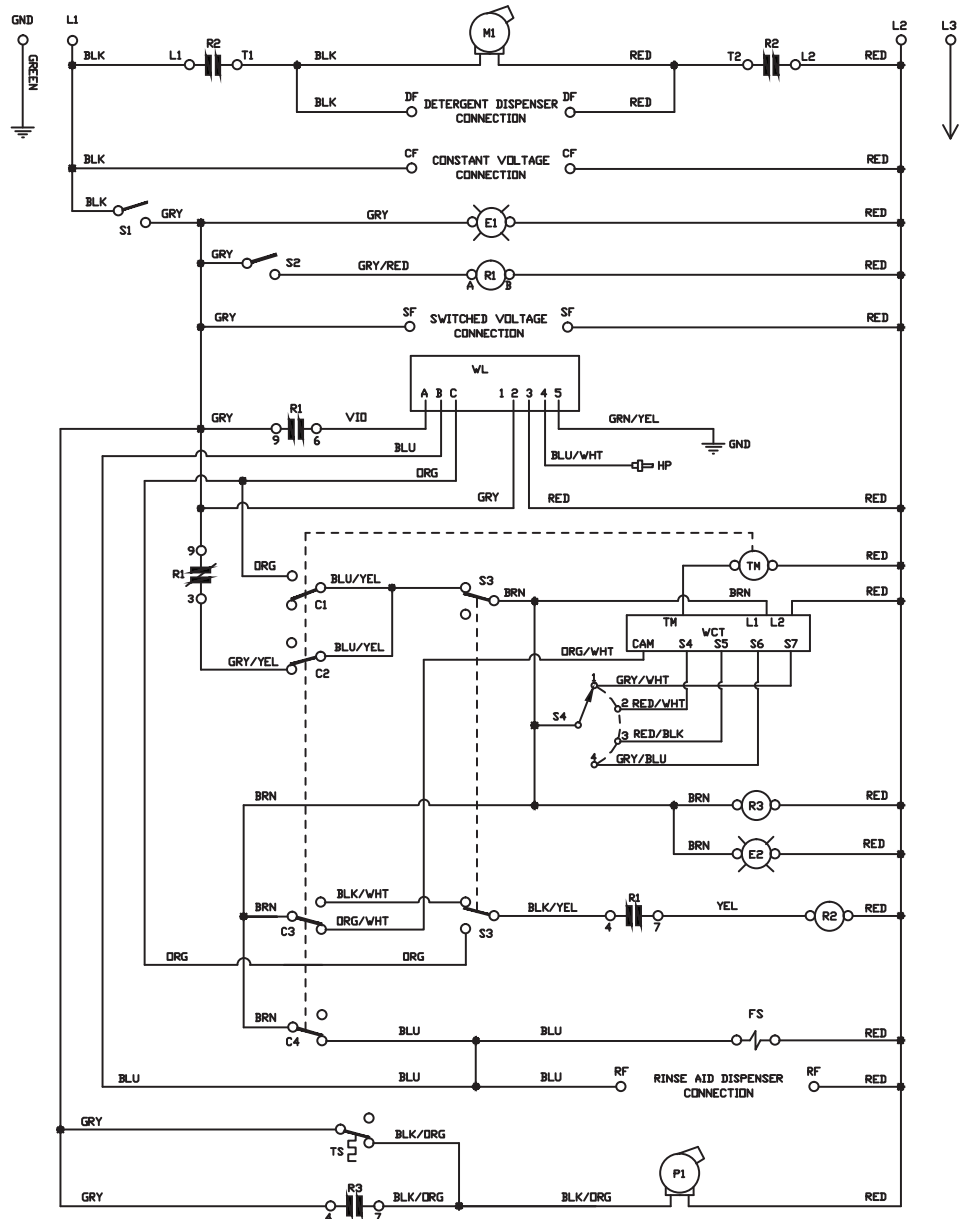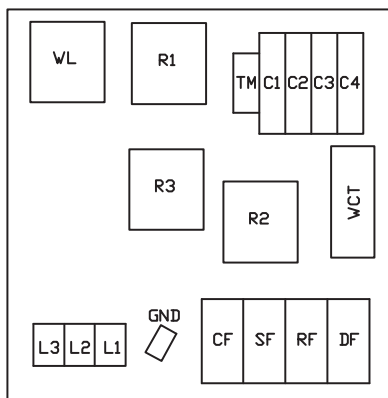

09905-002-57-60B


SECTION 7: ELECTRICAL SCHEMATICS

EXHAUST FAN CONTROL OPTION/SAFETY DOOR INTERLOCK (SDI) OPTION

TEMPSTAR EXHAUST FAN HOOKUP


LEGEND

T TIMER
TB TERMINAL BOARD

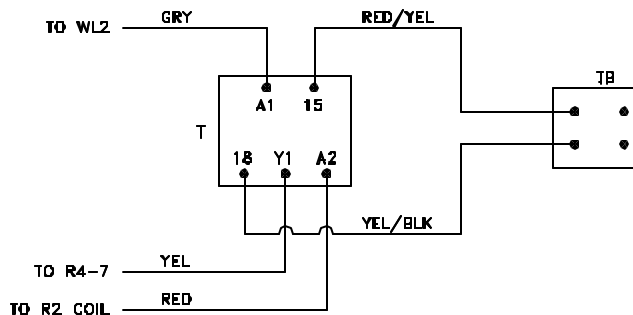

0905-002-54-41b

TEMPSTAR SDI OPTION

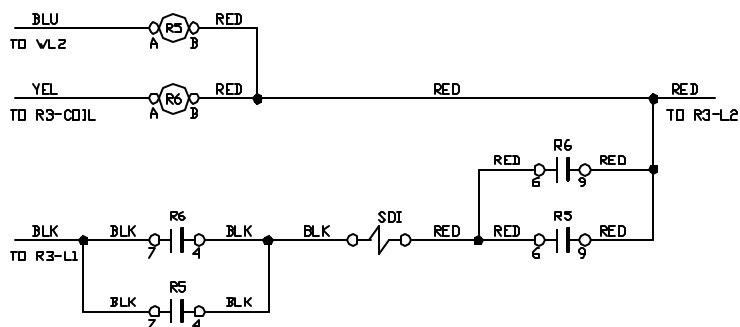

LEGEND

R5 RINSE RELAY
R6 WASH RELAY
SDI SAFETY DOOR INTERLOCK SOLENOID

09905-002-35-85a

