

## I/O MODULE KIT - 06401-005-05-85\*



**WARNING:** This part should be installed only by qualified service personnel to reduce the risk of electric shock, serious injury, or fire. A plumbing permit and the services of a licensed plumber and electrician might be required in some areas.

Turn off the power supply and place the dishwasher disconnect (if applicable) in the off position. Lockout/tagout to prevent the power supply from being turned back on inadvertently.

**CAUTION:** Failure to install this part within the guidelines might adversely affect safety, performance, component life, and warranty coverage.

### TOOLS REQUIRED

- 7/16" Wrench
- Phillips Screwdriver

*\*Machines with serial numbers before 22E406186 have a different module. Click here to open earlier instructions.*


### PARTS INCLUDED

QTY	DESCRIPTION	PART NUMBER
1	I/O Module	05945-004-44-63*
1	Instructions, I/O Module Replacement	07610-005-05-86

### I/O MODULE REPLACEMENT

1. Remove front panel using 7/16" wrench and set aside.

*7/16" wrench used in this step.*

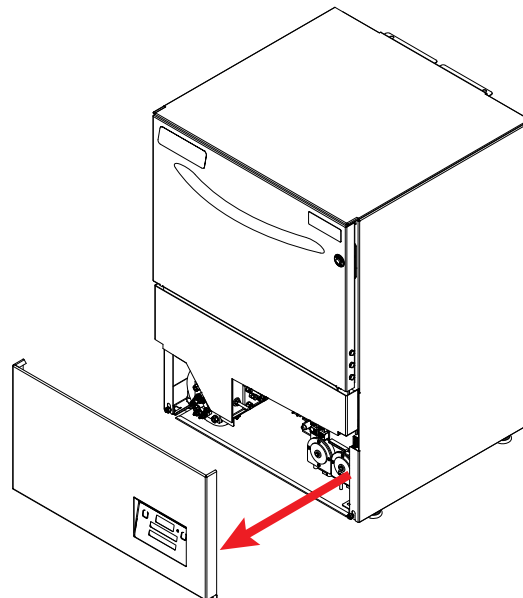

## I/O MODULE REPLACEMENT

Location of I/O module on control panel varies by model.




**CAUTION!** Pictures showing wires are examples. Take note/picture of actual wires on machine for reference.

Phillips screwdriver used in this step.

I/O module from kit used in this step.

7/16" wrench used in this step.


2. Locate I/O module and take note/picture of how wires are connected.

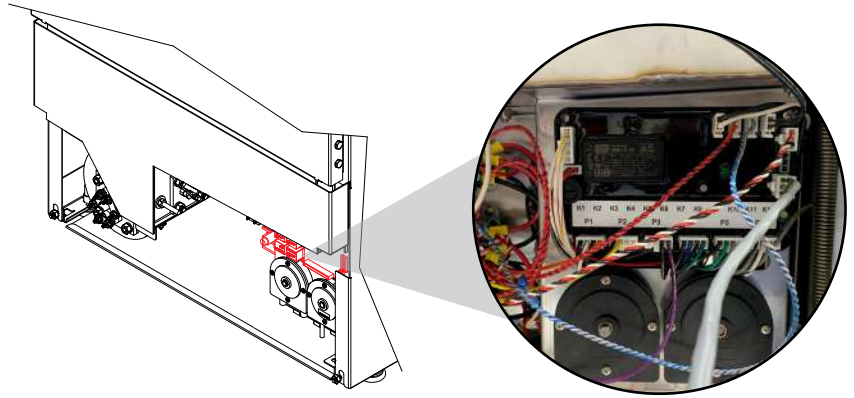


3. Remove wires.



4. Remove old I/O module using phillips screwdriver.

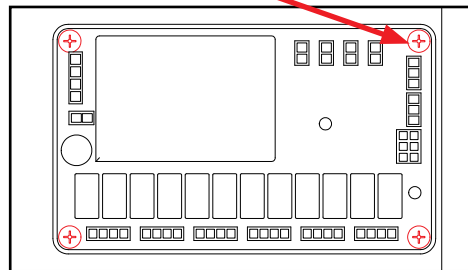


5. Place new I/O module from kit in the same place, oriented the same way, and secure using phillips screwdriver and hardware removed in last step.
6. Connect wires to new I/O module (reference note/picture taken in Step 2).
7. Replace front panel using 7/16" wrench.

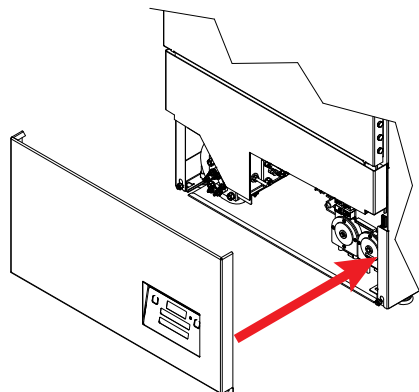

### I/O MODULE REPLACEMENT


8. Restore power to machine.
9. Turn machine on by pressing Power Button.

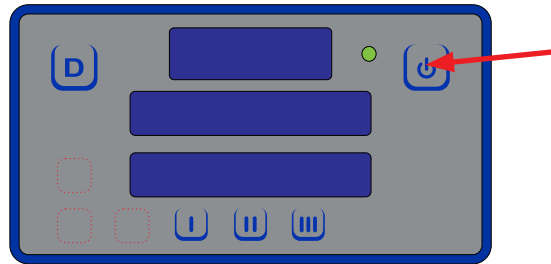

*To access programming, the machine must be on and not in cycle.*

*The programming buttons (Up-arrow, Down-arrow, and Select) are hidden on the display and are shown here as red outlines.*

10. Press and hold I and III Buttons until "Program" starts flashing (2–3 seconds).

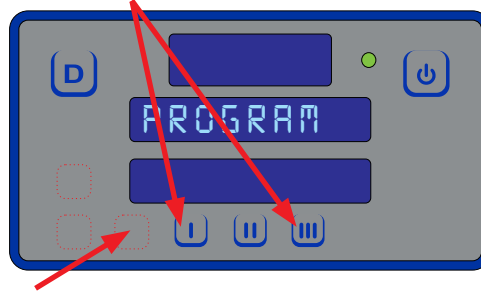


11. Press Select Button.
12. Use up-arrow or down-arrow button to change program number to correct number in table, based on model.



**CAUTION!** Machine will not operate properly with wrong program number!

Pgrm #	Model
6	DishStar HT-E with Serial Number after 23D415452
7	Delta HT-E-SEER & DishStar HT-E-SEER with Serial Number after 23D415452
8	DishStar HT-E with Serial Number before 23D415452
9	Delta HT-E-SEER & DishStar HT-E-SEER with Serial Number before 23D415452

13. Press Select Button ("Program" will flash).
14. Press Delime Button to exit.

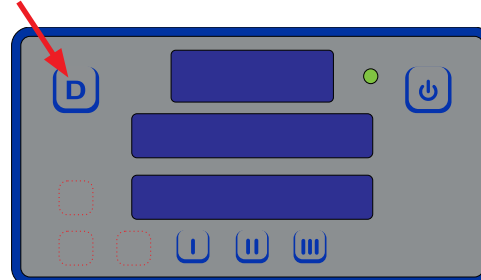

15. Machine is now ready for operation.